


SLO – krmiljenje frekvenčnega pretvornika z zunanjim potenciometrom in stikalom: Emerson Commander SK

Osnovna vezalna shema in pogoji delovanja

Nastavitve parametrov

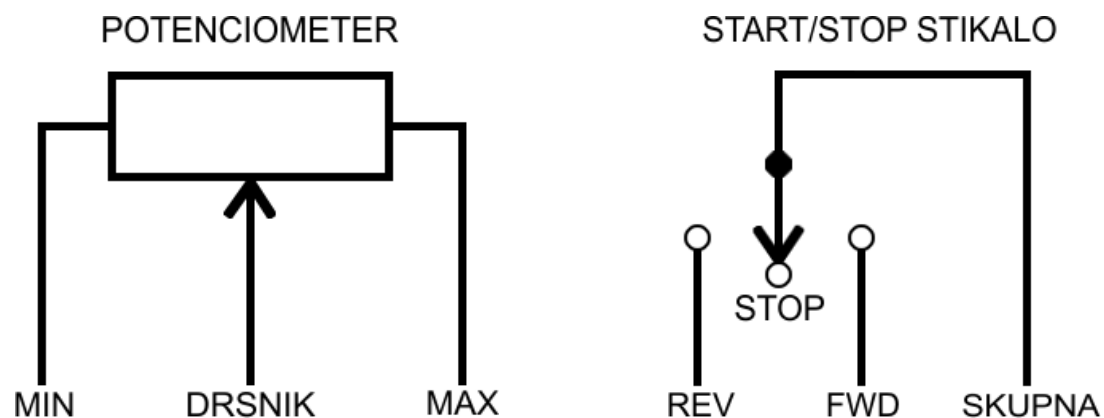

T1 T4 T3 B6 B5 B2

Krmilne sponke na frekvenčnem pretvorniku

- vrednost potenciometra (linearna karakteristika, najmanj 0.5 W): 2 k Ω do 10 k Ω
- med sponki B2 in B4 je potrebno vstaviti prevezavo

Po ponastavitvi parametrov na tovarniške vrednosti (P29 -> EUR) je potrebno spremeniti naslednje parametre:

- P05 -> AI.AU
- MIN izhodna frekvenca: P01
- MAX izhodna frekvenca: P02
- čas pospeševanja: P03
- čas pojemanja: P04



SIGI elektronika, Žiga Divjak s.p.
Cesta 7/5
1310 Ribnica


www.sigi-elect.si
sigi@sigi-elect.si
sigi.elect@gmail.com

051 344 018 (Matija)
070 638 328 (Žiga)

ENG – variable frequency drive control with external potentiometer and switch (2-wire control): **Emerson Commander SK**

Basic wiring diagram and operating conditions

Parameter settings

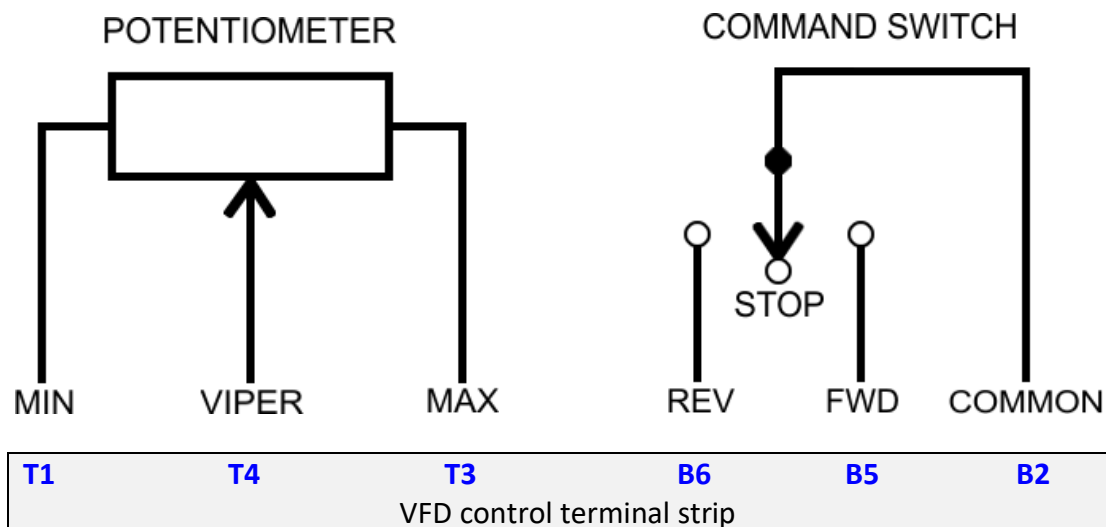

- potentiometer value (linear, at least 0.5 W): 2 k Ω to 10 k Ω
- control terminals B2 and B4 must be bridged

If all VFD parameters are initialized to factory default values (P29 -> EUR), you only need to adjust the following parameters:

- P05 -> AI.AU
- MIN out frequency: P01
- MAX out frequency: P02
- acceleration time: P03
- deceleration time: P04



SIGI elektronika, Žiga Divjak s.p.
Cesta 7/5
1310 Ribnica
Slovenia

www.sigi-elect.si
sigi@sigi-elect.si
sigi.elect@gmail.com

00386 51 344 018 (Matija)
00386 70 638 328 (Žiga)