


SLO – krmiljenje frekvenčnega pretvornika z zunanjim potenciometrom in stikalom: **Vacon 20**

Osnovna vezalna shema in pogoji delovanja

Nastavitve parametrov

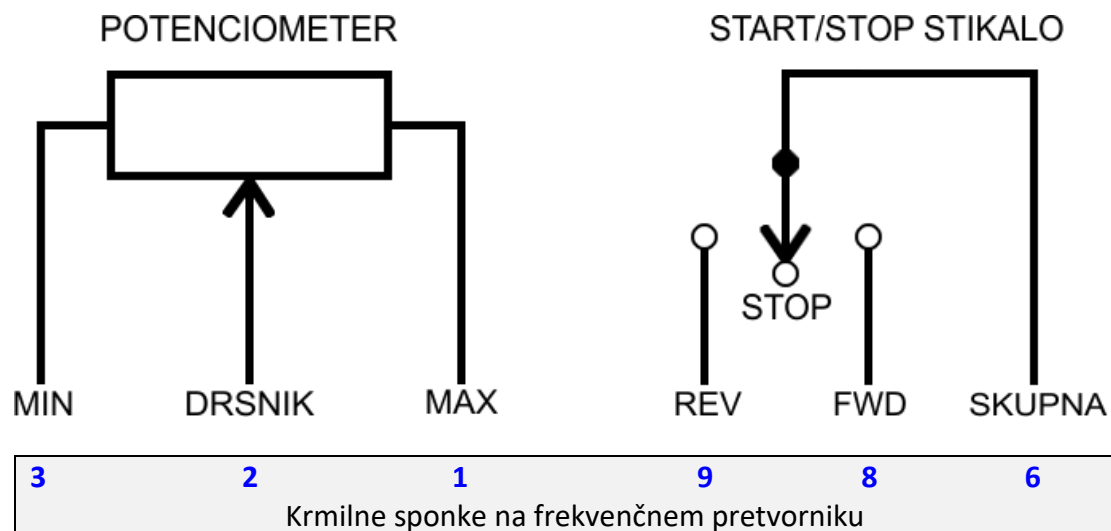

Po ponastavitvi parametrov na tovarniške vrednosti (P4.2 v SYS sklopu parametrov -> 1) je potrebno spremeniti naslednje parametre:

- definicija reference: P3.3 -> 4
- definicija START/STOP: P2.1 -> 0, P2.4 -> 0 in P2.5 -> 0
- MIN izhodna frekvenca: P3.1
- MAX izhodna frekvenca: P3.2
- čas pospeševanja: P4.2
- čas pojemanja: P4.3

- vrednost potenciometra (linearna karakteristika, najmanj 0.5 W): 1 k Ω do 10 k Ω



SIGI elektronika, Žiga Divjak s.p.
Cesta 7/5
1310 Ribnica


www.sigi-elect.si
sigi@sigi-elect.si
sigi.elect@gmail.com

051 344 018 (Matija)
070 638 328 (Žiga)

ENG – variable frequency drive control with external potentiometer and switch (2-wire control): **Vacon 20**

Basic wiring diagram and operating conditions

Parameter settings

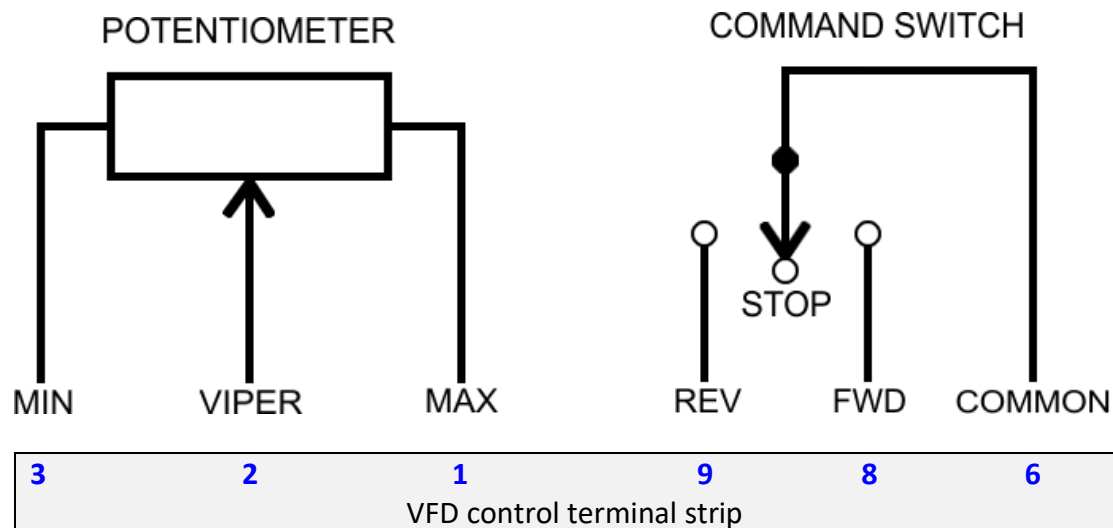

If all VFD parameters are initialized to factory default values (P4.2 in SYS parameters level -> 1), you only need to adjust the following parameters:

- frequency reference: P3.3 -> 4
- START/STOP command: P2.1 -> 0, P2.4 -> 0 and P2.5 -> 0
- MIN out frequency: P3.1
- MAX out frequency: P3.2
- acceleration time: P4.2
- deceleration time: P4.3

- potentiometer value (linear, at least 0.5 W): 1 k Ω to 10 k Ω



SIGI elektronika, Žiga Divjak s.p.
Cesta 7/5
1310 Ribnica
Slovenia

www.sigi-elect.si
sigi@sigi-elect.si
sigi.elect@gmail.com

00386 51 344 018 (Matija)
00386 70 638 328 (Žiga)