



FREQUENCY

Serie L3000

MANUAL

MANUAL

These two manuals provide you with the general information how to use L3000 frequency converters and how to apply, if needed, special applications.

L3000 Installationmanual provides you with the information necessary to install, start-up and operate the L3000 frequency converters. It is recommended that this manual is read thoroughly before powering up the frequency converter for the first time.

If any problem occurs, please contact your local distributors. WATT DRIVE Antriebstechnik GmbH is not responsible of the use of the frequency converters against the instructions.

WATT DRIVE WORLDWIDE

WATT DRIVE Antriebstechnik GmbH
Tel.: +43/2633/404-0 Fax: +43/2633/404-220
Internet: <http://www.wattdrive.com>

A-2753 Markt Piesting
Wöllersdorferstraße 68
e-mail: watt@wattdrive.com

WATT DRIVE Nord GmbH
Tel.: +49/2932/9681-0 Fax: +49/2932/9681-81

D-59759 Arnsberg
e-mail: watt-arnsberg@t-online.de

WATT DRIVE Süd GmbH
Tel.: +49/7471/9685-0 Fax: +49/7471/9865-29

D-72379 Hechingen
e-mail: watt-sued@t-online.de

WATT DRIVE Nord GmbH **D-51429 Bergisch Gladbach**
Vertriebs- und Servicecenter Köln
Tel.: +49/2204/84-2800 Fax: +49/2204/84-2819

e-mail: watt-koeln@t-online.de

WATT DRIVE
Vertriebs- und Servicecenter Max LAMB KG
Tel.: +49/931/2794-0 Fax: +49/931/27455

D-97044 Würzburg
e-mail: ant@lamb.de

WATT EURO DRIVE (Far East) PTE LT
Tel.: +65/86 23 220 Fax: +65/86 23 33

SGP-629082 Singapore
e-mail: watteuro@pacific.net.sg

WATT EURO DRIVE (Malaysia) SDN BH
Tel: +603/736 89 81 Fax: +603/736 89 76

40400 Selangor, Malaysia
e-mail: cmfoo98@tm.net.my

Version:	BA-FBE_UR.009.R001.10_00
File:	H:L3000 Produkthanleitung_deutsch.doc
Datum:	13. Oktober 2000 / CL

C O N T E N T S

1.1 INSPECTION UPON UNPACKING	6
1.1.1 <i>Inspection of the unit</i>	6
1.1.2 <i>Operation manual</i>	6
1.2 QUESTION AND WARRANTY OF THE UNIT	7
1.2.1 <i>Request upon asking</i>	7
1.2.2 <i>Warranty for the unit</i>	7
1.3 APPEARANCE	8
1.3.1 <i>Appearance and Names of Parts</i>	8
2.1 INSTALLATION	9
2.1.1 <i>Installation</i>	10
2.1.2 <i>Blind cover of wiring parts</i>	12
2.2 WIRING	12
2.2.1 <i>Terminal Connection Diagram</i>	13
2.2.2 <i>Main circuit wiring</i>	15
2.2.3 <i>Terminal Connection Diagram</i>	20
3.1 OPERATION	22
3.2 TEST RUN	24
4.1 ABOUT DIGITAL OPERATOR (OPE-SR)	27
4.2 CODE LIST	31
4.3 EXPLANATION OF FUNCTION	38
4.3.1 <i>Monitor mode</i>	38
4.3.2 <i>Function mode</i>	42
SETTING OF THE OUTPUT FREQUENCY	42
SELECTION WITH LIMITS OF OPERATION DIRECTION	42
SELECTION ON STOP	44
SELECTION OF STOP KEY	45
CARRIER FREQUENCY	48
TWO-STAGE ACCELERATION AND DECELERATION FUNCTION	66
OPEN PHASE PROTECTION FUNCTION SELECTION	69
START FREQUENCY	74
INTELLIGENT INPUT TERMINAL SETTING	76
FM TERMINAL	94

COMMUNICATION FUNCTION.....	99
4.4 PROTECTION FUNCTION LIST	115
4.4.1 Protection function.....	115
4.4.2 Trip monitor display.....	116
4.4.3 Warning Monitor display.....	117
5.1 PRECAUTIONS FOR MAINTENANCE/INSPECTION	118
5.1.1 Daily inspection	118
CHECK THE INPUT VOLTAGE TO THE INVERTER BY USING A METER DURING RUNNING	118
5.1.2 Cleaning	118
5.1.3 Regular inspection.....	118
5.2 DAILY INSPECTION AND REGULAR INSPECTION	119
5.3 MEGGER TEST	121
5.4 WITHSTAND VOLTAGE TEST	121
5.5 THE METHOD TO CHECK INVERTER, CONVERTER PART	122
5.6 CAPACITOR LIFE CURVE	124
6.1 STANDARD SPECIFICATION LIST	125
6.2 DIMENSION	127


1.1 Inspection upon Unpacking

1.1.1 Inspection of the unit

Open the package and pick out the inverter, please check the following item.

If you discover any unknown parts or the unit is in bad condition, please contact your supplier or the local WATT Distributor.

- (1) Make sure that there was no damage (injury, falling or dents in the body) during transportation of the unit.
- (2) After unpacking the unit, make sure that the package contains one operation manual for the Inverter.
- (3) Make sure that the product is the one you ordered by checking the specification label.

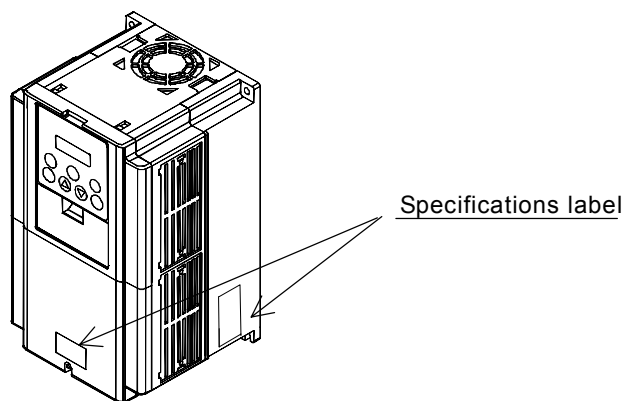

Picture 1-1 Position of specification

Inverter model	→	WATDrive Antriebstechnik GmbH
Maximum applicable motor	→	Model : UHGL2000-004NFE
Input ratings	→	HP/kW : 1/2 / 0.4
Output ratings	→	Input/Eingang: 50,60Hz 200-240 V 1Ph 5,8 A
Production number	→	50,60Hz 200-240 V 3Ph 3,4 A
		Output/Ausgang: 1-360Hz 200-240 V 3Ph 2,6 A
		MFG No. 78B T1128270005 Date: 9708
		Tel.: +43/2633/404-0; e-mail: watt@wattdrive.com NE16452-2

Picture 1-2 Contents of specifications label

1.1.2 Operation manual

This operation manual is the manual for the WATT Inverter L3000 Series.

Before operation of the Inverter, read the manual carefully. After Reading this manual, keep it to hand for future reference.

When using optional units for this inverter; please refer to the operation manuals packed with the optional units.

This operation manual was correct at the time of going to press.

1.2 Question and Warranty of the Unit

1.2.1 Request upon asking

If you have any questions regarding damage to the unit, unknown parts or for general enquiries please contact your supplier or the local WATT Distributor with the following information.

- (1) Inverter Model
- (2) Production Number (MFG, NO)
- (3) Date of Purchase
- (4) Reason for Calling
 - Damaged part and its condition etc.
 - Unknown parts and their contents etc.

1.2.2 Warranty for the unit

The warranty period of the unit is one year after the purchase date.

However within the warranty period, the warranty will be void if the fault is due to;

- (1) Incorrect use as directed in this manual, or attempted repair by unauthorized personnel
- (2) Any damage sustained, other than from transportation (Which should be reported immediately)
- (3) Using the unit beyond the limits of the specification.
- (4) Act of God (Natural Disasters: Earthquakes, Lightning, etc)

The warranty is for the inverter only, any damage caused to third party equipment by malfunction of the inverter is not covered by the warranty.

Any examination or repair after the warranty period (one year) is not covered. And within the warranty period any repair and examination which results in information showing the fault was caused by any of the items mentioned above, the repair and examination cost are not covered.


If you have any questions regarding the warranty please contact either your supplier or the local WATT Distributor.

Please refer to the back cover for a list of the local WATT Distributors.


1.3 Appearance

1.3.1 Appearance and Names of Parts

Appearance from the front

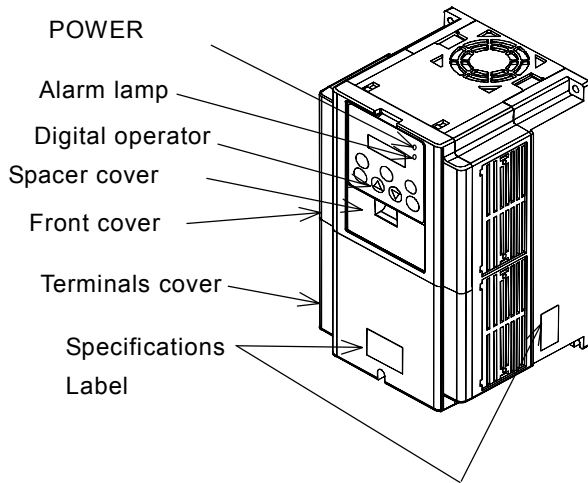

Front cover removed

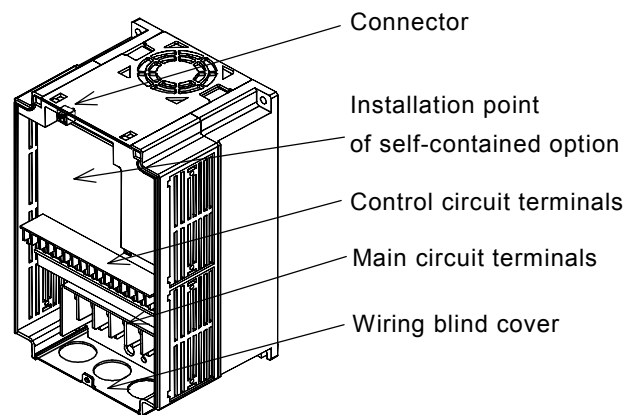

2.1 Installation



Do not **remove the** rubber bush. **Due to the possibility that a wire may be** damaged, shorted **or may have** a ground fault with the edge of **the** wiring cover.



Install using non-combustible materials (metal etc.)

It is **a fire risk.**

Do not **install combustible materials** nearby.

It is **a fire risk.**

Do not carry unit by top cover, always carry by supporting base of unit.

There is a risk of falling and injury.

Do not **allow** substance of cutting waste, sputtering of welding, waste of iron, wire and dust etc. **to come into contact with the unit.**

It is **a fire risk.**

Make sure the surface the unit is installed onto can support the weight of the unit comfortably.

There is a risk of falling and injury.

Do not install or operate the unit if the unit appears damaged.

There is a risk of injury.

Avoid locations of high temperatures, **high** humidity, dew condensation, dust, corrosive gases, explosive gases,

combustible gases, coolant mist and sea damage etc. **Install indoors, to avoid direct sunlight and the unit should be well ventilated.**

2.1.1 Installation

1. Transportation

This inverter has plastic parts. So handle with care.

Do not over tighten the wall mounting fixings as the mountings may crack, causing is a risk of falling.

Do not install or operate the inverter if there appears to be damage or parts missing.


2. Surface for Mounting of Inverter

The temperature of the Inverter heatsink can become very high (the highest being about 150°C). The surface, which you are mounting the Inverter onto, must be made of a non-flammable material (i.e steel) due

to the possible risk of fire. Attention should also be made to the air gap surrounding the Inverter.

Especially

when there is a heat source such as a braking resistor or a reactor.

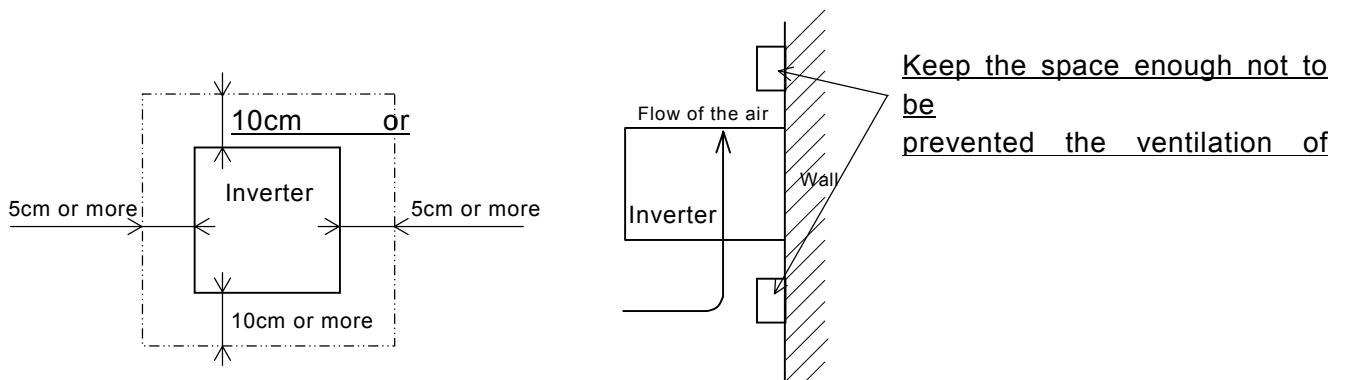

3. Operating Environment - Ambient Temperature

The ambient temperature surrounding the Inverter should not exceed the allowable temperature range (usually

-10 to 50°C).

The temperature should be measured in the air gap surrounding the Inverter, shown in the diagram above. If

the temperature exceeds the allowable temperature, the component life will become shortened especially in

the case of the Capacitors.

4. Operating Environment - Humidity

The humidity surrounding the Inverter should be within the limit of the allowable percentage range (usually 5%

to 90%). Under no circumstances should the Inverter be in an environment where there is the possibility of

moisture entering the Inverter.


Also avoid having the Inverter mounted in a place that is exposed to the direct sunlight.

5. Operating Environment - Air

Install the Inverter avoiding any place that has dust, corrosive gas, explosive gas, combustible gas, mist of coolant and sea damage.


6. Mounting Position

Mount the Inverter in a vertical position using screws or bolts. The surface you mount onto should also be free from vibration and can easily hold the weight of the Inverter.

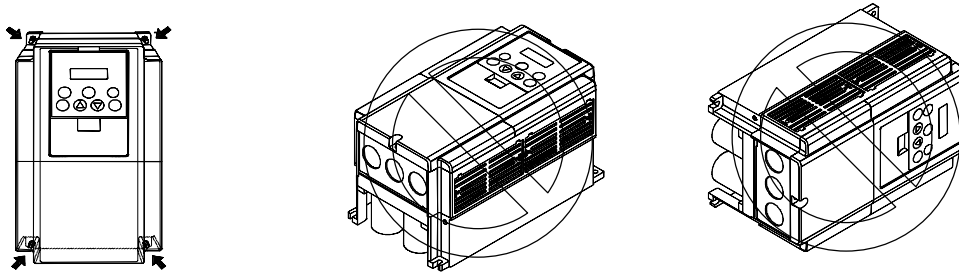

7. Ventilation within an Enclosure

If you are installing one or more Inverters in an enclosure a ventilation fan should be installed. Below is a guide to the positioning of the fan to take the airflow into consideration. The positioning of Inverter, cooling fans and air intake is very important. If these positions are wrong, airflow around the Inverter decreases and the temperature surrounding the Inverter will rise. So please make sure that the temperature around is within the limit of the allowable range.

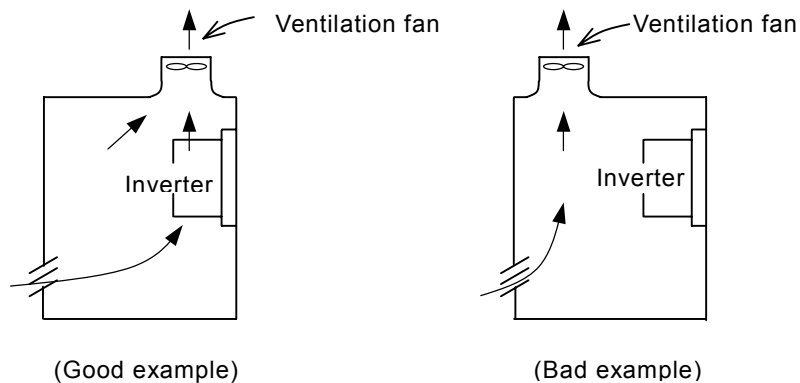

8. External cooling of Inverter

It is possible to install the inverter so that the heatsink is out of the back of the enclosure. This method has two advantages, cooling of the inverter is greatly increased and the size of the enclosure will be smaller.

To install it with the heatsink out of the enclosure, a metal fitting option is required to ensure heat transfer.

Do not install in a place where water, oil mist, flour and dust etc can come in contact with the inverter as there are cooling fans fitted to the heatsink.


9. Approximate loss for each capacity

Inverter capacity (kW)	11	15	18.5	22	30	37	45	55
70% of rated output (W)	435	575	698	820	1100	1345	1625	1975
100% of rated output (W)	600	800	975	1150	1550	1900	2300	2800
(%)	94.5	94.6	94.7	94.8	94.8	94.9	94.9	94.9

2.1.2 Blind cover of wiring parts


(1) Cable entry through Rubber Bushes

The wiring should be done after making a cut in the rubber bushes with nippers or cutters.

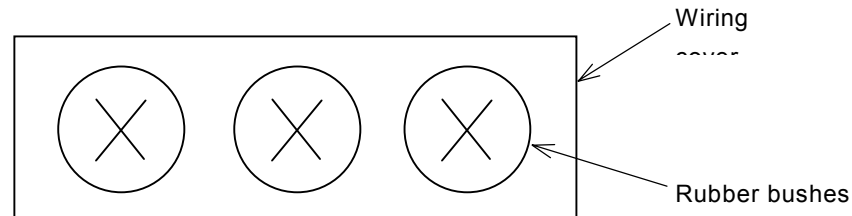

(2) Cable entry through Conduit

After taking out the rubber bushes, connect the conduit.

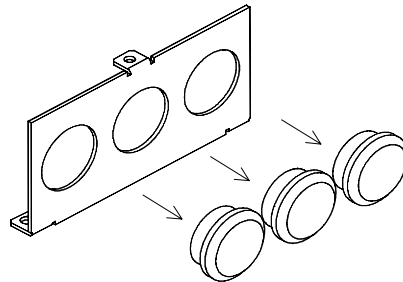

Note; Except for when connecting conduit, Do not take out the rubber bushes. It is possible that the wiring insulation is broken and a possible earth fault is caused.

2.2 Wiring

! DANGER

Be sure to ground the unit. Otherwise, there is a danger of electric shock and/or fire.

Otherwise, there is a danger of electric shock and/or **injury**.

Only qualified personnel shall carry out wiring work.

Otherwise, there is a danger of electric shock and/or fire.


Implement wiring **after** checking that the power supply is off.

Otherwise, there is a danger of electric shock and/or **injury**.

Be sure to implement wiring **after** installing the body.

Otherwise, there is a danger of electric shock and/or **injury**.

2.2.1 Terminal Connection Diagram

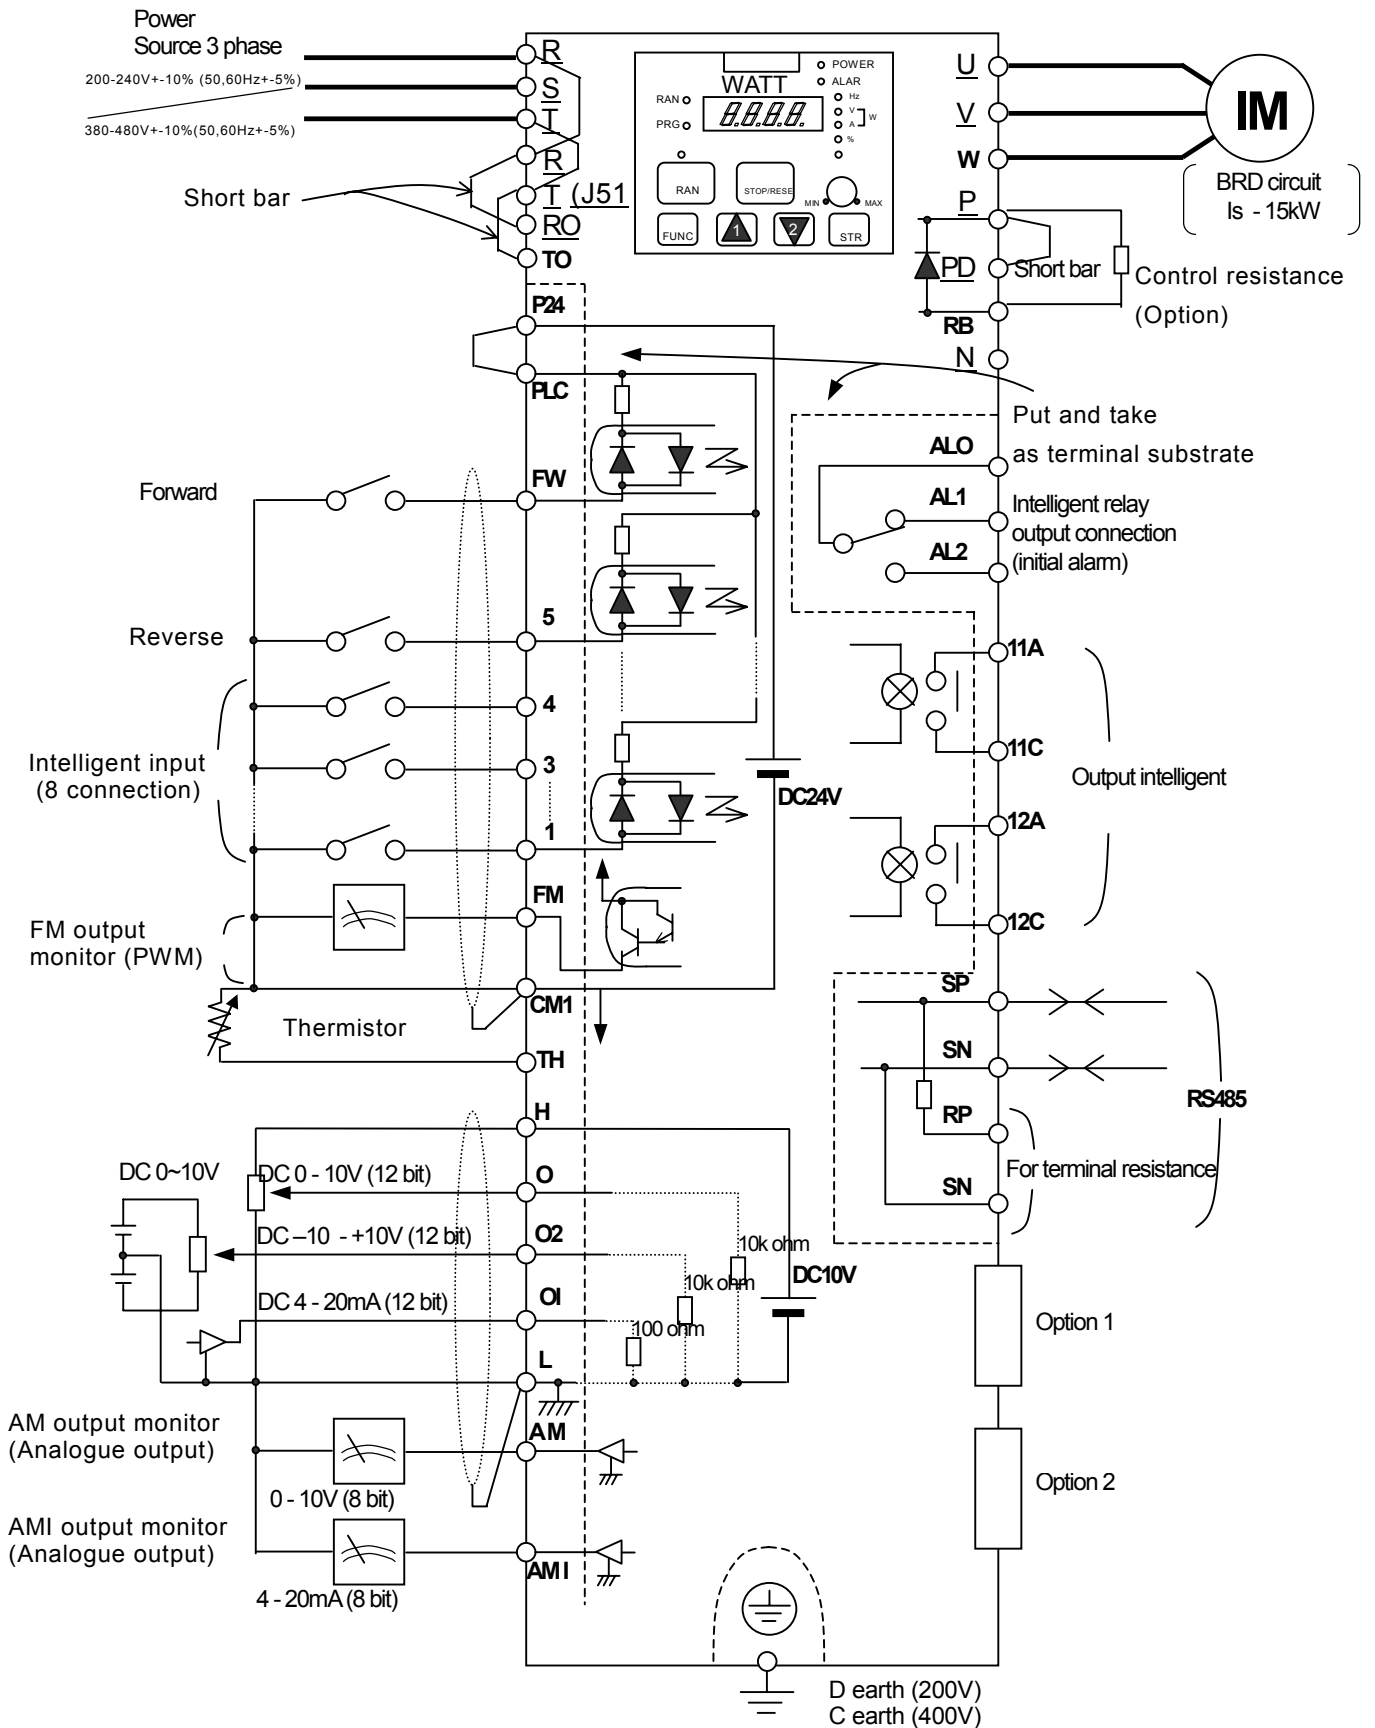

(1) Explanation of main circuit terminals

Symbol	Terminal Name	Explanation of contents
R, S, T (L1,L2,L3)	Main power	Connect alternating power supply. When using regenerative converter and RG series, don't connect.
U, V, W (T1,T2,T3)	Inverter output	Connect three-phase motor.
PD, P (+1,+)	D.C.reactior	Remove the short bar between PD and P, connect optional Power factor reactor (DCL-XX).
P, RB (+,RB)	External braking resistor	Connect optional External braking resistor. (Installed on 11Kw and below)
P, N (+,-)	External braking unit	Connect optional Braking unit (BRD-XX).
G Ⓧ	Inverter earth terminals	It is earth terminals of inverter case.

(2) Explanation of control circuit terminal

		Symbol	Terminal Name	Explanation of contents	
Analogue	Power Source	L	Analogue power common	It is common terminal of frequency command signal (0, 02, 01) and analogue output, AM, AMI. Don't earth.	
		H	Frequency power	It is the DC+10V power for terminals. Allowable load current 20mA	
	Frequency setting	Analogue input	O	Frequency command power terminal (voltage)	When inputting DCO - 10V, it is maximum frequency on 10V. When maximum frequency is expected to be on being less than 10V, set with A014. Input Impedance 10k ohm Allowable maximum voltage 12V
			O2	Frequency command support (voltage)	When inputting DCO +-10V, this signal is added to frequency command of O or OI terminal. Input Impedance 10k ohm Allowable maximum load current 20mA
	Pulse	Analogue output	O1	Frequency command Terminal (current)	When inputting DC4 - 20mA, 20mA is maximum frequency. When only At terminal is ON, this input signal is effective. Input Impedance 100 ohm Allowable maximum current 24mA
			AM	Digital monitor (voltage)	Output one selected from monitor item, output frequency, output current, torque, output voltage, input current, electric thermal rate.
	AMI	Analogue monitor (current)	Allowable maximum current 2mA Allowable output less than Impedance 250 ohm		
	Digital (connection)	Monitor	FM	Digital monitor (voltage)	Output the output frequency with digital besides above monitor. Allowable maximum current 1mA Maximum frequency 3.6khz
			P24	Interface power	It is DC24W power for connection input signal. When selecting source logic, it's for connection input common. Allowable maximum output current 100mA
		Input Setting	Power Source	CM1	Interface power common
PLC				Intelligent input common	Change sink type and source type by short bar on control terminals. P24-PLC : Sink type CM1-PLC : Source type
Connection		Operation/function /selection etc.	FW	Forward command	About FW signal, ON is Forward and OFF is stop command.
			1 2 3 4 5	Input intelligent	Select 8 functions from 33 functions, and divide between 1 terminal and 8 terminals. Allowable maximum voltage 27V
			11A		
			11C		
			12A		
Analogue		Sensor	12C		
	AL1				
	AL2				
		AL0			

		TH	Thermistor input terminal		
--	--	----	---------------------------	--	--

2.2.2 Main circuit wiring

(1) Warning on wiring

1. Main power terminals(R, S, T)

Connect the main power terminals (R, S, and T) to the power supply through a electromagnetic contactor or an earth-leakage breaker.

We recommend connecting the electromagnetic contactor to the main power terminals. Because when the protective function of inverter operates, it isolates the power supply and prevent the spread of damages and accidents.

This unit is for the three-phase power supply. It isn't for the single-phase power supply. If you require a single phase power supply unit, please contact us.

2. Inverter output terminals (U, V, and W)

Wire with thicker wire than the applicable wire to control the voltage drop.

Particularly when outputting low frequencies, the torque of the motor will reduce by the voltage drop of the wire.

Do not install power factor correction capacitors or a surge absorber to the output.

The inverter will trip or sustain damage to the capacitors or the surge absorber.

In the case of the cable length being more than 20 meters, it is possible that a surge voltage will be generated and damage to the motor is caused by the floating capacity or the inductance in the wire (400V especially).

An EMC Mains Filter is available, please contact us.

In the case of two or more motors, install a thermal relay to each motor.

3. Direct current reactor (DCL) connection terminals (PD, P)

These are the terminals to connect the current reactor DCL (Option) to help improve the power factor.

The short bar is connected to the terminals when shipped from the factory, if you are to connect a DCL you will

need to disconnect the short bar first.

When you don't use a DCL, don't disconnect the short bar.

4. External braking resistor connection terminals (P, RB)

The regenerative braking circuit (BRD) is built-in as standard up to the 11kw Inverter.

When braking is required, install an external-braking resistor to these terminals.

The cable length should be less than 5 meters, and twist the two connecting wires to reduce inductance.

Don't connect any other device other than the external braking resistor to these terminals.

When installing an external braking resistor make sure that the resistance is correctly rated to limit the current

drawn through the BRD.

5. Regenerative braking unit connection terminals

The Inverters rated more than 15kw don't contain a BRD circuit. If regenerative braking is required an external BRD circuit (Option) is required along with the resistor (Option).

Connect external regenerative braking unit terminals (P, N) to terminals (P,N) on the inverter. The braking resistor is then wired into the External Braking unit and not directly to the Inverter.

The cable length should be less than 5 meters, and twist the two connecting wires to reduce inductance.

6. Earth (G \oplus)

Make sure that you securely ground the Inverter and motor for prevention of electric shock.

The inverter and motor must be connected to an appropriate safety earth and follow the local standard.

Failure

to do so constitutes an electrical shock hazard.

7. No Title

When carrying out work on the Inverter wiring make sure to wait for at least ten minutes before you remove the

cover. Making sure to check that the charge lamp is not illuminated.

A final check should always be made with a voltage meter.


After removing the power supply, there is a time delay before the capacitors will dissipate their charge.

(2) Wiring of main circuit terminals

The wiring of main circuit terminals for inverter is the following picture.

Wiring of terminals		Corresponding type
	<p>L3000-110 150NFE/HFE</p> <p>Ro-To : M4 Other : M6</p>	
	<p>L3000-185NFE L3000-185-370HFE</p> <p>Ro-To : M4 Other : M6</p>	
	<p>L3000-370NFE L3000-450,550HFE</p> <p>Ro-To : M4 Other : M8</p>	
	<p>L3000-220~300NFE</p> <p>Ro-To : M4 Earth terminal : M6 Other : M8</p> <p>L3000-550NFE</p> <p>Ro-To : M4 Earth terminal : M6 Other : M10</p>	

(3)

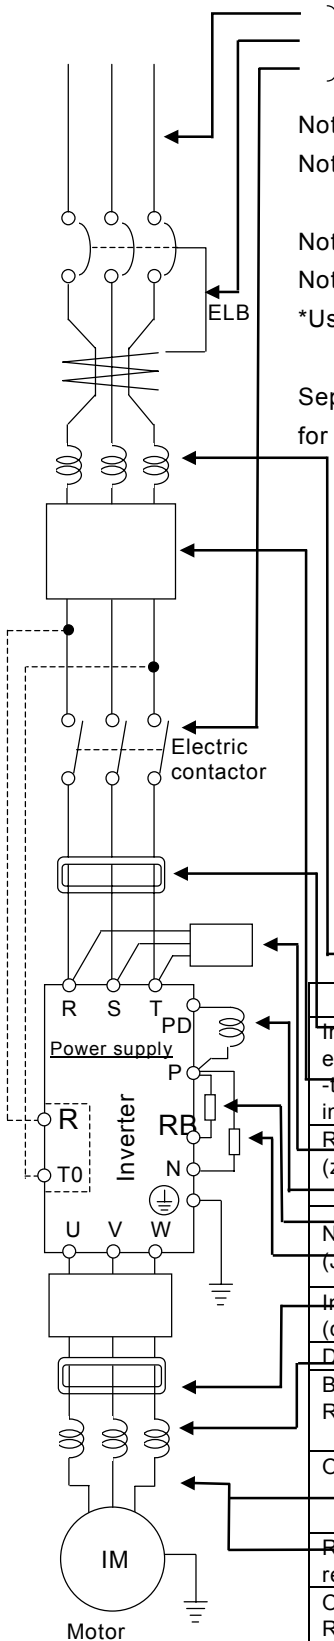

Note1: The applicable tools indicate for WATT standard four-pole squirrel-cage Motor.

Note2: Select applicable tools for breakers examining the capacity of breakers.

(Use Inverter type.)

Note3: It needs bigger wires for power lines, if the distance exceeds 20m.

Note4: Use earth-leakage breakers (ELB) for safety.

*Use 0.75mm² for Alarm output contact.

Separate by the sum(wiring distance from Inverter to power supply, from inverter to motor for the sensitive current of leak breaker (ELB).

Wiring distance	Sensitive Current(mA)
100m and less	30
300m and less	100
600m and less	200

Note8: When using CV line and wiring by rigid metal conduit, leak flows.

Note9: IV line is high dielectric constant. So the current increase 8 times.

Therefore, use the sensitive current 8 times as large as that of the left list. And if the distance of wire is over 100m, use CV line.

Name	Function
Input reactor(harmonic control, elec	This part is used when the unbalance voltage rate is 3% or more and power supply is 50 kVA or more, and there is a rapid change in the power supply/. It also improves the power factor.
trical coordination, power-factor improvement)(ALI-***)	
Radio noise filter (zero-phase reactor)(ZCL-*)	Using the inverter may cause noise on the peripheral radio through the power lines. This part reduces noise.
Noise filter for Inverter (JF-***)	This part reduces common noise generated between the power supply and the ground, as well as normal noise. Put it in the primary side of inverter.
Input radio noise filter (capacitor filter)(CFI-*)	This part reduces radiation noise emitted from wire at the input.
Direct reactor(DCL-*~**)	This part control harmonic from inverter.
Breaking resistor Regenerative braking unit	This part is used for applications that need to increase the brake torque of the inverter or to frequently turn on and off and to run high inertia load.
Output noise filter(ACF-C*)	This part reduces radiation noise emitted from wire by setting between inverter and motor. And it reduces wave fault to radio and TV , it is used for
Radio noise filter(zero-phase reactor)(ZCL-***)	This part reduces noise generated at the output of the inverter. (It is possible to use for both input and output.)
Output alternation reactor Reducing vibration, thermal Relay, preventing misapplication (ACL-*~**)	Running motors with the inverter generates vibration greater than that with commercial power supply. This part installed between the inverter and motor reduces torque ripple. When the cable length between the inverter and motor is long (10m or more), a countermeasure for a malfunction of the thermal relay by harmonic due to switching on inverter is taken by inserting reactor. There is the way to use current sensor in stead of thermal relay.
LCR filter	Sine-wave filter at the output.

(4) Common applicable tools

	Motor Output (kW)	Applicable Inverter model	Power lines R,S,T,U,V, W,P,PD,N	External resistor Between P and RB	Screw size of terminal	Terminal	Torque Nm	Applicable tools	
								Leak breaker (ELB)	Electromagnetic controller (Mg)
200V class	11	L3000-110NFE	14 mm ² or more	5.5 mm ²	M6	14-6	2.5	RX100(75A)	H50
	15	L3000-150NFE	22 mm ² or more	5.5 mm ²	M6	22-6	2.5	RX100(100A)	H65
	18.5	L3000-185NFE	30 mm ² or more	-	M6	38-6	2.5	RX100(100A)	H80
	22	L3000-220NFE	38 mm ² or more	-	M8	38-8	6	RX225B(150A)	H100
	30	L3000-300NFE	60 mm ² or more	-	M8	60-6	6	RX225B(200A)	H125
	37	L3000-370NFE	100 mm ² or more (38 → 2)	-	M8	100-8	6	RX225B(225A)	H150
	45	L3000-450NFE	100 mm ² or more (38 → 2)	-	M10	100-10	6	RX225B(225A)	H200
	55	L3000-550NFE	150 mm ² or more (60 → 2)	-	M10	150-10	6	RX400B(350A)	H250
400V class	11	L3000-110HFE	5.5mm ² or more	5.5 mm ²	M6	5.5-6	2.5	EX50C(50A)	H25
	15	L3000-150HFE	8mm ² or more	5.5 mm ²	M6	8-6	2.5	EX60B(60A)	H35
	18.5	L3000-185HFE	14 mm ² or more	-	M6	14-6	2.5	EX60B(60A)	H50
	22	L3000-220HFE	14 mm ² or more	-	M6	14-6	2.5	RX100(75A)	H50
	30	L3000-300HFE	22 mm ² or more	-	M6	22-6	2.5	RX100(100A)	H65
	37	L3000-370HFE	38 mm ² or more	-	M6	38-6	2.5	RX100(100A)	H80
	45	L3000-450HFE	38 mm ² or more	-	M8	38-8	6	RX225B(150A)	H100
	55	L3000-550HFE	60 mm ² or more	-	M8	60-8	6	RX225B(175A)	H125

5) Connecting power to the control circuit, separating from main power


When the protection circuit of inverter is activated and the electromagnetic contactor on the input supply to the inverter isolates the power supply, the control circuit power supply from the inverter will also switch off and the alarm output signal will not be held.

The power terminals Ro and To are designed to allow a supply to go direct to the control circuit and therefore keep the alarm output signal on.

In this case, please connect power terminals Ro and To, to the primary side of the electromagnetic contactor.

(inverter unit side of ACL, EMI filter, on using input ACL, EMI filter).


(Connection)

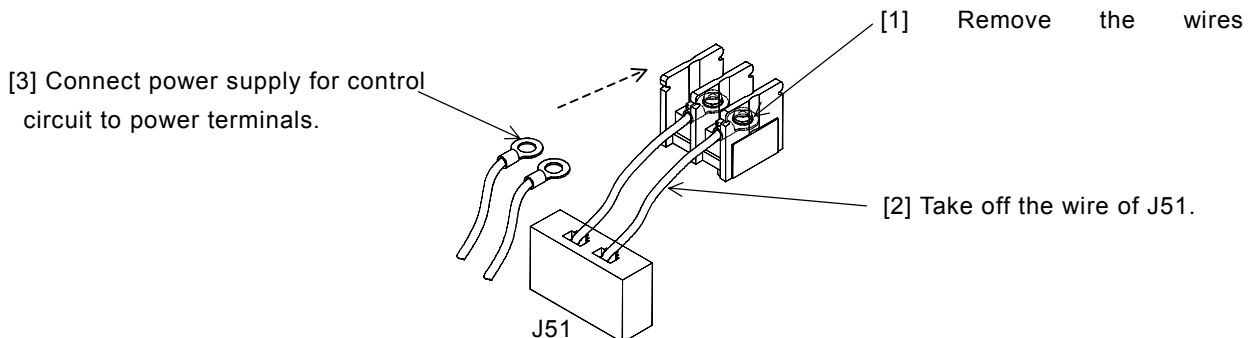

2.2.3 Terminal Connection Diagram

(1) Wiring

- Both the CM1 and CM2 terminal is insulated to both the common terminal of the input and output signal.
Do not short or earth these common terminals.
- Use twisted screened cable, for the input and output wires of 6L-terminal and CM1 terminal, output wire of CM2 terminal. Connect the screen to the common terminal.
- Limit connection wires to 20m. When it is necessary to wire over 20m, use a VX applied controller RCD-A (Remoter operation bar) or a CVD-E (Insulated signal transducer).
- Separate the control circuit wiring from the main power and relay control wiring.
- If control and power wires must cross make sure they cross at 90 degrees to each other.
- When connecting a thermistor to the TH and CM1 terminal, twist the thermistor cables separate from the rest.

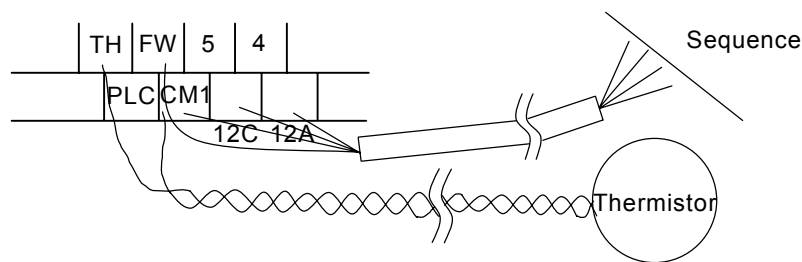

- When using relays for the FW terminal or an intelligent input terminal use a control relay as they are designed to work with 24Vdc.
- When the relay is used as an intelligent output, connect a diode for surge protection parallel to the coil.
- Do not short the analogue voltage terminals H and L or the internal power terminals PV24 and CM1.
There is risk of Inverter damage.

(2) Layout of control circuit terminals

H	O2	AM	FM	TH	FW	5	4	3	2	1	AL1	
L	O	OI	AMI	P24	PLC	CM1	12C	12A	11C	11A	ALO	AL2


The terminal screw size; M3

(3) Change of input logic type

The logic type of intelligent input terminals is sink type (Factory Default).

To change the input logic type into source type, take off the short bar between P24 and PLC on the control terminal and connect it between PLC and CM1.

(4) The connection to the input programmable logic controller (sequencer)

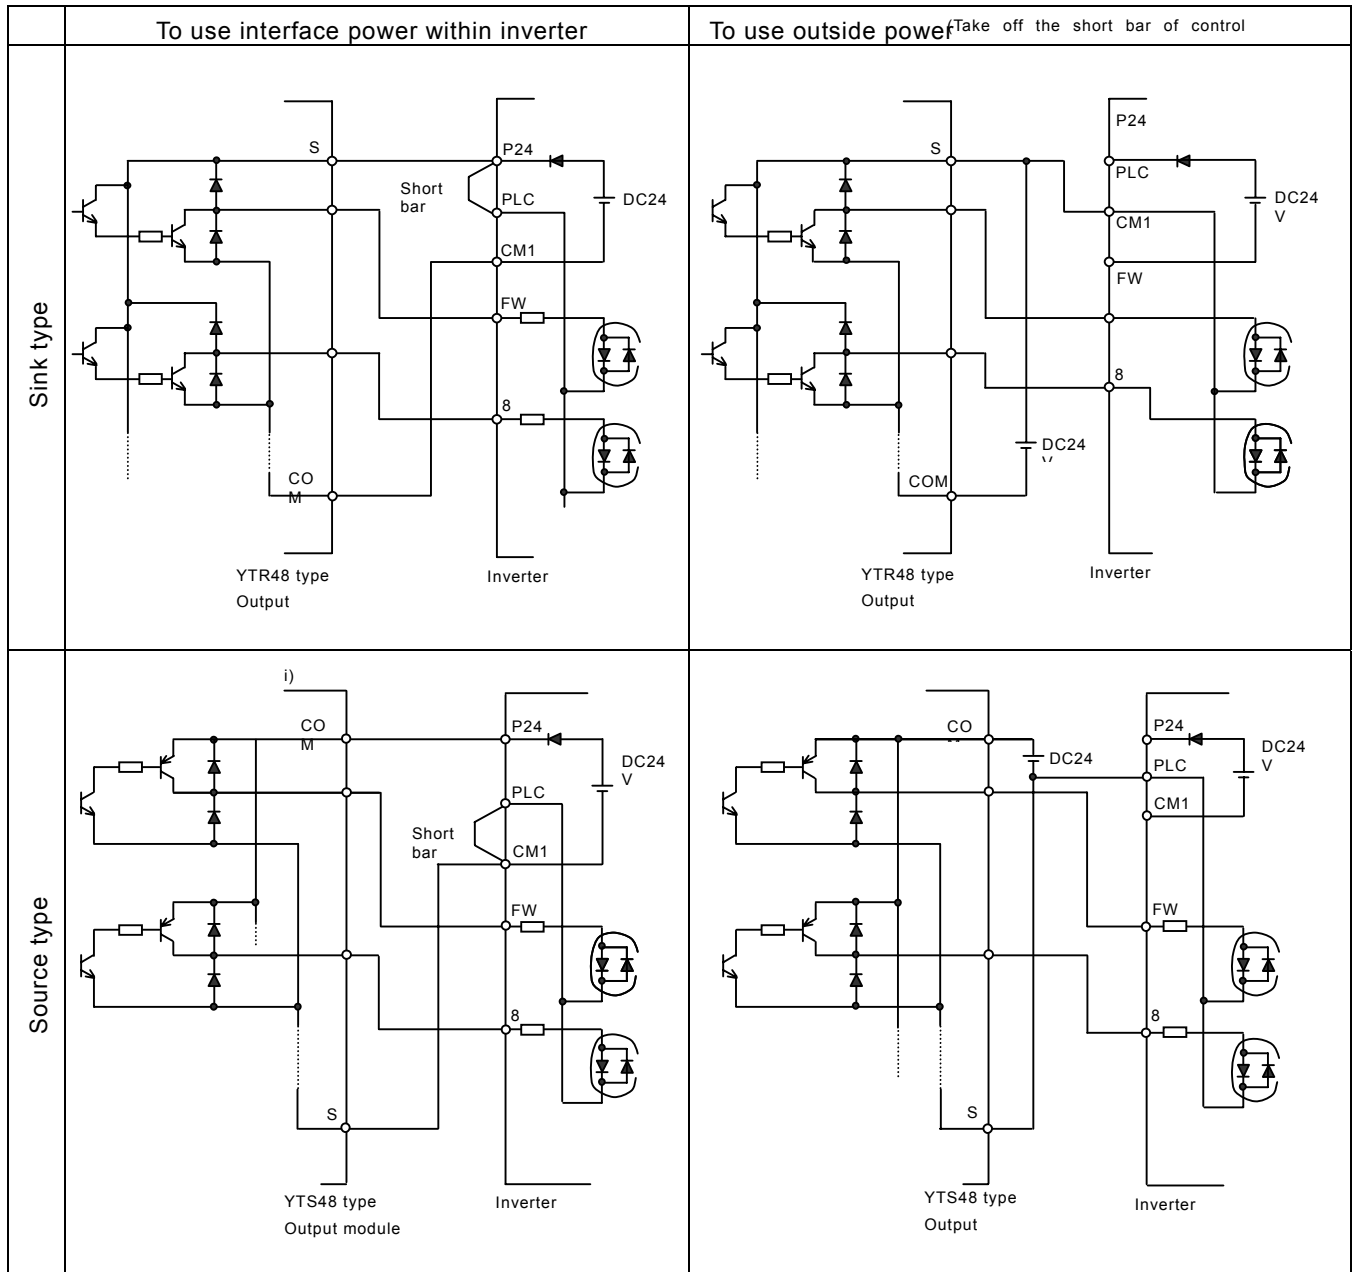

(5) Connect output terminals to programmable controllers (sequencer)

In site of the position of short bars, output terminals can be used for both the sink type and source type.

3.1 Operation

This inverter requires two different signals in order for the Inverter to operate correctly. The Inverter requires both

an operation setting and a frequency setting.

The following indicates the details of each method of operation and the necessary instructions for operation.

(1) Operation setting and a frequency setting by the terminal control.

This is the method by connecting signals from the outside (the frequency setting, the starting switch etc.) with the control circuit terminals.

The operation is started when the operation setting (FW, RV) is turned ON while the input power is turned ON.


NOTE: The methods of the setting frequency with terminal are the voltage setting and the electric setting.

And they are selective by each system. The control circuit terminal list shows this in detail.

(Necessary things for operation)

[1] The operation setting: switch, relay etc.

[2] The frequency setting: signals from volume or outside (DC0-10V, DC10-10V, 4-20mA etc.)

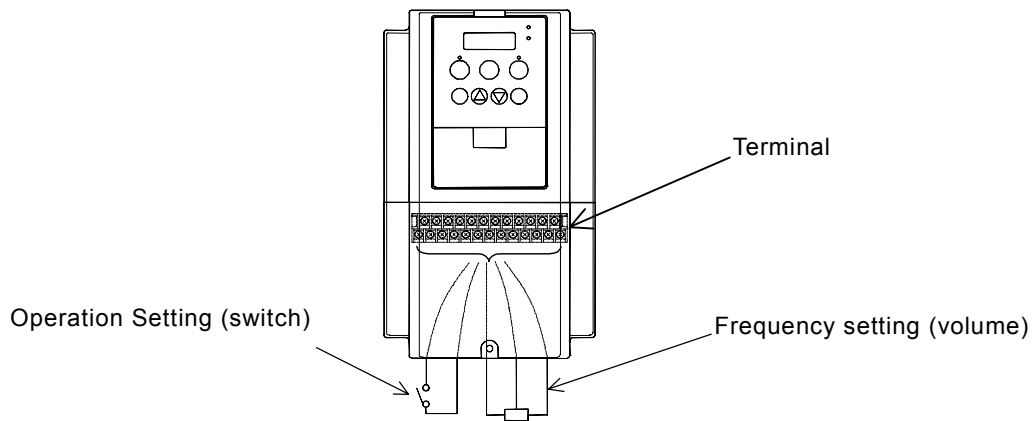

(2) Operation setting and frequency setting with the digital operator.


This is the method for operation from the digital operator, which comes equipped with the inverter as standard, or the remote operator keypad.

When the digital operator sets the operation, the terminals (FW, RV) don't need to be linked.

And it is possible to select frequency from the digital operator as a method of the frequency setting too.

(Necessary things for operation)

[1] Remote Operator (It's unnecessary in case of digital operator operation)

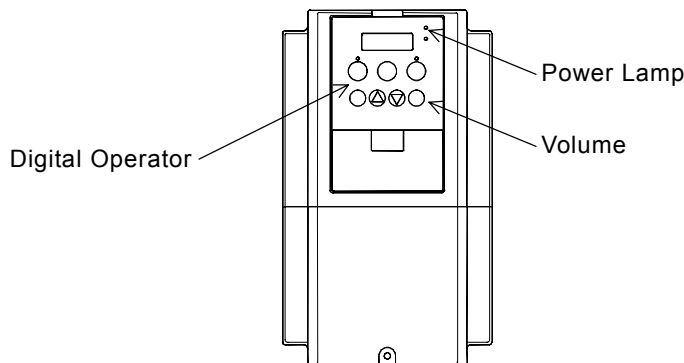

Explanation of Function

(3) Operation setting and frequency setting from both digital operator and terminal operator


This is the method of inverter operating from both of the above two operating methods

It is possible that the operation setting and the frequency setting can be selected for both the digital operator and the terminal operator each separately.

3.2 Test Run

This is the common connection example. Please refer to 4.1 Digital Operator, for the detailed use of the digital operator (OPE-SR).


- (1) To input the operation setting and the frequency setting from terminal control.

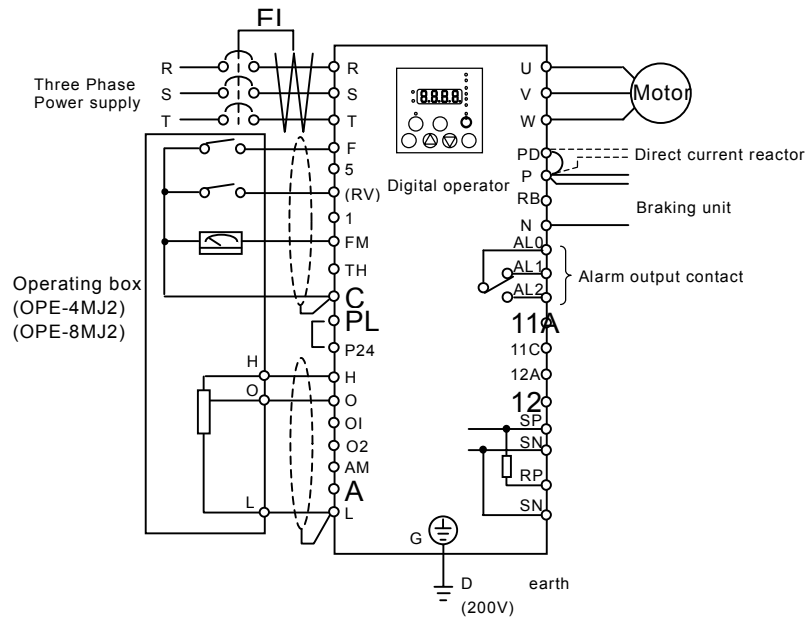

(Arrangements)

- [1] Please make sure that the connections are correctly secure.
- [2] Turn the ELB ON to supply power to the inverter.
(The red LED "POWER" on the digital operator should illuminate.)
- [3] Set terminal with the frequency setting selection.
Set A001 as indication code, press the **FM** key once. (Two figures are shown.)
Set 01 with **1** key **2** key, press the **FM** key once to set the frequency setting for terminal. (Indication code turns back to A001.)
- [4] Set terminal with the operation setting selection.
Set A002 as indication code, press the **FM** key once. (Two figures are shown.)
Set 01 with **1** key or **2** key; press the **FM** key once to set the operation setting for terminal. (Indication code turns back to A002.)
- [5] Set monitor mode.
When monitoring the output frequency, set indication code to d001, and press the **FM** key once.
Or when monitoring the operating direction, set indication code to d003, press the **FM** key once.
- [6] Input starting operation setting.
Turn ON between [FW] and [CM1] of terminal.
Impress voltage between [O] and [L] of terminal to start operation.
- [7] Input ending operation setting.
Turn OFF between [FW] and [CM] to stop slowly down.

- (2) Operation setting and the frequency setting from the digital operator
 (Copy unit (SRW) is also same use.)

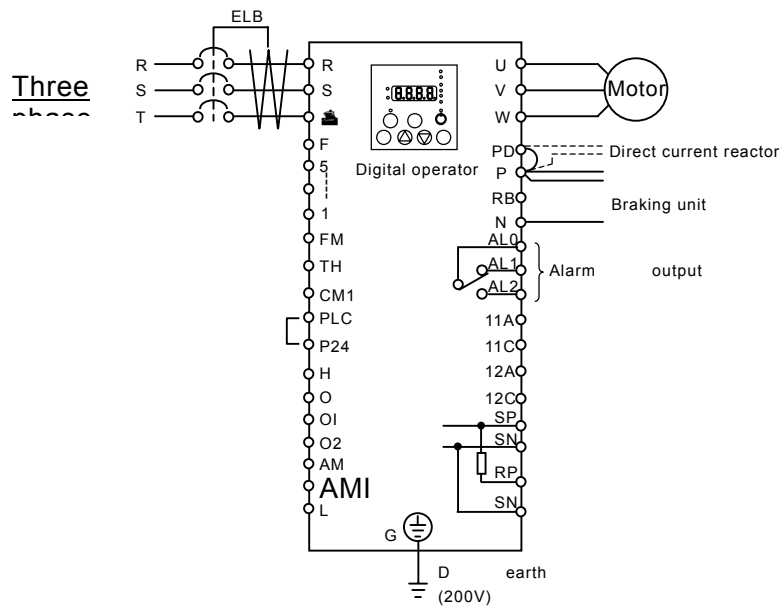

(Arrangements)

[1] Please make sure that there isn't matter about the connection.

[2] Turn the ELB on to supply power to the inverter.
 (The red LED "POWER" on the digital operator should illuminate.)


[3] Set operator with the frequency setting selection.
 Set A001 as indication code, press the key once.
 (Two figures are shown.)




Set 02 with the key or the key, press the key once to set the frequency setting for the operator.
 (Indication code turns back to A001.)

[4] Set operator with the operation setting selection.
 Set A002 as indication code, press the key once.
 (Two figures are shown.)


Set 02 with the key or the key, press the key once to set the operation setting for the operator.
 (Indication code turns back to A002.)




[5] Set the output frequency

Set F001 as indication code, as press the  key once.
(Indication code of four figures is shown.)



Set to the desired output frequency with the  key or the  key, press the  key once to store it.
(Indication code turns back to F001.)




[6] Set the operation direction.


Set F004 as indication code, press the  key once.
(00 or 01 is shown.)

Set operation direction to 00 in case of forward, or to 01 in case of reverse with the  key or the  key. Press the  key once to establish it.
(Indication code turns back to F004.)


[7] Set monitor mode.

When monitoring the output frequency, set indication code to d001, and press the  key once.
Or when monitoring the operation direction, set indication code to d003, press the  key once.

(Indication code are  forward,  reverse or  stop.)

[8] Press the  key to start operating.

(The green LED "RUN" turns on a light, and the indication changes in response to the monitor mode set.

[9] Press the  key to decelerate to a stop.

(When the frequency turn back to 0, the green LED "RUN" light will switch off.)



ATTENTION

Make sure that the direction of the motor is correct. It is in danger of injury or machine damage.
Make sure there is no abnormal noise and vibration. It is in danger of injury or machine damage.

Make sure that there is no tripping during the acceleration and deceleration and check that the revolution per minute and the frequency meter are correct.

When overcurrent tripping or overvoltage tripping occurs during the test run, increase the acceleration time


or the deceleration time.

4.1 About Digital Operator (OPE-SR)

Explanation of operating the digital operator (OPE-SR)

L3000 series operates by using the digital operator, which is fitted as standard.

1. Name and contents of each part of the digital operator

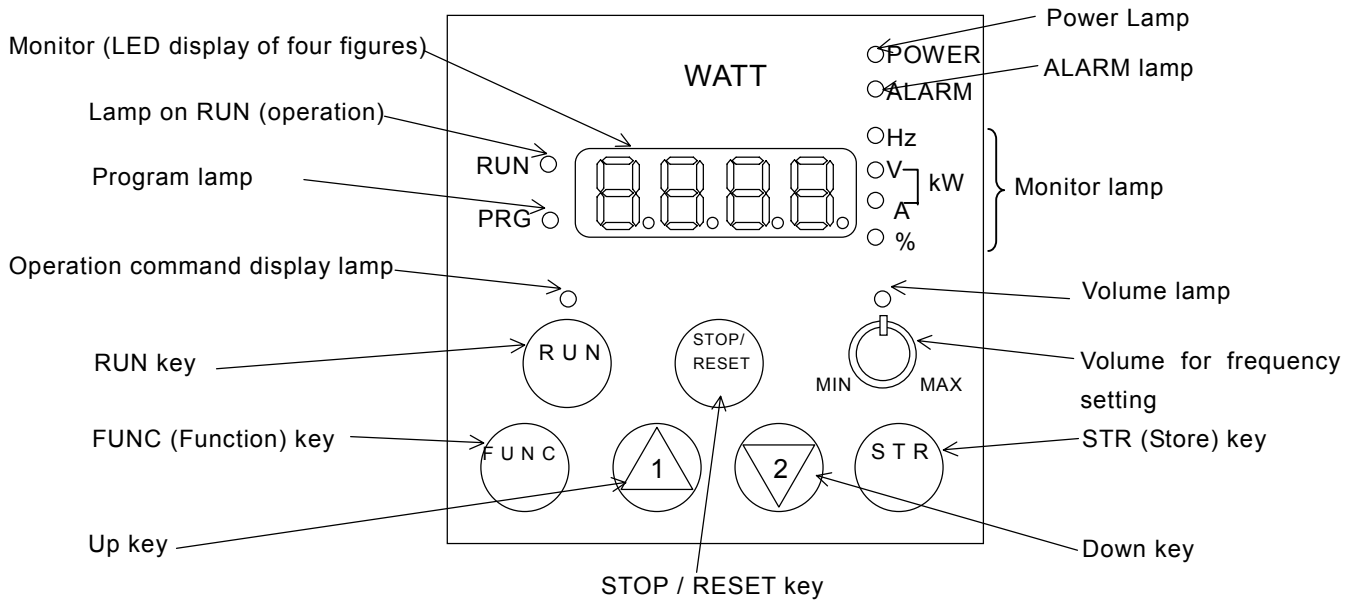

Name	Contents
Monitor	Display of frequency, output current and set value
Lamp on RUN (Operation)	Light on when the inverter is running
Program lamp	Light on when displaying set value of each function in monitor section Light will flash On and Off as a warning (when set value is incorrect)
POWER lamp	Power lamp of control circuit
ALARM lamp	Light on when the Inverter trips
Monitor lamp	Lamp display state of monitor section. Hz : Frequency V : Voltage A : Current kW : Electric power % : Rate
Volume lamp	Light on when the frequency can be set by the volume for frequency setting
Operation command Display lamp	Light on only when operating command (RUN/STOP) is set in operator
Run key	Run command to start the motor. But this is only valid when operation command is from the operator. (Be sure that the operation command display lamp is illuminated.)
Stop (stop/reset) key	This key is used to stop motor, or reset an alarm.
Volume for frequency setting	This can be used to set the output frequency. But this is only valid when the frequency command part is set in volume.
FUNC (Function) key	The key containing monitor mode, basic setting mode, extension functions mode.
STR (Store) key	The key to store the data set. (On changing set value, must be pushed or value is lost.)
UP/DOWN key	The keys to change extension function mode, function mode and set value.


2. Operating method

(1) Method to display monitor mode, basic setting mode, extension function mode


Power on



[1] Display of monitor contents set
(Display 0.00 in initial state)

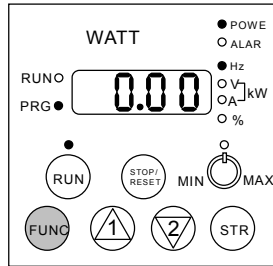

[5] Display monitor code No.
(Display d001)

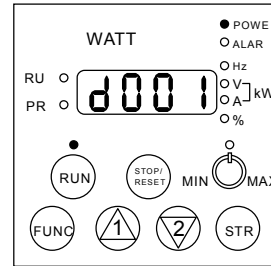

When power is turned off while the basic setting mode or the extension setting mode is displayed. The display will be different from the one above when the power is resumed.




Push the **F U N C** key.

Push the **1** key. (6 times)




Push the **2** key. (6 times)

[2] Display monitor code No.
(Display d001)

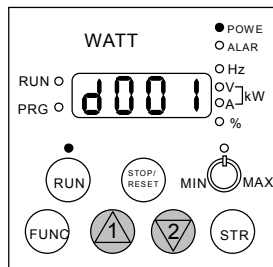

[4] Display extension function mode
(Display A - - -)

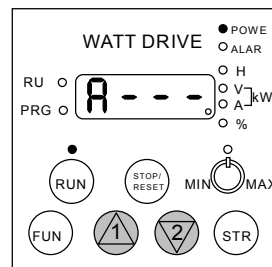

Monitor **mode** is displayed by pushing **FUN** (Function) key once **when** display of Monitor mode No.

Extension function mode
Display in the order of
A ← B ← C ← H ← P ← U.

Push the **2** key.




Push the **1** key.

Push the **1** key. (6 times)



Push the **2** key.

(Display d002)

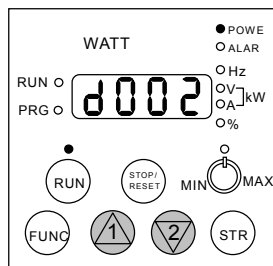

*1 Push the **1** key.


(18 times)



Push the **2** key.

(18 times)

[3] Display code No. of basic setting mode.
(Display F001)

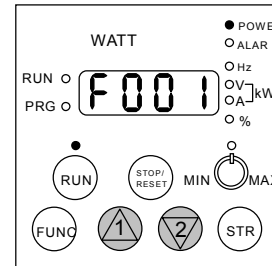


*1(3) Refer to setting method of function code

(2) Setting method of function

Change operation command part. (Operator → Control terminal)

[1] Display extension function mode

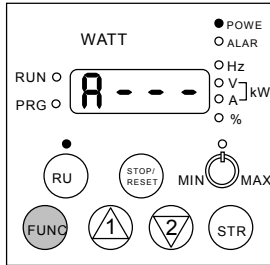


Make monitor display "A - - -" by referring to (1) displaying method.

Now operating command part is **by the operator**, so operating command display lamp **should**


illuminate.
Push the **FUNC** key.

[2] Display code No. of function mode.

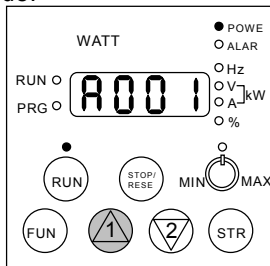


Push the **1** key.

(Display A002)

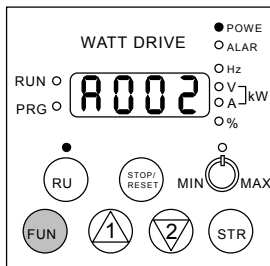

Push the **FUNC** key.

[3] Display contents of function mode

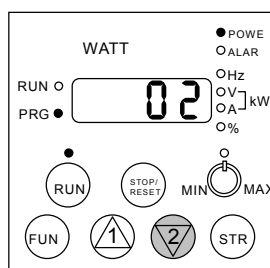


Push the **2** key.

Operation command part displays 02(operator).

Program (PRG) light on by displaying contents of function mode Seite 29 / 128


[5] Display extension function mode (Display A - - -)

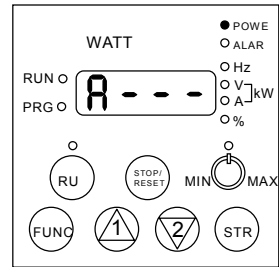

It is possible to shift to other extension function **modes**, monitor **modes** and basic **modes** in this state.

Push the **FUNC** key.


[4] Display code No. of monitor mode. (Display A002)

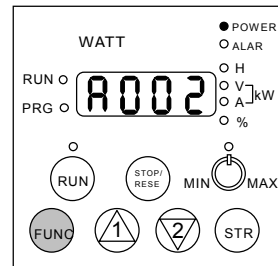

The changed set value is **confirmed** by pushing **the STR** key.

Operation command **display lamp light will switch** off so that operation command **is now** changed to **the control terminal**.

Push the **STR** key.

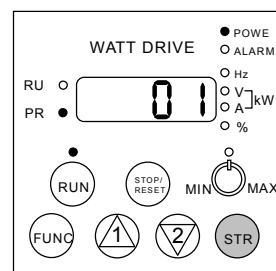

Change operation command part to control terminal 01.


(3) Setting method of function code

Code No. of monitor modes, basic setting modes and extension function codes can be set easily.

Indicate the method to change code No. d001 of monitor mode to function code No. A029 simply.


[1] Display code No. of monitor mode.

(Display d001)

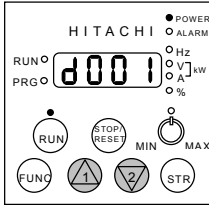

Push the and together.


[2] Change extension function mode

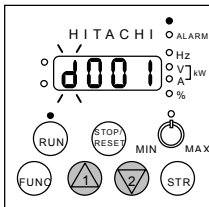

"d" blinks.

Push the key. (2 times)

(Display A001)

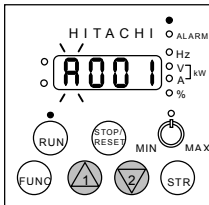


"A" blinks.

The figure lighting is decided by pushing STR key.

Push the the (Confirm "A")

[3] Change third figure of function code No.

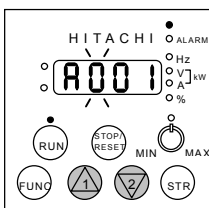


First figure "0" blinks.

Don't change third figure and push the STR key and confirm 0.

Push the key.

(Confirm "0")


(Display A029)

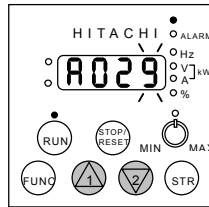

"9" of first figure blinks.

Push the or key. (2 times)


[5] Change first figure of function code No.

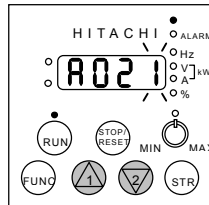

First figure, "1" blinks.

Push the the


(Display A021)

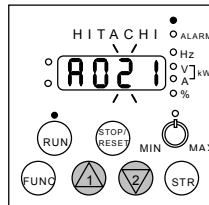

Second figures, "2" blinks.


Push the key. (2 times)

[4] Change second figure of function code No.

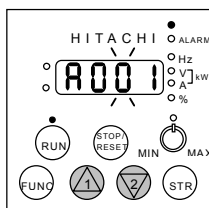

Second figure, "0" blinks.

[6] Finish setting function

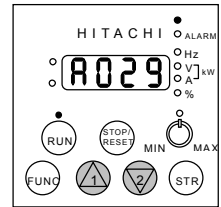



Finish setting A029

(Note) When you input code No. there isn't in the code list, "A" of left end blinks again. Confirm code No. and input it again.

4.2 Code list

(Note1)

Monitor code

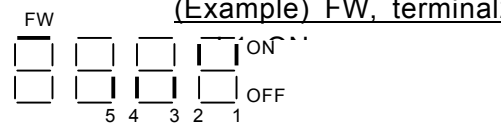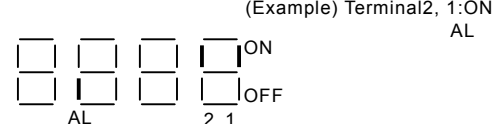Display code	Function name	L3000 plus monitor or data range (new type digital operator)	Initial data	Setting On Running	Change mode during running	Page
d001	Output frequency monitor	0.00-99.99/100.0-400.0(Hz)	-	-	-	4-10
d002	Output current monitor	0.0-999.9(A)	-	-	-	4-10
d003	Operation direction monitor	F(forward)/o(stop)/r(reverse)	-	-	-	4-10
d004	PID feedback monitor	0.00-99.99/100.0-999.9/1000. -9999. / 1000-9999/{100-999 (10000-99900)}	-	-	-	4-10
d005	Intelligent input terminal monitor	<p>(Example) FW, terminal2,</p> 	-	-	-	4-11
d006	Intelligent output terminal monitor	<p>(Example) Terminal2, 1:ON AL :OFF</p> 	-	-	-	4-11
d007	Frequency conversion monitor	0.00-99.99/100.0-999.9/1000. -9999. / 1000-3996	-	-	-	4-12
d013	Output voltage monitor	0.0-600.0 V	-	-	-	4-12
d014	Electric power monitor	0.0-999.9 kW	-	-	-	4-12
d016	Accumulated time monitor during RUN	0.-9999./1000-9999/{100-999 hr	-	-	-	4-13
d017	Power ON time monitor	0.-9999./1000-9999/{100-999 hr	-	-	-	4-13
d080	Number of trip time monitor	0.-9999./1000-6553(10000-65530) (time)	-	-	-	4-13
d081	Trip monitor 1	Trip Code, frequency(Hz), current(A), voltage(V) RUN time(hr) power ON time(hr)	-	-	-	4-13
d082	Trip monitor 2	Trip Code, frequency(Hz), current(A), voltage(V) RUN time(hr) power ON time(hr)	-	-	-	4-13
d083	Trip monitor 3	Trip Code, frequency(Hz), current(A), voltage(V) RUN time(hr) power ON time(hr)	-	-	-	4-13
d084	Trip monitor 4	Trip Code, frequency(Hz), current(A), voltage(V) RUN time(hr) power ON time(hr)	-	-	-	4-13
d085	Trip monitor 5	Trip Code, frequency(Hz), current(A), voltage(V) RUN time(hr) power ON time(hr)	-	-	-	4-13
d086	Trip monitor 6	Trip Code, frequency(Hz), current(A), voltage(V) RUN time(hr) power ON time(hr)	-	-	-	4-13
d090	Warning monitor	Warning code	-	-	-	4-76
F001	Output frequency	0.0, starting frequency-Max. frequency (2 nd max. frequency)(Hz)	0.00	✓	✓	4-14
F002	1 st acceleration time	0.01-99.99/100.0-999.9/1000.-3600.(s)	30.00	✓	✓	4-16
F202	2 nd acceleration time	0.01-99.99/100.0-999.9/1000. -3600. (s)	30.00	✓	✓	4-16
F003	1 st deceleration	0.01-99.99/100.0-999.9/1000. -3600. (s)	30.00	✓	✓	4-16

	time					
F203	2 nd deceleration time	0.01-99.99/100.0-999.9/1000. -3600. (s)	30.00	✓	✓	4-16
F004	Operation direction selection	00(forward)/01(reverse)	00	-	-	4-16

(Note1) Change mode during run by selection of b031 (software lock selection).

(Note2) Do not forget to press "STR" key when you change the display.

Function Code

Code	Function name	Setting range	Initial data	Setting on run	Change mode on run	Page	
Base setting	A001	Frequency setting selection	00(VR)/01(terminal)/02(operator)/03(RS485)/04(option1)/05(option2)	00	-	-	4-14
	A002	Operation setting selection	01(terminal)/02(operator)/03(RS485)/04(option1)/05(option2)	02	-	-	4-15
	A003	Base frequency	30. - Maximum. frequency(Hz)	60.	-	-	4-17
	A203	Base frequency, 2nd motor	30. - 2 nd Maximum. frequency (Hz)	60.	-	-	4-17
	A004	Maximum frequency	30. - 400. (Hz)	60.	-	-	4-18
	A204	Maximum frequency, 2nd motor	30. - 400. (Hz)	60.	-	-	4-18
Analog input setting	A005	AT terminal selection	00(Changing of O and OI with AT terminal)/01(Changing of O and O2 with AT terminal)	00	-	-	4-19
	A006	O2 selection	00(single)/01(auxiliary speed of O, OI) [no reversible] /02(auxiliary speed of O, OI [reversible]	00	-	-	4-19
	A011	0 start	0.00-99.99/100.0-400.0 (Hz)	0.00	-	✓	4-20
	A012	0 end	0.00-99.99/100.0-400.0 (Hz)	0.00	-	✓	4-20
	A013	0 start rate	0.-100.0 (%)	0.	-	✓	4-20
	A014	0 end rate	0.-100.0(%)	100.	-	✓	4-20
	A015	0 start selection	00 (external starting frequency)/01(OHz)	01	-	✓	4-20
	A016	O, OI, O2 sampling	1.-30.(times)	8.	-	✓	4-21
Multistage speed/jogging frequency setting	A019	Multi-speed selection	00(binary : range is to 16 stage speed with 4 terminals)/01(bit : range is to 6 stage speed with 5 terminals)	00	-	-	4-43
	A020	Multi-speed 0	0.00, starting frequency-maximum. frequency(Hz)	0.00	✓	✓	4-43
	A220	Multi-speed 0, 2 nd motor	0.00, starting frequency-2 nd maximum frequency(Hz)	0.00	✓	✓	4-43
	A021	Multi-speed1	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A022	Multi-speed2	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A023	Multi-speed3	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A024	Multi-speed4	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A025	Multi-speed5	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A026	Multi-speed6	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A027	Multi-speed7	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A028	Multi-speed8	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A029	Multi-speed9	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A030	Multi-speed10	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A031	Multi-speed11	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A032	Multi-speed12	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A033	Multi-speed13	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A034	Multi-speed14	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
	A035	Multi-speed15	0.00, starting frequency-maximum frequency(Hz)	0.00	✓	✓	4-43
A038	Jogging frequency	0.00, starting frequency-9.99(Hz)	1.00	✓	✓	4-44	
A039	Jogging selection	00(free-run on JG stop / invalid on running) / 01(stop decelerating on JG stop / invalid on running) / 02(DC braking on JG stop/invalid on running) / 03(free-run on JG stop/valid on running/JG after stop decelerating) / 04 (stop decelerating on JG stop/valid on running) / 05 (DC braking on JG stop/valid on operating)	00	-	✓	4-44	
V/f characteristic	A041	Torque boost selection	00 (manual torque boost) / 01 (automatic torque boost)	00	-	-	4-24
	A241	Torque boost selection, 2 nd motor	00 (manual torque boost) / 01 (automatic torque boost)	00	-	-	4-24
	A042	Manual torque boost	0.0-20.0(%)	1.0	✓	✓	4-24
	A242	Manual torque boost, 2 nd motor	0.0-20.0(%)	1.0	✓	✓	4-24
	A043	Manual torque boost point	0.0-50.0(%)	5.0	✓	✓	4-24
	A243	Manual torque boost point, 2 nd motor	0.0-50.0(%)	5.0	✓	✓	4-24
	A044	1 st control	00/(VC)/01(VP1.7power)/02(free V/f setting)	00	-	-	4-22
	A244	2 nd control	00/(VC)/01(VP1.7power)/02(free V/f setting)	00	-	-	4-22
A045	Output voltage gain	20. - 100.	100.	✓	✓	4-21	

Explanation of Function

Direct current braking	A051	DC braking selection	00(invalid)/01(valid)	00	-	✓	4-25
	A052	DC braking frequency	0.00-60.00(Hz)	0.50	-	✓	4-25
	A053	DC braking wait time	0.0 - 5.0(s)	0.0	-	✓	4-25
	A054	DC braking power	0. - 70. (%)	0.	-	✓	4-25
	A055	DC braking time	0.0 - 60.0(s)	0.0	-	✓	4-25
	A056	DC braking edge/level selection	00(edge action)/01(level action)	01	-	✓	4-25
	A057	DC braking power (starting time)	0. - 70. (%)	0.	-	✓	4-25
	A058	DC braking time (starting time)	0.00-60.0(s)	0.0	-	✓	4-25
	A059	DC carrier frequency	0.5-12(kHz) Derating	3.0	-	-	4-25

Function Code

	Code	Function name	Setting range	Initial data	Setting on run	Change mode on run	Page	
Upper and lower limiter / jump frequency	A061	1 st frequency upper limiter	0.00, 1 st frequency lower limiter-maximum frequency(Hz)	0.00	-	✓	4-28	
	A261	2 nd frequency upper limiter	0.00, 2 nd frequency lower limiter-2 nd setting maximum frequency(Hz)	0.00	-	✓	4-28	
	A062	1 st frequency lower limiter	0.00, start frequency-maximum frequency(Hz)	0.00	-	✓	4-28	
	A262	2 nd frequency lower limiter	0.00, start frequency-2 nd setting maximum frequency(Hz)	0.00	-	✓	4-28	
	A063	Jump frequency1	0.00-99.99/100.0-400.0(Hz)	0.00	-	✓	4-29	
	A064	Jump frequency Width 1	0.00-10.00(Hz)	0.50	-	✓	4-29	
	A065	Jump frequency2	0.00-99.99/100.0-400.0(Hz)	0.00	-	✓	4-29	
	A066	Jump frequency Width 2	0.00-10.00(Hz)	0.50	-	✓	4-29	
	A067	Jump frequency3	0.00-99.99/100.0-400.0(Hz)	0.00	-	✓	4-29	
	A068	Jump frequency Width 3	0.00-10.00(Hz)	0.50	-	✓	4-29	
PID control	A069	Acceleration stop frequency	0.00-99.99/100.0-400.0(Hz)	0.00	-	✓	4-29	
	A070	Acceleration stop time	0.00-60.0(s)	0.0	-	✓	4-29	
	A071	PID selection	00(invalid)/01(valid)	00	-	✓	4-30	
	A072	PID-P gain	0.2-5.0	1.0	✓	✓	4-30	
	A073	PID-I gain	0.0-3600.(s)	1.0	✓	✓	4-30	
	A074	PID-D gain	0.00-100.0(s)	0.00	✓	✓	4-30	
	A075	PID scale	0.01-99.99(%)	1.00	-	✓	4-30	
	A076	PID feedback selection	00(feedback : OI)/01(feedback : O)	00	-	✓	4-30	
	A081	AVR selection	00(ON always)/01(OFF always)/02(OFF on decelerating)	02	-	-	4-17	
	A082	Motor voltage selection	200/215/220/230/240, 380/400/415/440/460/480, 575/600(V)	200/400	-	-	4-17	
Operation mode/ adjustable function	A085	Operation mode selection	00(normal operation)/01(energy-saving operation)	00	-	-	4-31	
	A086	Energy-saving response-accuracy adjustment	0.0-100.0(s)	50.0	✓	✓	4-31	
	A092	Acceleration time2	0.01-99.99/100.0-999.9/1000.-3600.(s)	15.00	✓	✓	4-32	
	A292	Acceleration time2(2 nd motor)	0.01-99.99/100.0-999.9/1000.-3600.(s)	15.00	✓	✓	4-32	
	A093	Deceleration time2	0.01-99.99/100.0-999.9/1000.-3600.(s)	15.00	✓	✓	4-32	
	A293	Deceleration time2(2 nd motor)	0.01-99.99/100.0-999.9/1000.-3600.(s)	15.00	✓	✓	4-32	
	A094	2 nd stage adjustable selection	00(change with 2CH terminal)/01(change with setting)	00	-	-	4-32	
	A294	2 nd stage adjustable selection(2 nd motor)	00(change with 2CH terminal)/01(change with setting)	00	-	-	4-32	
	A095	2 nd acceleration frequency	0.00-99.99/100.0-400.0(Hz)	0.00	-	-	4-32	
	A295	2 nd acceleration frequency(2 nd motor)	0.00-99.99/100.0-400.0(Hz)	0.00	-	-	4-32	
External frequency adjustment	A096	2 nd deceleration frequency	0.00-99.99/100.0-400.0(Hz)	0.00	-	-	4-32	
	A296	2 nd deceleration frequency (2 nd motor)	0.00-99.99/100.0-400.0(Hz)	0.00	-	-	4-32	
	A097	Acceleration selection pattern	00(straight line)/01(S-curve)/02(U-curve)/03(reverse U-curve)	00	-	-	4-33	
	A098	Deceleration selection pattern	00(straight line)/01(S-curve)/02(U-curve)/03(reverse U-curve)	00	-	-	4-33	
	A101	OI start	0.00-99.99/100.0-400.0(Hz)	0.00	-	✓	4-20	
	A102	OI end	0.00-99.99/100.0-400.0(Hz)	0.00	-	✓	4-20	
	A103	OI start rate	0.-100.(%)	20.	-	✓	4-20	
	A104	OI end rate	0.-100.(%)	100.	-	✓	4-20	
	A105	OI start selection	00(external start frequency)/01(0Hz)	01	-	✓	4-20	
	A111	O2 start	-400.-100./-99.9-0.00-99.9/100.-400.(Hz)	0.00	-	✓	4-20	
Adjustable speed	A112	O2 end	-400.-100./-99.9-0.00-99.9/100.-400.(Hz)	0.00	-	✓	4-20	
	A113	O2 start rate	-100.-100.(%)	-100.	-	✓	4-20	
	A114	O2 end rate	-100.-100.(%)	100.	-	✓	4-20	
	A131	Acceleration curve constant	01(small swelling)-10(large swelling)	02	-	✓	4-33	
	A132	Deceleration curve constant	01(small swelling)-10(large swelling)	02	-	✓	4-33	
	Instantaneous power failure restart	b001	Retry selection	00(trip)/01(Ohz start)/02(start after equal frequency)/03(trip after equaling frequency and deceleration stop)	00	-	✓	4-34
		b002	Allowable under-voltage power failure time	0.3-1.0(s)	1.0	-	✓	4-34
		b003	Retry wait time	0.3-100.(s)	1.0	-	✓	4-34
		b004	Instantaneous power failure/ under-voltage trip during stop	00(invalid)/01(valid)	00	-	✓	4-34
		b005	Instantaneous power failure/ under-voltage retry time selection	00(16 times)/01(free)	00	-	✓	4-34
b006		Open-phase selection	00(invalid)/01(valid)	00	-	✓	4-35	
b007		Frequency setting to match	0.00-99.99/100.0-400.0(Hz)	0.00	-	✓	4-34	
Electronic thermal	b012	Electronic thermal level	0.2*constant current-1.20*constant current(A)	Rated Current of inverter	-	✓	4-36	
	b212	Electronic thermal level (2 nd motor)	0.2*constant current-1.20*constant current(A)	Rated Current of inverter	-	✓	4-36	
	b013	Electronic thermal characteristic selection	00/(reduced characteristic)/01(constant characteristic)/02(free setting)	00	-	✓	4-36	
	b213	Electronic thermal characteristic selection (2 nd motor)	00/(reduced characteristic)/01(constant torque characteristic)/02(free setting)	00	-	✓	4-36	
	b015	Free electronic thermal frequency 1	0.-400.(Hz)	0.	-	✓	4-37	

b016	Free electronic thermal current 1	0.0-1000.(A)	0.0	-	✓	4-37
b017	Free electronic thermal frequency 2	0.-400.(Hz)	0.	-	✓	4-37
b018	Free electronic thermal current 2	0.0-1000.(A)	0.0	-	✓	4-37
b019	Free electronic thermal frequency 3	0.-400.(Hz)	0.	-	✓	4-37
b020	Free electronic thermal current 3	0.0-1000.(A)	0.0	-	✓	4-37

Function code

Code	Function name	Setting range	Initial data	Setting on run	Change on run mode	Page	
Overload limit	b021	Overload restriction selection	00(invalid)/01(enabled on acceleration / constant speed)/02(enabled on constant speed)	01	-	✓	4-38
	b022	Overload restriction level	0.50* rated current-1.50* rated current(A)	Rated current of inverter x 1.20	-	✓	4-38
	b023	Overload restriction limit constant	0.10-30.00(s)	1.00	-	✓	4-38
	b024	Overload restriction 2 selection	00(invalid)/01(valid on acceleration / constant speed)/02(valid on constant speed)	01	-	✓	4-38
	b025	Overload restriction level 2	0.50*rated current-1.50*rated current(A)	Rated current of inverter x1.20	-	✓	4-38
	b026	Overload restriction constant 2	0.10-30.00(s)	1.00	-	✓	4-38
Lock	b031	Software lock mode selection	00(impossible to change the data except this item when SFT terminal is ON)/ 01(impossible to change the data except setting frequency item when SFT terminal is ON)/02(impossible to change the data except this item)/ 03(impossible to change the data except setting frequency item)/ 10(possible to change data on operating)	01	-	✓	4-45
Free V/f setting	b100	Free V/f frequency 1	0.- Free V/f frequency2(Hz)	0.	-	-	4-23
	b101	Free V/f voltage 1	0.-800.0(V)	0.0	-	-	4-23
	b102	Free V/f frequency 2	0.- Free V/f frequency3(Hz)	0.	-	-	4-23
	b103	Free V/f voltage 2	0.-800.0(V)	0.0	-	-	4-23
	b104	Free V/f frequency 3	0.- Free V/f frequency4(Hz)	0.	-	-	4-23
	b105	Free V/f voltage 3	0.-800.0(V)	0.0	-	-	4-23
	b106	Free V/f frequency 4	0.- Free V/f frequency5(Hz)	0.	-	-	4-23
	b107	Free V/f voltage 4	0.-800.0(V)	0.0	-	-	4-23
	b108	Free V/f frequency 5	0.- Free V/f frequency6(Hz)	0.	-	-	4-23
	b109	Free V/f voltage 5	0.-800.0(V)	0.0	-	-	4-23
	b110	Free V/f frequency 6	0.- Free V/f frequency7(Hz)	0.	-	-	4-23
	b111	Free V/f voltage 6	0.-800.0(V)	0.0	-	-	4-23
	b112	Free V/f frequency 7	0.-400.(Hz)	0.	-	-	4-23
b113	Free V/f voltage 7	0.-800.0(V)	0.0	-	-	4-23	
Intelligent input terminal setting	C001	Intelligent input 1 setting	01/(RV:Reverse is valid)/02(CF1:Multi-speed1)/ 03(CF2:Multi-speed2)/ 04(CF3:Multi-speed3)/ 05(CF4:Multi-speed4)/ 06(JG:Jogging)/ 07(DB:External DC braking)/ 08(SET:2 nd control)/ 09(2CH:two-stage adjustable speed)/ 11(FRS:Free-run)/ 12(EXT:External trip)/	18	-	✓	4-42
	C002	Intelligent input 2 setting	13(USP:Unattended start protection)/ 14(CS:commercial change)/ 15(SFT:software lock)/ 16(AT:Analog input voltage/current select)/ 18(RS:Reset inverter)/ 20(STA:3wire run)/ 21(STP:3wire keep)/ 22(F/R:3wire forward/reverse)/ 23(PID:PID selection valid/invalid)/ 24(PIDC:PID integrating reset)/ 27(UP:Remote control UP function)/ 28(DWN:Remote control DOWN function)/	16	-	✓	4-42
	C003	Intelligent input 3 setting	29(UDC:Remote control data clear)/ 32(SF1:Multi-speed bit1)/ 33(SF2:Multi-speed bit2)/ 34(SF3:Multi-speed bit3)/ 35(SF4:Multi-speed bit4)/	03	-	✓	4-42
	C004	Intelligent input 4 setting	36(SF5:Multi speed bit5)/ 37(SF6:Multi-speed bit6)/ 38(SF7:Multi-speed bit7)/ 39(OLR:Overload restriction change)/no(NO:No assign)	02	-	✓	4-42
	C005	Intelligent input 5 setting		01	-	✓	4-42
Input terminal setting intelligent	C011	Intelligent input1 a/b (NO/NC) selection	00(NO)/01(NC)	00	-	✓	4-42
	C012	Intelligent input2 a/b (NO/NC) selection	00(NO)/01(NC)	00	-	✓	4-42
	C013	Intelligent input3 a/b (NO/NC) selection	00(NO)/01(NC)	00	-	✓	4-42
	C014	Intelligent input4 a/b (NO/NC) selection	00(NO)/01(NC)	00	-	✓	4-42
	C015	Intelligent input5 a/b (NO/NC) selection	00(NO)/01(NC)	00	-	✓	4-42
	C019	Input FW a/b (NO/NC) Selection	00(NO)/01(NC)	00	-	✓	4-42
Intelligent output terminal setting	C021	Intelligent output 11 setting	00(RUN:running)/01(FA1:Frequency arrivaltype1 signal)/02(FA2:frequency arrival type2 signal)/03(OL:Overload advance notice signal)/04(OD:Output deviation for PID control)/05(AL:Alarm signal)/	01	-	✓	4-51
	C022	Intelligent output 12 setting	06(FA3:Only setting frequency)/08(IP:On instantaneous stop)/09(UV:Under voltage)/11(RNT:RUN time over)/12(ONT:ON time over)/13(THM:thermal caution)	00	-	✓	4-51
	C026	Alarm relay output		05	-	✓	4-51
	C027	FM selection	00(Output frequency)/01(Output current) / 03(Digital output frequency)/04(Output voltage)/ 05(Output electric power)/06(thermal load rate)/07(LAD frequency)	00	-	✓	4-56
	C028	AM selection	00(Output frequency)/01(Output current)/04(Output voltage)/ 05(Output electric power)/06(thermal load rate)/07(LAD frequency)	00	-	✓	4-57



Explanation of Function

C029	AMI selection	00(Output frequency)/01(Output current)/04(Output voltage)/05(Output electric power)/06(Thermal load rate)/07(LAD frequency)	00	-	✓	4-57
C031	Intelligent output 11 a/b	00(NO)/01(NC)	00	-	✓	4-52
C032	Intelligent output 12 a/b	00(NO)/01(NC)	00	-	✓	4-52
C036	Alarm relay output a/b	00(NO)/01(NC)	01	-	✓	4-52
C040	Overload advance notice signal output mode	00(On accel. And decel, constant speed)/01(Only constant speed)	01	-	✓	4-39
C041	Overload advance notice level	0.0-2.0*rated current(A)	Inverter rated current	-	✓	4-38
C042	Frequency arrival setting for acceleration.	0.00-99.99/100.0-400.0(Hz)	0.00	-	✓	4-53
C043	Arrival frequency setting for deceleration.	0.00-99.99/100.0-400.0(Hz)	0.00	-	✓	4-53
C044	PID deviation setting level	0.0-100.0(%)	3.0	-	✓	4-31

Function code

Code	Function name	Setting range	Initial data	Setting on run	Change mode on run	Page	
Communication function	C070	Data command	02(operator)/03(RS485)/04(option1)/05(option2)	02	-	-	4-61
	C071	Communicating transmission speed	03(2400bps)/04(4800bps)/05(9600bps)/06(19200bps)	04	-	✓	4-61
	C072	Communication code	1..32	1	-	✓	4-61
	C073	Communication bit	7(7bit)/8(8bit)	7	-	✓	4-61
	C074	Communication parity	00(no parity name)/01(even parity)/02(odd parity)	00	-	✓	4-61
	C075	Communication stop bit	1(bit)/2(bit)	1	-	✓	4-61
	C078	Communication waiting time	0.-1000.(ms)	0.	-	✓	4-61
Analog meter setting	C081	O adjustment	0.-9999./1000-6553(10000-65530)	Setting on forwarding	✓	✓	-
	C082	OI adjustment	0.-9999./1000-6553(10000-65530)	Setting on forwarding	✓	✓	-
	C083	O2 adjustment	0.-9999./1000-6553(10000-65530)	Setting on forwarding	✓	✓	-
	C085	Thermistor adjustment	0.0 - 1000.	105.0	✓	✓	4-57
	C086	AM offset adjustment	0.0 - 10.0(V)	0.0	✓	✓	4-57
	C087	AMI adjustment	0. - 255.	50	✓	✓	4-57
	C088	AMI offset adjustment	0. - 20.0(mA)	Setting on forwarding	✓	✓	4-57
The others	b034	RUN time/Power ON time level	0.-9999./1000-6553(10000-65530)hr	0.	-	✓	4-55
	b035	Operation direction restrict	00(Reverse is valid)/01(Only forward)/02(Only reverse)	00	-	✓	4-14
	b036	Start reduced voltage	00(Start reduced voltage time small)/06(Start reduced voltage time large)	06	-	✓	4-40
	b037	Display selection	00(all display)/01(each function display)/02(User setting / main setting)	00	-	✓	4-59
	b080	AM adjustment	0. - 255.	150	✓	✓	4-57
	b081	FM adjustment	0. - 255.	60	✓	✓	4-56
	b082	Start frequency adjustment	0.10-9.99(Hz)	0.50	-	✓	4-40
	b083	Carrier frequency setting	0.5-12.0(kHz) Derating enable,	3.0	-	✓	4-18
	b084	Initialize mode	00(Trip history clear)/01(Data initialization)/02(Trip history clear + data initialization)	00	-	-	4-58
	b085	Country code for initialization	00(Interior)/01(EC)/02(USA)	00	-	-	4-58
	b086	Frequency conversion factor	0.1-99.9	1.0	✓	✓	4-12
	b087	STOP key enable	00(valid)/01(Invalid)	00	-	✓	4-15
	b088	Resume on FRS cancellation mode	00(Ohz start)/01(Start f-equaling)	00	-	✓	4-46
	b090	BRD usage ratio	0.0-100.0(%)	0.0	-	✓	4-41
	b091	Stop mode selection	00(deceleration stop)/01(Free-run stop)	00	-	-	4-15
	b092	Cooling fan control	00(Always ON)/01(ON during run, After power ON, then for 5 minutes on stop is implied.)	00	-	-	4-41
	b095	BRD selection	00(Invalid)/01(valid<Invalid during stop>)/02(valid<valid during stop>)	00	-	✓	4-41
	b096	BRD ON level	330-380/660-760(V)	360/720	-	✓	4-41
	b098	Thermistor selection	00(Invalid)/01(Positive temperature coefficient enable)/02 (NTC enable)	00	-	✓	4-57
	b099	Thermistor error level	0. - 9999. (ohm)	3000.	-	✓	4-57
	C061	Thermal warning level	0. - 100. (%)	80	-	✓	4-36
	C091	Debug mode selection	00(No display)/01(Display)	00	-	✓	-
	C101	UP/DWN selection	00(No frequency data)/01(Keep frequency data)	00	-	✓	4-49
	C102	Reset selection	00(Trip cancel during ON)/01(Trip cancel during OFF)/02(Valid only during trip<Cancel during ON>)	00	✓	✓	4-48
	C103	Reset f frequency matching selection	00(0Hz start)/01(Start f-equaling)	00	-	✓	4-48
	C121	O zero adjustment	0.-9999./1000-6553(10000-65530)	Set on forwarding	✓	✓	♯
	C122	OI zero adjustment	0.-9999./1000-6553(10000-65530)	Set on forwarding	✓	✓	♯
	C123	O2 zero adjustment	0.-9999./1000-6553(10000-65530)	Set on forwarding	✓	✓	♯
	H003	1 st allowable motor selection	0.20-75.0(kW)	Set on forwarding	-	-	4-60
	H203	2 nd allowable motor selection	0.20-75.0(kW)	Set on forwarding	-	-	4-60
	H004	1 st motor pole selection	2/4/6/8(pole)	4	-	-	4-60
	H204	2 nd motor pole selection	2/4/6/8(pole)	4	-	-	4-60
H006	1 st stabilized factor	0. - 255.	100.	✓	✓	4-60	
H206	2 nd stabilized factor	0. - 255.	100.	✓	✓	4-60	
P001	Option1 operation selection on error	00(TRP)/01(RUN)	00	-	✓	4-60	
P002	Option2 operation selection on error	00(TRP)/01(RUN)	00	-	✓	4-60	
U001	User1 selection	no/d001-P002	no	-	✓	4-59	
U002	User2 selection	no/d001-P002	no	-	✓	4-59	



Explanation of Function

U003	User3 selection	no/d001-P002	no	-	✓	4-59
U004	User4 selection	no/d001-P002	no	-	✓	4-59
U005	User5 selection	No/d001-P002	no	-	✓	4-59
U006	User6 selection	no/d001-P002	no	-	✓	4-59
U007	User7 selection	no/d001-P002	no	-	✓	4-59
U008	User8 selection	no/d001-P002	no	-	✓	4-59
U009	User9 selection	no/d001-P002	no	-	✓	4-59
U010	User10 selection	no/d001-P002	no	-	✓	4-59
U011	User11 selection	no/d001-P002	no	-	✓	4-59
U012	User12 selection	no/d001-P002	no	-	✓	4-59

4.3 Explanation of function

4.3.1 Monitor mode

Output frequency monitor

Indication code d001 displays the frequency the inverter outputs.

The data is displayed as follows.

When d001 is displayed, the monitor lamp "Hz" is illuminated.

(Display)

0.00 - 99.99 : Display is in 0.01Hz unit.

100.0 - 400.0 : Display is in 0.1Hz unit.

Relation code

d001: Output frequency
monitor

Output current monitor

Indication code d002 displays the output current value.

The data is displayed as follows.

In case of displaying d002, the monitor lamp "A" is illuminated.

(Display)

0.0 - 999.9 : Display is in 0.1A unit.

Relation code

d002: Output current
monitor

Operation direction monitor

Indication code d003 displays the direction that the inverter output is rotating. Forward, reverse or stop.

On operating the inverter (in case of forward or reverse), the RUN lamp will illuminate.

(Display)

F : Forward

o : Stop

r : Reverse

Relation code

d003: Operation direction
monitor

PID feedback monitor

When you select PID function (01) in A071, the inverter displays the feedback value changed by A075 (PID scale).

" Display of monitor part " = " Feedback quantity " x " PID scale "

(Frequency command value) (A075)

(Setting)

A071 : 0.1(PID is effective)

A075 : 0.01-99.99(Display is 0.01-99.99(Set with the 0.01 unit)

(Display)

0.00 - 99.99 : Display is in 0.01 unit.

100.0 - 999.9 : Display is in 0.1 unit.

1000 - 9999 : Display is in 1 unit.

{100 - {999 : Display is in 10 unit.

Relation code

d004: PID feedback monitor
A071:PID selection
A075: PID scale


Intelligent input monitor

The LED display will monitor the state of the intelligent inputs.


(Example)

FW; input intelligent 2,1:ON

Input intelligent 5, 4, 3:OFF

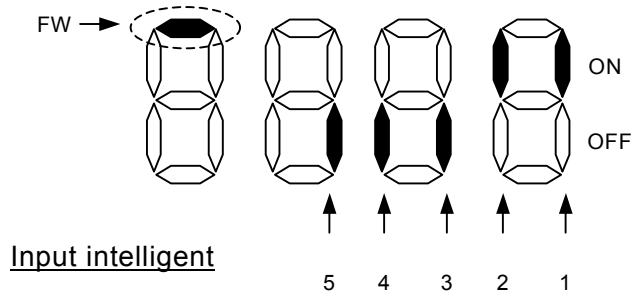

Relation code
d005: Intelligent input monitor

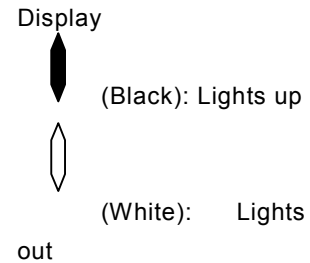



Intelligent output monitor

The LED display will monitor the state of the intelligent outputs.

(Example)

Output intelligent 12, 11: ON

Output alarm A: OFF

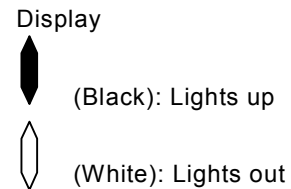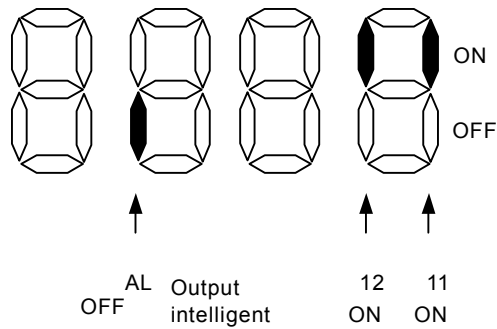

Relation code
d006: Output intelligent monitor

Frequency conversion monitor

This inverter displays the value changed by the Inverter output frequency and the value set in b086 on the monitor part.

“Monitor part of display” = “ output frequency(d001)” x “ output frequency factor(b086)”

(Display) Display of d007

0.00 - 99.99: Display is in 0.01 unit.

100.0 - 999.9: Display is in 0.1 unit.

100. - 9999.: Display is in 1 unit.

1000 - 3996 :Display is in 10 unit.

Relation
d007: Frequency conversion monitor
b086: Frequency conversion factor

(Range of setting) The setting range of b086

0.1 - 99.9 :Set it with the 0.1 unit.

(Example)Output frequency (d001):50.00Hz

When the frequency conversion factor (b086) is 1.1,

the frequency conversion monitor (d007) displays “55.00” as “50 x 1.1 = 55.00”.

Output voltage monitor

This inverter displays the output voltage of the inverter converted into the alternating Voltage.

The monitor lamp “V” should illuminate while the contents of d013 are displayed.

(Display)

0.0 - 600.0 :Display is in 0.1V unit.

Relation code
d013: Output voltage monitor

Output electric power monitor

Display output electric power from inverter.

The monitor lamp “kw” (“V” and “A”) should illuminate while the contents of d014 is displayed.

(Display)

0.0 - 999.9 :Display is in 0.1kw unit.

Relation code
d014: Output electric power monitor

Accumulated time monitor on RUN

The operation time of inverter is accumulated and the value is displayed.

(Display)

- 0. - 9999. : Display is in 1 hour units.
- 1000 - 9999 : Display is in 10 hour units.
- {100 - {999 : Display is in 100 hour units.

Relation code
d016: Accumulated time monitor on RUN

Power ON time monitor

This accumulates the time running to the inverter and displays the value.

(Display)

- 0. - 9999. : Display is in 1 hour units.
- 1000 - 9999 : Display is in 10 hour units.
- {100 - {999 : Display is in 100 hour units.

Relation
d017: Power ON time monitor

Trip time monitor

This displays the number of inverter trips.

(Display)

- 0. - 9999. : Display is in 1 times unit.
- 1000 - 6553 : Display is in 10 times unit.

Relation code
d080: Trip time monitor

Trip monitor 1-6

This displays the details for the last six protective trips.

The trip monitor 1 displayed the details of the last trip.


(Display contents)

- [1] Trip Code (Display anything from E01 to E79.)(Notes 1)
- [2] Output frequency on tripping (Hz)
- [3] Output current on tripping (A)
- [4] The direct voltage (between P and N) on tripping (V)
- [5] The accumulated time inverter was operating until tripping (hr)
- [6] The accumulated time inverter was run until tripping (hr)

(Note 1) Please refer to the pages 4.4 Protection function list (2) Trip monitor display.

Relation code
d081: Trip monitor 1
d082: Trip monitor 2
d083: Trip monitor 3
d084: Trip monitor 4
d085: Trip monitor 5
d086: Trip monitor 6

The methods of trip monitor

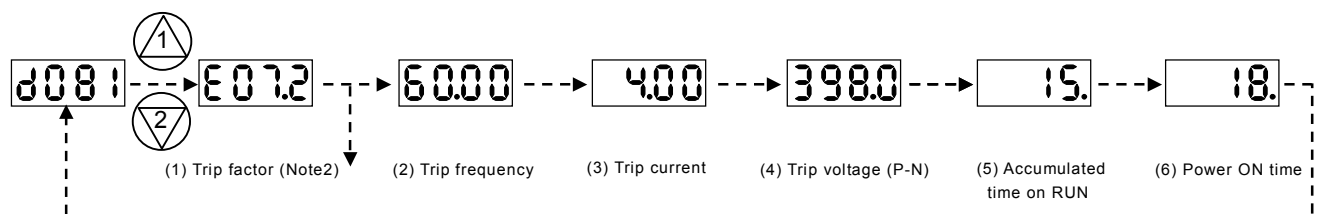

(Note2) In case of no tripping, - - - is displayed.

4.3.2 Function mode

Setting of the output frequency

Setting the output frequency of the motor.

The output frequency is set by F001, when the frequency command select (A001) is set to 02.

Please refer to the frequency command select (A001) about other methods of frequency setting.

When a frequency is set in F001, the same value is automatically set in both Multispeed 0 (A0200 and the second set of motor data multispeed 0 (A220) when the SET terminal is ON. In the case of using SET, you will need to assign 08(SET) to an intelligent input terminal.

Relation code input

- F001 :Output frequency
- A001 :Frequency command select
- A020/A220: 1st/2nd multistage speed zero
- C001-C005: Output intelligent

Set item	Function code	Data	Contents
Output frequency	F001	0.0, start frequency-First/Second highest frequency	Unit : Hz "F001" = "A020"
Multistage speed zero	A020/A220		Second control setting of "F001" = "A220"

Operation direction

This is effective when the operating command is set by the digital operator.

Relation code

F004: Operation direction select

Function code	Data	Contents
F004	00	Forward
	01	Reverse

Selection with limit of operation direction

The direction of the motor can be restricted.

Relation code

b035: Selection with limits of operation direction

Function code	Data	Contents
b035	00	Forward/reverse is effective.
	01	Only forward
	02	Only reverse

Relation code

A001:Frequency command

Frequency command selection

Select the method of frequency command.

When 0-10Vdc is inputted to the frequency command by 02-L terminal, operation direction of motor reverses.

On output frequency monitor d001, you can't get information about forward/reverse. So be sure with operation direction monitor d002.

Function code	Data	Contents
A001	00	Setting frequency with the potentiometer the digital operator has.
	01	Setting frequency with control terminals (Terminals: O-L, OI-L, O2-L)
	02	Setting frequency with digital operator(F001), remote operator.
	03	Setting frequency with RS485 terminals for communication.
	04	Setting frequency with option board 1.
	05	Setting frequency with option board 2.

Operation command selection

Select the control of RUN/STOP commands.

Operation command from the control terminals (Terminal)

Start/Stop by ON/OFF of control terminals.

Forward : FW-CM1 terminal

Reverse : RV-CM1 terminal

Put 01(RV) to an intelligent Input terminal.

When using the FW terminal, it is possible to change the contact from N/O to N/C by setting a or b (respectively) in C019.

When operating from the digital operator, set operation direction in F004.

Or operate Start/Stop with RUN key/STOP key on the digital operator.

Relation code

A002 : Operation command selection
 C001-C005: Input intelligent
 C019 : Inputting FW a/b (NO/NC) selection
 F004 : Operation direction select

Setting item	Function code	Data	Contents
Operation command selection	A002	01	Start/Stop with control terminals(Terminal).(FW, RV)
		02	Start/Stop with digital operator, remote operator.
		03	Start/Stop with RS485 terminals for communications.
		04	Start/Stop with option board 1.
		05	Start/Stop with option board 2.
Input FW a/b (NO/NC) selection	C019 C011-C015	00	a contact (N/O)
		01	b contact (N/C)

Selection on stop

When stop is commanded from the digital operator or the control terminals (Terminal), select the stop after slowing-down according to slowing-down time or the free run stop.

When the second cycle is started while in free run stop, the inverter follows the free-run stop selection b088 and restarts.

(Refer to the item of free-run stop.)

Relation

b091 : Selection on stop
 F003/F203: First/Second deceleration time
 b003 : Waiting time for retrying
 b007 : Frequency setting of frequency coincidence

Setting item	Function code	Data	Contents
Selection on Stop	b091	00	Normal stop (Decelerated stop)
		01	Free-run stop
Selection of free-run stop	b088	00	0Hz start
		01	Start frequency matching
Frequency setting of frequency matching	b007	0.00-400.0	Unit : Hz
Waiting time for retrying	b003	0.3-100.	Unit : second

Selection of Stop key

Even though the control terminals are selected for the operation command, you can still set whether the stop key of

operator (digital operator etc) is effective or not.

Function code	Data	Contents
b087	00	The stop key is effective.
	01	The stop key is ineffective.

Relation code

b087: Selection of stop key

Adjustable time


The acceleration and deceleration time can be set.

Set a long time to accelerate or decelerate slowly or set a short time to accelerate or decelerate quickly.

The time setting is the time it takes to accelerate from zero to the maximum frequency and to decelerate from the maximum frequency to zero.

Relation code	
F002/F202:	First/Second acceleration time
F003/F203:	First/Second deceleration time
A004/A204:	1st/2nd maximum frequency

Set item	Function code	Limit of setting	Contents
Acceleration time	F002/F202	0.01-3600.	Unit : second Setting acceleration time from zero to maximum frequency.
Deceleration time	F003/F203	0.01-3600.	Unit : second Setting deceleration time from maximum frequency to zero.

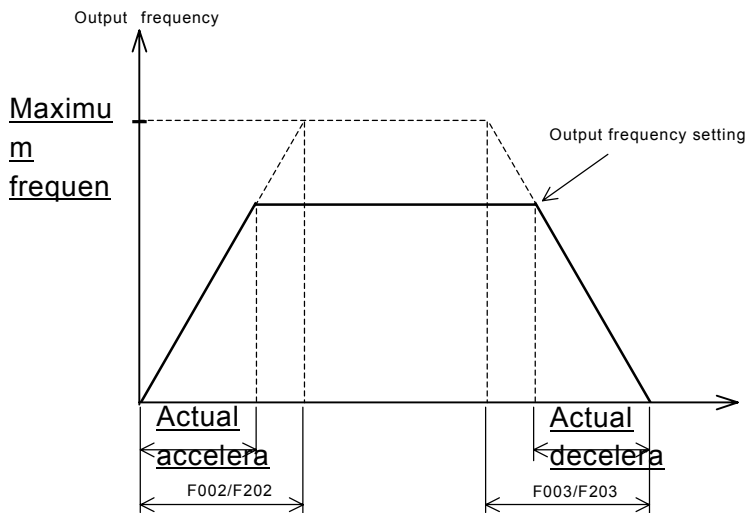

However short you set the adjustable time, the adjustable time of the actual motor can't be shorter than the shortest

adjustable time determined by the inertial Effect J of the mechanical system and motor torque.

If you set the time shorter than the shortest adjustable time, a protection trip of OC or OV may occur.

Acceleration time t_s

$$t_s = \frac{(J_L + J_M) \times N_M}{9.55 \times (T_s + T_L)}$$

J_L : J of the load converted into motor shaft (kg/m²)

J_M : J of the motor (kg/m²)

N_M : Motor revolving (r/min)

T_s : The maximum motor torque on inverter driving (Nm)

T_B : The maximum motor torque on inverter driving (Nm)

T_L : Needed transit torque (Nm)

Deceleration time t_B

$$t_B = \frac{(J_L + J_M) \times N_M}{9.55 \times (T_B + T_L)}$$

Base frequency


Base frequency and motor voltage
AVR function

Relation code

A003/A203: 1st/2nd base frequency
A081: AVR selection
A082: Motor voltage selection

(1) Base frequency and motor voltage

On selection of base frequency and motor voltage, set the output of the inverter (frequency voltage) to the motor rating.

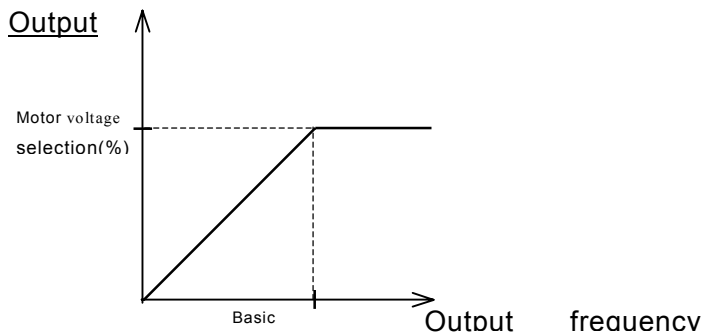

The Base frequency is the nominal frequency of the motor, this value can be found on the nameplate of the motor. It is **important** to match the Base frequency (A003) to this nominal value or there is risk of damage to the motor.

If a motor has a base frequency higher than 60Hz, it is considered to be a special motor. In this situation, it is important to make sure the maximum output current of the inverter is higher than the FLC of the motor.

The Motor Voltage Selection is the nominal voltage of the motor, this value can be found on the nameplate of the motor. It is **important** to match the Motor Voltage (A082) to this nominal value or there is risk of damage to the motor.

When changing second base frequency (A203) an intelligent input terminal must be set to 08(SET) and switched on.

Setting item	Function code	Setting limit	Contents
Base frequency	A003/A203	30.-1st/2nd maximum frequency	Unit:Hz
Motor voltage selection	A082	200/215/220/230/240	Unit:V When inverter is 200V class, selection is possible.
		380/400/415/440/460/480	Unit:V When inverter is 400V class, selection is possible.
		575/600	Unit:V When inverter is 600V class, selection is possible.

(2) AVR function

Even if the incoming voltage changes, this function will keep the output voltage and a constant voltage level.

The output voltage to the motor in this function references to the voltage selected on motor voltage selection.

Select Yes/No of this function on A081 AVR selection.

Function code	Data	Contents	Description
A081	00	Always ON	This function is effective on acceleration, low velocity, deceleration.
	01	Always OFF	This function is ineffective on acceleration, low velocity, deceleration.
	02	On decelerating OFF	This increases a loss of motor and reduces the energy regenerated to inverter on decelerating.

Maximum frequency

Set the maximum frequency value of the inverter.

This set value is the maximum frequency that the inverter will achieve when


It receives top speed reference from the control terminals or the digital operator.

To the change the 1st/2nd maximum frequency, set an intelligent input terminal to 08(SET) and switch the input ON.

The Inverter output voltage from the base frequency to the maximum frequency is the same level as the voltage selected on the motor voltage selection.

Relation code
A004/A204: 1st/2nd maximum frequency

Function code	Limit of setting	Contents
A004/A204	30.-400.	Unit : Hz

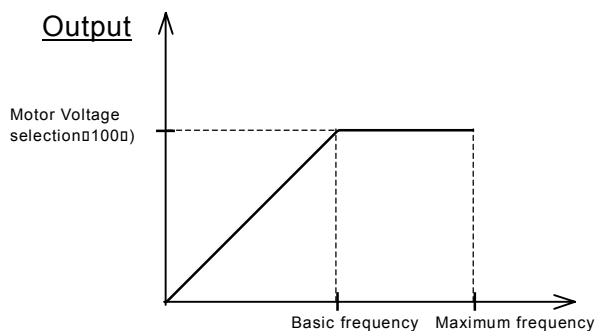

Carrier frequency

The carrier frequency of the PWM wave-form output from the inverter is adjustable by changing b083.

If the carrier frequency is set higher, the audible noise from motor will be reduced but the RFI noise and the leakage current may be increased.

This function may help to avoid the resonant frequency of the motor or the mechanical system.

Relation code
b083: Carrier

Function code	Limit of setting	Contents
b083	0.5-15.0 (Note1)	Unit: kHz

(Note1) The maximum value of the carrier frequency in order to achieve full output current is different depending on the capacity. When raising the carrier frequency, the rated output current will be reduced.

Contents	Maximum carrier frequency	Derating on carrier frequency = 12kHz
11kW	12	95%
15kW	12	95%
18.5kW	10	90%
22kW	6	80%
33kW	3	70%

External analog output

This inverter has three kinds of external analog output terminals.

- O-L terminal : 0 - 10Vdc
- OI-L terminal : 4 - 20mA
- O2-L terminal : -10 - 10V

Relation code

- A005: AT terminal selection
- A006: O2 Selection
- C001-C005: Intelligent input terminal

The setting contents of this function is as follows.

Setting item	Function code	Data	Contents
AT terminal selection	A005	00	Change of O/OI With AT terminal } AT terminal ON : OI-L valid AT terminal OFF : O-L valid
		01	Change of O/O2 with AT terminal } AT terminal ON : O2-L valid AT terminal OFF : O-L valid
O2 selection	A006	00	Single
		01	Auxiliary frequency command of O, OI(No reverse)
		02	Auxiliary frequency command of O, OI(Reverse)

Assign 11(AT) to intelligent input terminal.


The frequency setting is the values from terminals O, OI and O2 when 11(AT) isn't assigned.

The following frequency command methods are available by combining A005, A006 with the intelligent output AT terminal.

In the case that reverse and FW(forward) terminals are ON, the inverter operates reversely when (main frequency command + auxiliary frequency command) < 0.

	A006	A005	AT terminal	Main frequency command	Existence of Auxiliary frequency command(O2-L)	Existence Of Reverse
Intelligent input terminal on assigning AT	00	00	OFF	O-L	No	No
			ON	OI-L	No	
		01	OFF	O-L	No	Yes
			ON	O2-L	No	
	01	00 (Example1)	OFF	O-L	Yes	No
			ON	OI-L	Yes	
		01	OFF	O-L	Yes	
			ON	O2-L	No	
02	00 (Example2)	OFF	O-L	Yes	Yes	
		ON	OI-L	Yes		
	01	OFF	O-L	Yes		
		ON	O2-L	No		
Intelligent input Terminal when Don't assign AT	00	-	-	Adding O-L and OI-L	Yes	Yes
	01	-	-	Adding O-L and OI-L	Yes	No
	02	-	-	Adding O-L and OI-L	Yes	Yes

No reverse

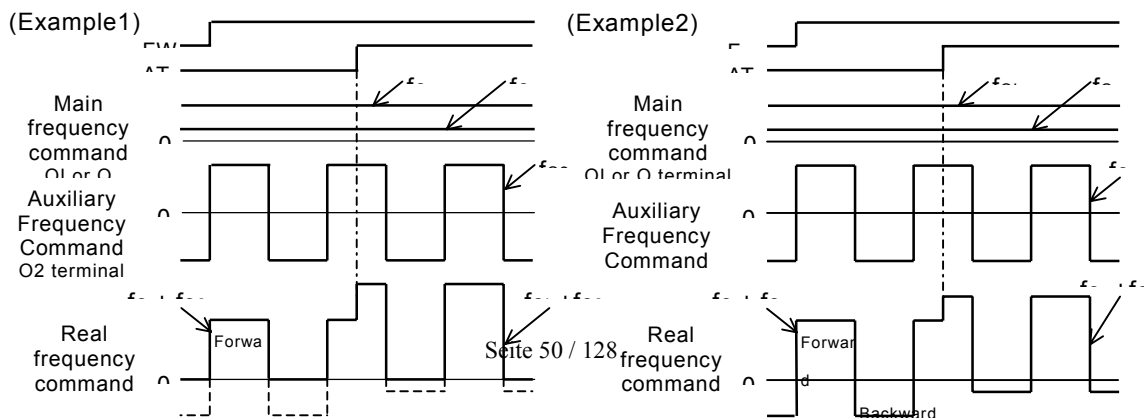

Output Frequency Start/End

External analog signal from the control terminals

(frequency command)

- O-L terminal : 0 - 10V
- OI-L terminal : 4 - 20mA
- O2-L terminal : -10 - 10V

Set output frequency for one of the above



(1) Start, End of O-L terminal, OI-L terminal

Set item	Function code	Data	Contents
O/OI start	A011/A101	0.00-400.0	Unit : Hz Set starting frequency
O/OI end	A012/A102	0.00-400.0	Unit : Hz Set ending frequency
O/OI start rate	A013/A103	0.-100.	Unit : % Set start rate for output frequency command 0-10V, 4-20mA
O/OI end rate	A014/A104	0.-100.	Unit : % Set end rate for output frequency command 0-10V, 4-20mA
O/OI start Selection	A015/A125	00	External start frequency Output frequency from 0 to A013/A103 outputs the value of A011/A101
		01	0Hz Output frequency from 0 to A013/A103 outputs the value of 0Hz

When the input is from 0 to 5V with O-L terminal, set A014 to 50%.

(Example 1) A015/A105 : 00

(Example 2) A015/A105 : 01

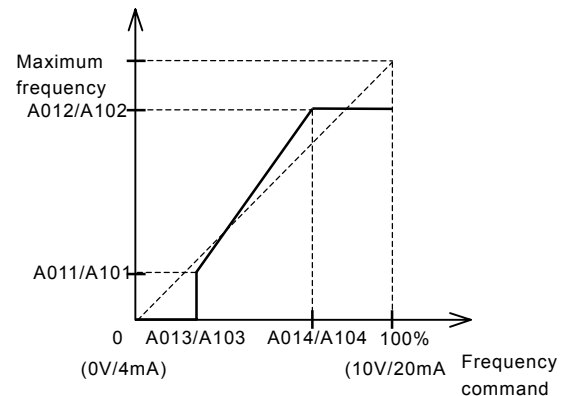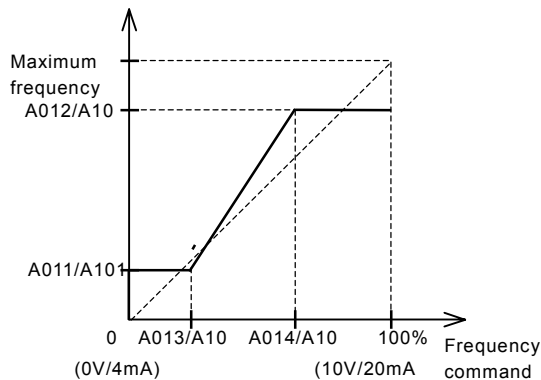

(2) Start, End of O2-L terminal

Set item	Function code	Data	Contents	Notes
O2 start	A111	-400.-400.	Unit : Hz Set starting frequency	(Example 3)
O2 end	A112	-400.-400.	Unit : Hz Set ending frequency	
O2 start rate	A113	-100.-100.	Unit : % Set starting rate for output frequency command -10-10V (Notes)	
O2 end rate	A114	-100.-100.	Unit : % Set ending rate for output frequency command -10-10V(Notes)	


(Notes) The rates of -10V-10V is following.

-10V- 0V:-100-0%

0V-10V:0-100%

For example, in case of use with O2-L terminal, set -50% to A113, 50% to A114.

(Example 3)

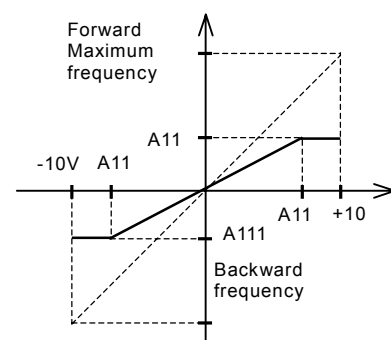

Setting analog input filter

Set the internal filter of the frequency setting signal of voltage or current from the control terminals

Relation code
A016: O, OI, O2 filter

It is important to first remove the source of the noise to the system.

When stable operation can not be achieved due to the effect of electrical noise, set a larger value.

The response will be slower by setting a larger value. The limit of setting is about 10ms-60ms(set value : 1-30)


Function code	Limit to set	Contents
A016	1.-30.	Can set with the 1 unit.

Output voltage gain

Regarding the voltage selected on A082 motor voltage selection as 100 %, set the rate of the voltage which the inverter outputs for the voltage selected

Relation code
A045: Output voltage gain
A082: Motor voltage selection

Function code	Limit to set	Contents
A045	20.-100.	Unit:%

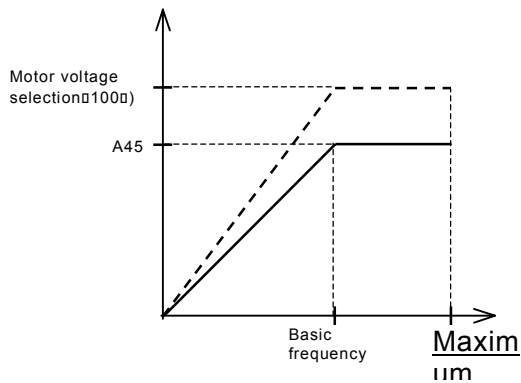

Period : The limit from 10% of base frequency to base frequency is reduced torque characteristic.

The voltage is output in the curve of 1.7 power for frequency.

Period © : The voltage is constant from the base frequency to the maximum frequency.

(3) Free V/f setting

The free V/f setting sets optional V/f characteristics by setting the voltage and frequency in seven parts.(b100-b113)


The setting of free V/f setting operates always to be $1 \leq 2 \leq 3 \leq 4 \leq 5 \leq 6 \leq 7$.

Please set first free V/f setting 7 because the initial value is all Ohz.


When the free V/f setting is valid, the function of torque boost(A041/A241), basic frequency(A003/A203), is invalid.

Set item	Function code	Data	Contents
Free V/f frequency7	b112	0.- 400.	Unit : Hz
Free V/f frequency6	b110	0.- Free V/f frequency7	
Free V/f frequency5	b108	0.- Free V/f frequency6	
Free V/f frequency4	b106	0.- Free V/f frequency5	
Free V/f frequency3	b104	0.- Free V/f frequency4	
Free V/f frequency2	b102	0.- Free V/f frequency3	
Free V/f frequency1	b100	0.- Free V/f frequency2	
Free V/f voltage7	b113	0.0 - 800.0	
Free V/f voltage6	b111		
Free V/f voltage5	b109		
Free V/f voltage4	b107		
Free V/f voltage3	b105		
Free V/f voltage2	b103		
Free V/f voltage1	b101		

(Example)

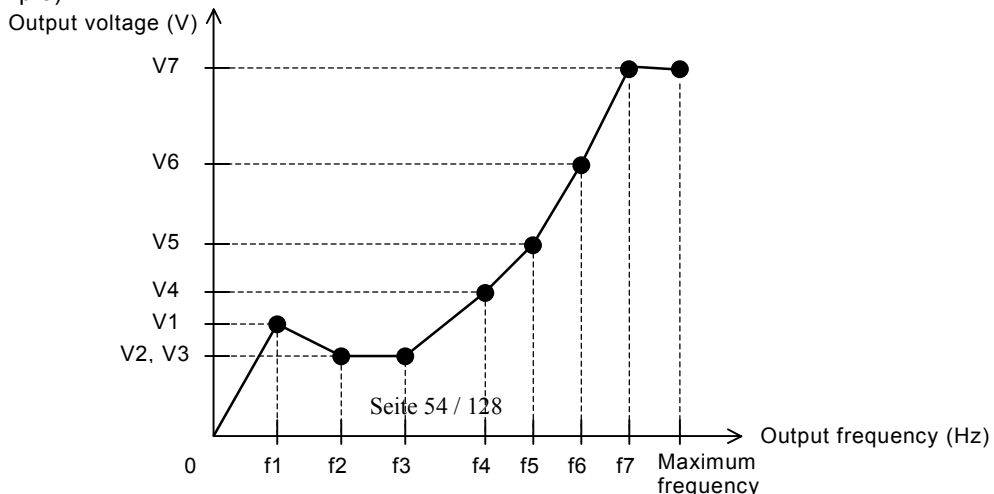

(Note) Even if you set 800V for free V/f voltage1-7, output of inverter can't be more than the input voltage or the AVR setting voltage.

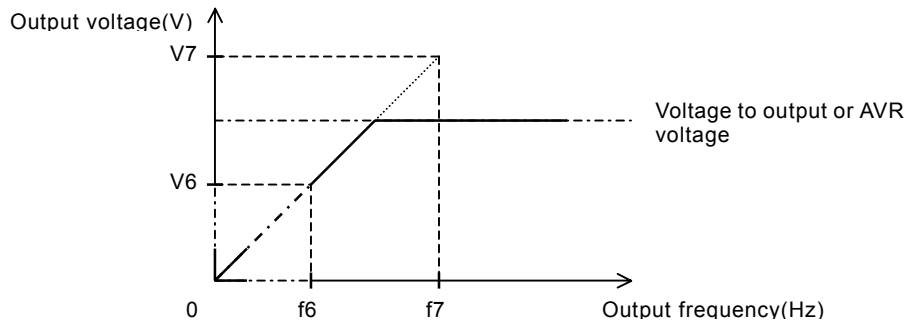

Torque boost

A correctly installed motor and careful attention to voltage drop in the wiring will improve the motor torque at low speed. Setting of A041/A241 will select between manual torque boost and automatic torque boost, the level of torque boost corresponds to the set motor capacity selection (H003/H203) and the motor pole selection (H004/H204).

Relation code

A041/A241: 1st/2nd torque boost selection
 A042/A242: 1st/2nd manual operation torque boost
 A043/A243: 1st /2nd manual operation torque boost break point
 H003/H203: 1st/2nd motor capacity selection
 H004/H204: 1st/2nd motor pole selection

Set item	Function code	Data	Contents
Torque boost	A041/A241	00	Manual torque boost
		01	Automatic torque boost
Manual torque boost	A042/A242	0.0-20.0	Unit:% Level corresponding to output Voltage (100%)
Manual torque boost break point	A043/A243	0.0-50.0	Unit:% Level corresponding to base frequency

(1) Manual torque boost

The values set up with A042/A242 and A043/A243 is outputted.


A042/A242 sets a percentage level where the base frequency voltage is 100%.

The level set is the value of torque boost output voltage at 0 Hz.

When using the manual torque boost, it should be noted that overuse will cause saturation of the motor and may cause damage.

The manual torque boost break point is the frequency at which the voltage torque boost is switched off and normal operation resumes.

To change from A041 and A042 to A241 and A242 an intelligent input needs to be set to 08 (SET) and switched on.

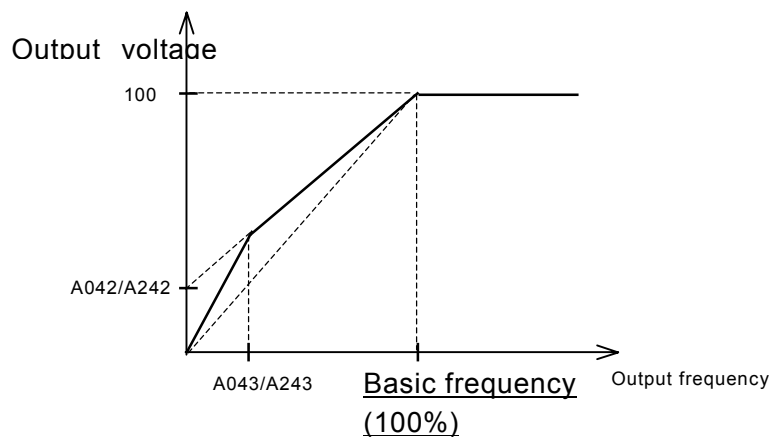

(2) Automatic torque boost

The output voltage is adjusted automatically by the condition of the load.

When using automatic torque boost it is important that the following two parameters are set correctly.

Set item	Function code	Setting limit	Contents
Motor capacity selection	H003/H203	0.20-75.0	Unit : kW
Motor pole selection	H004/H204	2/4/6/8	Unit : pole

Direct current braking

A dc voltage can be applied to the motor windings in order to lock the motor shaft and avoid overrun at low speeds.

There are two methods of activating the dc braking, Outside which is through the intelligent input terminals and Inside which is automatically started at a specific frequency.

Relation code


A051: DC braking selection	A056: DC braking edge/level
A052: DC braking frequency selection	
A053: DC braking late time	A057: Starting DC braking power
A054: DC braking power	A058: Starting DC braking time
A055: DC braking time	A059: DC carrier frequency

Set item	Function code	Data	Contents
DC braking selection	A051	00	Inside DC braking : invalid
		01	Inside DC braking : valid
DC braking frequency	A052	0.00-60.00	Unit : Hz When the output reaches the set frequency and Inside DC braking is valid, DC braking is started.
DC braking late time	A053	0.0-5.0	Unit : second After DC braking time is reached, or DB terminal is ON, the late time is a delay before DC braking is started.
DC braking power /Starting DC braking power	A054/A057	0. ↑ ↓ 70.	Unit : Weak (Zero current) ↑ Strong (Inverter rating fairly 70% the DC current)
DC braking time	A055	0.0-60.0	Unit : second The DC braking is stopped after this time delay has elapsed. The time is started when the late time has elapsed.
DC braking edge/level selection	A056	00	Edge movement (Example 1-6-a)
		01	Level movement (Example 1-6-b)
Starting DC braking time	A058	0.0-60.0	Unit : second It is valid for inside DC braking. When operating command is ON, DC current is started.
DC braking carrier Frequency	A059	0.5-15	Unit : kHz

(1) DC braking carrier frequency

It is possible to alter the DC braking carrier frequency. However, if the DC braking carrier frequency is set higher than 3kHz, the value of maximum braking power level is automatically reduced as follows.

Set DC braking carrier frequency with A059.

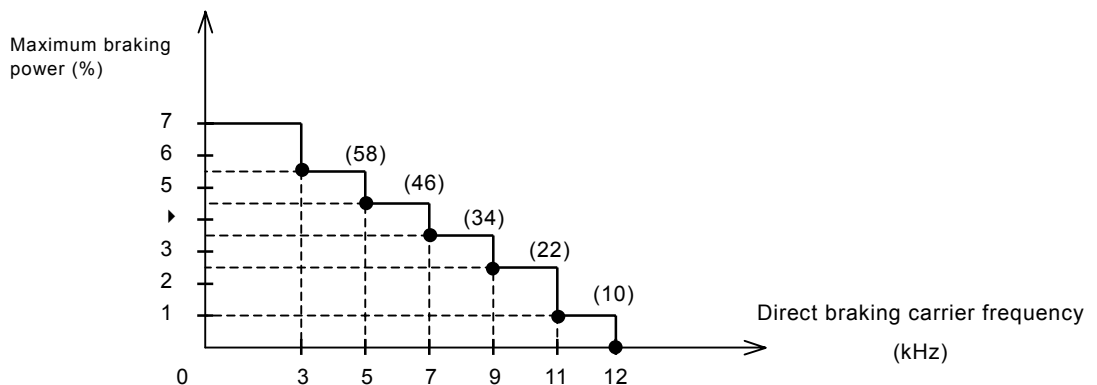

(2) Outside DC braking

Set 07(DB) to an intelligent input terminal.

DC braking is then switched by ON/OFF of DB terminal irrespective of DC braking selection A051.


Set strength of DC braking power with A054.

If DC braking late time A053 is set, the Inverter output is cut off for this time period, the motor will be free running.

After the late time passes, DC braking is started.

Please set DC braking time A055 or DC braking time by DB terminal paying attention to the heat of the motor.

Please set each setting in accordance with the system, after level action or edge action are selected with A056.

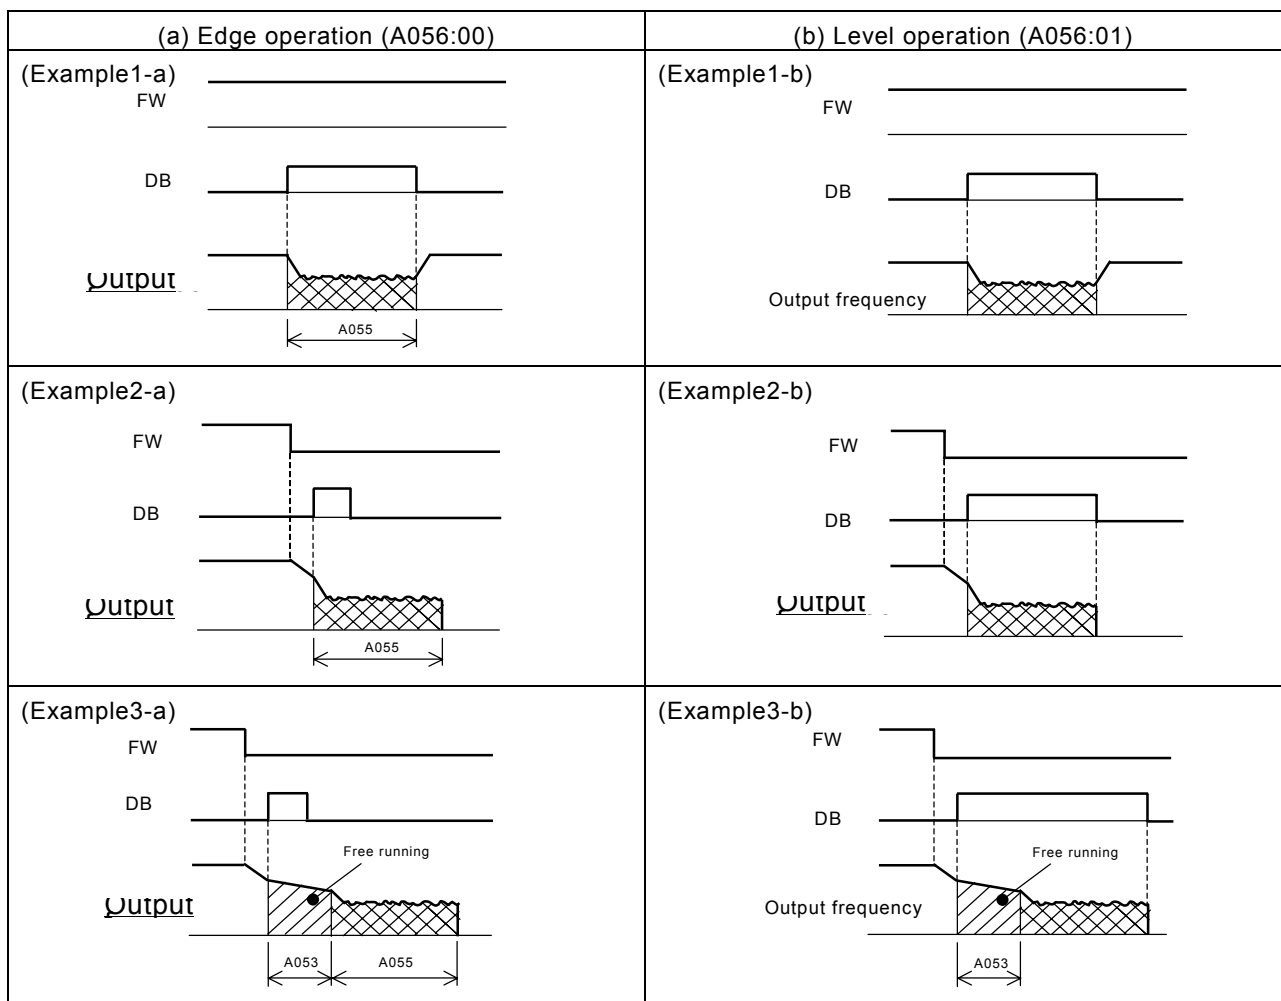

(3) Inside DC braking

When the inverter starts, and the DB terminal is not ON the inverter can operate dc braking.

When using inside DC braking, the DC braking selection A051 should be set 01.

Starting DC braking power is set with A057, DC braking time at starting is set with A058.

Braking power setting except starting time, set with A054.

If DC braking late time A053 is set and the dc braking frequency is reached, the operating command (FW) is switched OFF. The inverter cuts the output and for the set time of A053, free running of the motor will occur. After finishing the set time in A053, DC braking is started.


Set the frequency at which the DC braking will operate at with A052.

The operation of Edge/Level selection when using inside DC braking is different.

Edge action: Give priority to A055 DC braking action time, operate DC braking according to set time.

After turning operating command (FW) OFF, when output frequency reaches the set value of A052, during setting A055 DC braking is run. Even if operation command is turned ON, during setting time of A055, DC braking is run.

Level action: Give priority to operating command, ignore DC braking time A055 and move to normal operation. When operation command is turned ON during DC braking, set time of A055 is ignored and normal operation is restored. (Example 5-b), (Example 6-b)

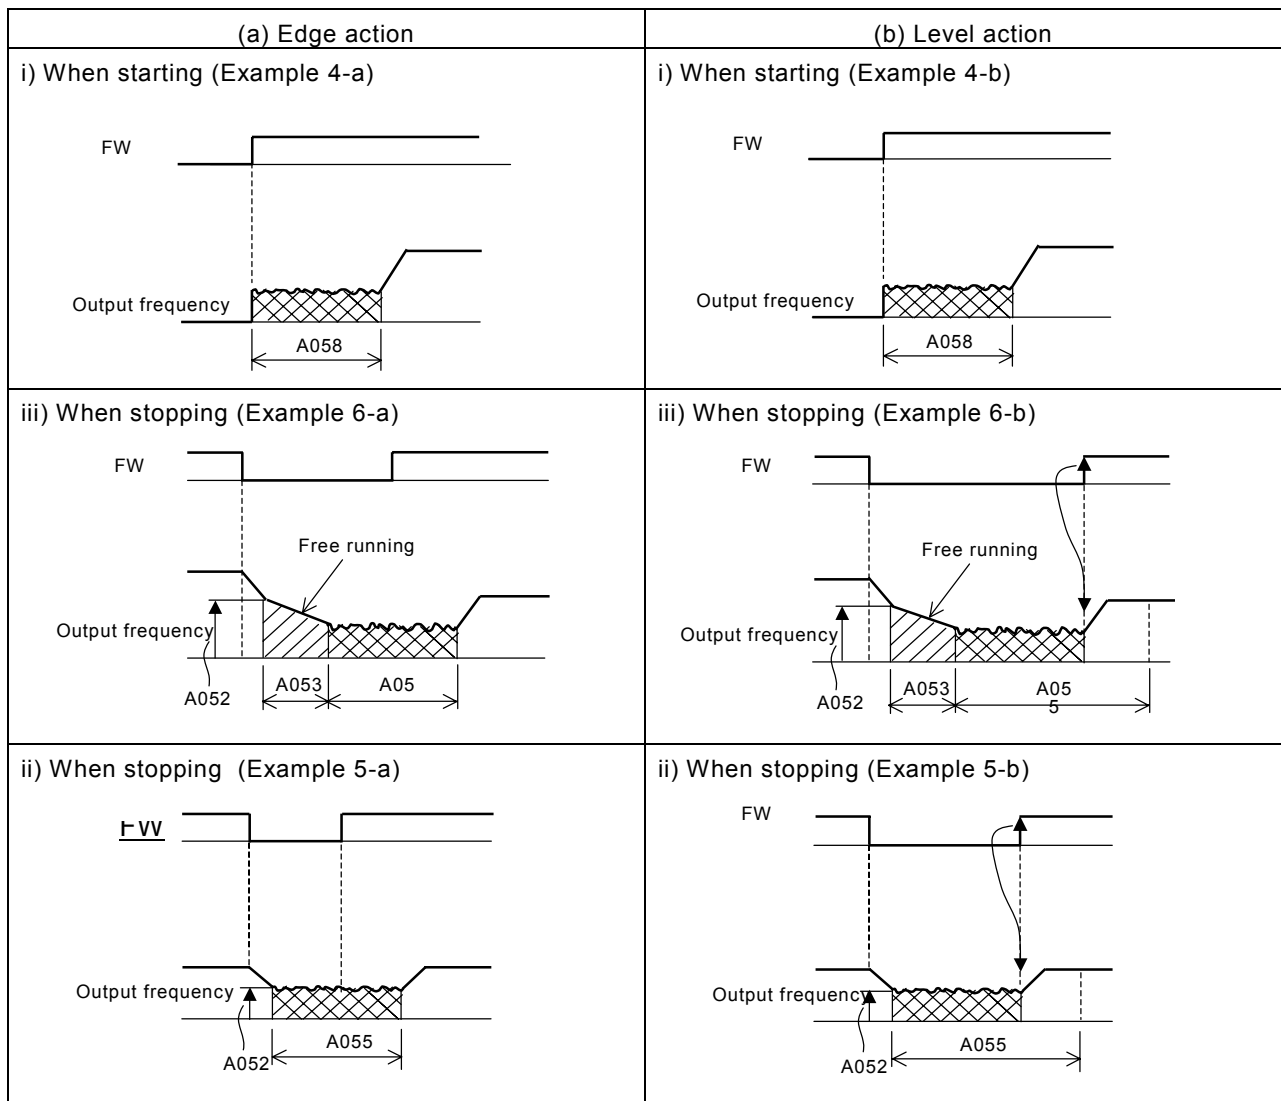

Frequency limiter

This function can set a maximum and minimum limit of the output frequency.

Even if a frequency command exceeds the maximum and minimum limiter the inverter will ignore this value and stop at the values set.

Set first maximum limiter on setting.


Be sure that the maximum limiter (A061/A261) > minimum limiter (A062/A262).

The maximum and minimum limiter will not operate if 0Hz is set.


A061/A261: 1st/2nd frequency maximum limiter
 A062/A262: 1st/2nd frequency minimum limiter

Set item	Function code	Setting limit	Contents
Frequency limiter max.	A061/A261	0.00, frequency min. limiter - max. frequency	Unit : Hz Setting max. of output frequency
Frequency min. limiter	A062/A262	0.00, starting frequency - max. frequency	Unit : Hz Setting min. of output frequency

(1) In use O-L, OI-L case

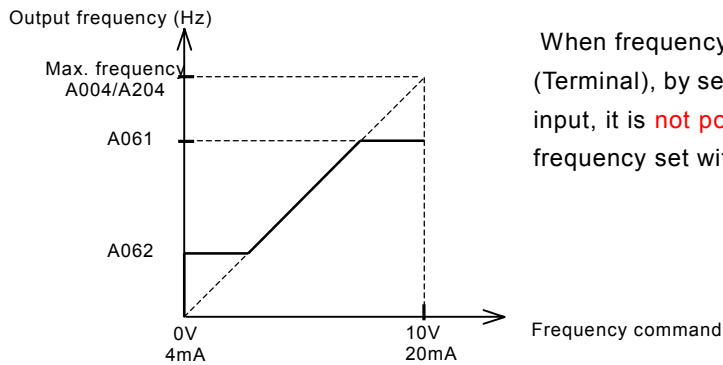

(2) In use O2-L case

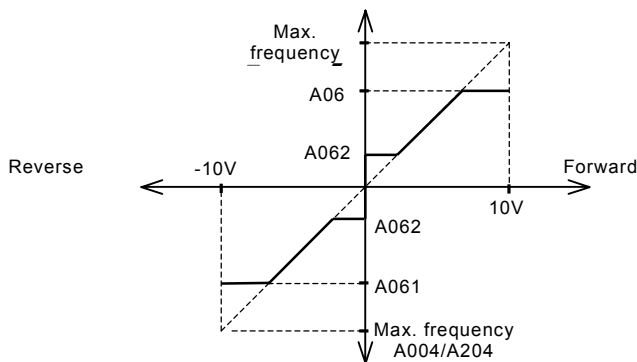

When using the minimum frequency limiter and 0v is inputted into O2 terminal, A062 applies to both forward and reverse directions.

(a) When operation command is control terminal (Terminal)(A002:01)

Terminal	Revolution when O2 is 0V
FW(ON)	A062 on forward side
REV(ON)	A062 on reverse side

(b) When operation command is operator (A002:02)

F004	Revolution when O2 is 0V
00	A062 on forward side
01	A062 on reverse side

Frequency Jump Function

Frequency jump can be used to avoid resonance points on machinery.

Frequency jump is to jump the frequency command and avoid usual operation within the limit of the jump frequency.


Output frequency changes continuously according to adjustable time.

It is possible three different points are set for the jump frequency.

Relation code
A063:Jump frequency1
A064:Jump frequency band1
A065:Jump frequency2
A066:Jump frequency band2
A067:Jump frequency 3
A068:Jump frequency band3

Set item	Function code	Setting limit	Contents
Jump frequency 1/2/3	A063/A065/A067	0.00-400.0	Unit: Hz Set the frequency f_j of center to jump.(Note)
Jump Width 1/2/3	A064/A066/A068	0.00-10.00	Unit:Hz (Note) Set 1/2 value of frequency band to jump

(Note) The frequency to jump is $f_j + 2$ (Hz).

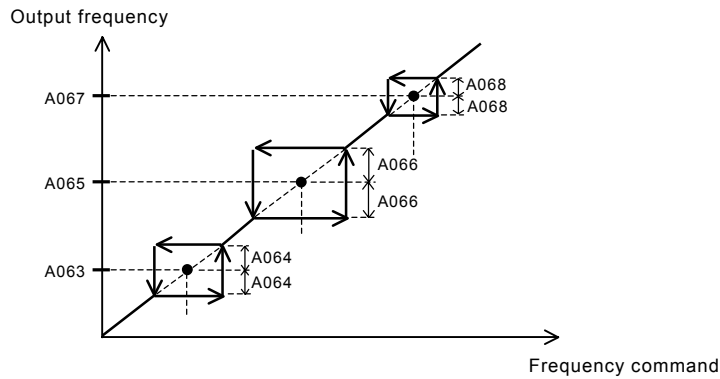


Acceleration stop function

When the inertial moment of a load is high, this is the function to wait until the slip of the motor on starting becomes smaller.

Use when the overcurrent trip occurs on starting.

Relation code
A069:Acceleration stop frequency

Set item	Function code	Data	Contents
Acceleration stop frequency	A069	0.00-400.0	Unit: Hz Set the frequency to be held.
Acceleration stop time	A070	0.0-60.0	Unit: second Set the time to hold the frequency.

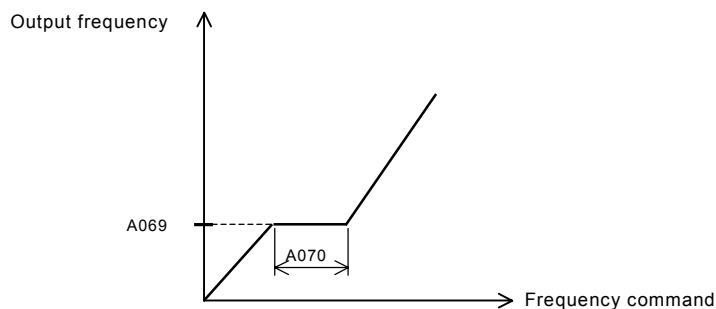

PID Function

This is the process control function of rate of flow, rate of wind and pressure.

In case of using with this function, set A071 to 01.

Assign 23 to intelligent input terminal, set ON (Valid).

Set item	Function code	Data	Contents
PID selection	A071	00	Invalid
		01	Valid
PID P gain	A072	0.2-5.0	Proportional gain
PID I gain	A073	0.0-3600.	Unit :second Integrating gain
PID D gain	A074	0.0-100.0	Unit : second Derivative gain
PID scale	A075	0.01-99.99	Unit :%
PID feedback selection	A076	00	OI-L:4-20mA
		01	O-L :0-10V
PID Deviation excessive level	C044	0.0-100.0	Unit :%

Relation	
A001	:Frequency command selection
A005	:AT selection
A006	:O2 selection
A071	:PID selection
A072	:PID P gain
A073	:PID I gain
A074	:PID D gain
A075	:PID scale
A076	:PID feedback selection
d004	:PID feedback monitor
C001-C005	: Intelligent input terminal
C021-C022	: intelligent

(1) Feedback selection


Select the terminals to use for feedback signal on A076.

Set value follows the frequency command selection A001 except the terminals selected with A076.

Or control terminal 01 is set with A001, the setting with the AT selection A005 is invalid.


The contents changes as following when O2 is selected with A006.

(2) Basic construction of PID control

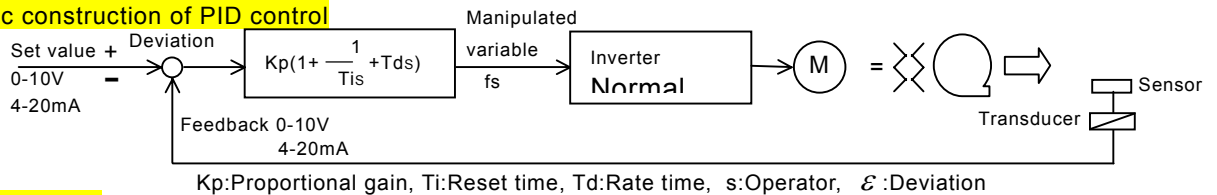


(3) Action of PID


[1] P action This is the acutation that the manipulated variable is in proportion to the command.

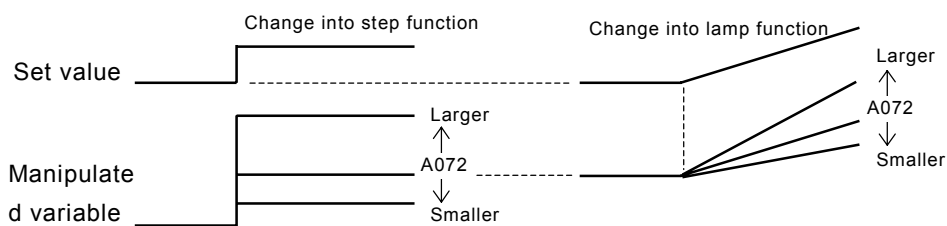

[2] I action This is the action that the manipulated variable increases with time in a straight line.

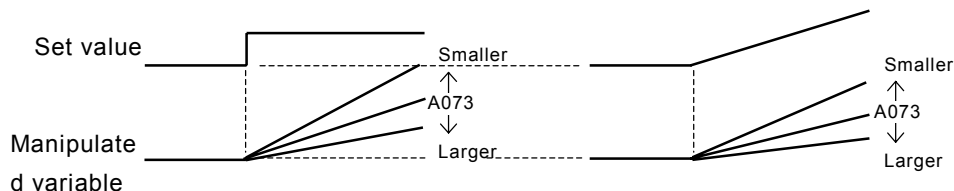

[3] D action This is the action that the manipulated variable is in proportion to the changing rate of command.

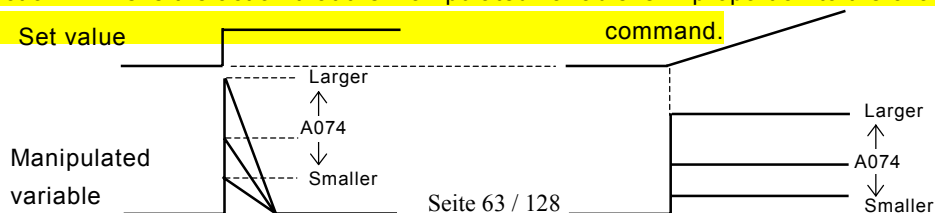

PI action combines above [1] and [2], PD action does [1] and [3], PID action does [1], [2] and [3].

(4) The adjustment of gain

Please adjust each gain according to the state as the following, when the response on the functional operation PID isn't stable.

In spite of changing command, the change of feedback signal is slow. → Raise P gain.

The feedback signal changes instantly but isn't stable. → Lower P gain.

The command and feedback signal doesn't coincide instantly. → Lower I gain.

The feedback signal vibrates unstably. → Raise I gain.

In spite of raising of P gain, the response is slow. → Raise D gain.

When P gain is raised, the feedback signal vibrates and isn't stable. → Lower D gain.

(5) The deviation excessiveness/Output

It is possible to establish the deviation excessiveness level C044 on PID control. When PID deviation amount to level C044, it is possible to output for the output intelligent.

C044 can be set from 0 to 100 and correspond with the command; from 0 to maximum.

Assign 04 (OD) to intelligent output terminal 11, 12(C021, C022).

(6) Feedback monitor of PID

Feedback signal of PID can be monitored.

The monitor value can be displayed by the product of PID scale A075.

"Mmonitor display" = "Feedback (%)" x "A075 setting"

(7) PID integral reset

This is the function to clear integral value of PID action.

Assign 24(PIDC) to intelligent input terminal.

It is cleared whenever PIDC is turned ON.

Don't turn absolutely ON PID terminal during PID action, because there is a possibility of overcurrent trip.

Turn ON PIDC terminal after turning OFF PID action.

Automatic energy-saving operation function

This function regulates the inverter output power automatically to a minimum while operating at constant speed.

This fits for the load of reduced torque characteristic of fans or pumps.

In case of operating by this function, set A085 to "01".

A086 can adjust the automatic operation, response time.

Relation code

A085: Operation mode selection

A086: Energy-saving response-

Set item	Function code	Data	Contents
Operation mode selection	A085	00	Normal operation
		01	Energy-saving operation

Set item	Function code	Data	Response	Accuracy
Energy saving Response / accuracy Adjustment	A086	0	Slow	High
		100	Fast	Low

Two-stage Acceleration and Deceleration Function

By setting this function, it is possible to change the rate of acceleration and deceleration and deceleration.



As methods to change the rate of acceleration and deceleration, you can select the method of changing by intelligent input terminal and the method of automatic changing by optional frequency.

In case of changing by intelligent input terminal, assign 09(2CH) to an Intelligent input terminal.

Set item	Function code	Data	Contents
Acceleration time 2	A092/A292	0.01-3600.	Unit : second (Example1,2)
Deceleration time 2	A093/A293	0.01-3600.	Unit : second (Example1,2)
Two-stage acceleration and deceleration selection	A094/A294	00	Changing by intelligent input terminal 09 (2CH) (Example1)
		01	Changing by two-stage acceleration and deceleration frequency (A095/A295, A096/A296) (Example2)
Two-stage acceleration frequency	A095/A295	0.00-400.0	Unit: Hz It is valid when two-stage acceleration and deceleration selection (A094/A294) is 01. (Example2)
Two-stage deceleration frequency	A096/A296	0.00-400.0	Unit: Hz It is valid when two-stage acceleration and deceleration selection (A094/A294) is 01. (Example2)

(Example1) In to set A094/A294 to 00 case

(Example2) In to set A094/A294 to 01 case

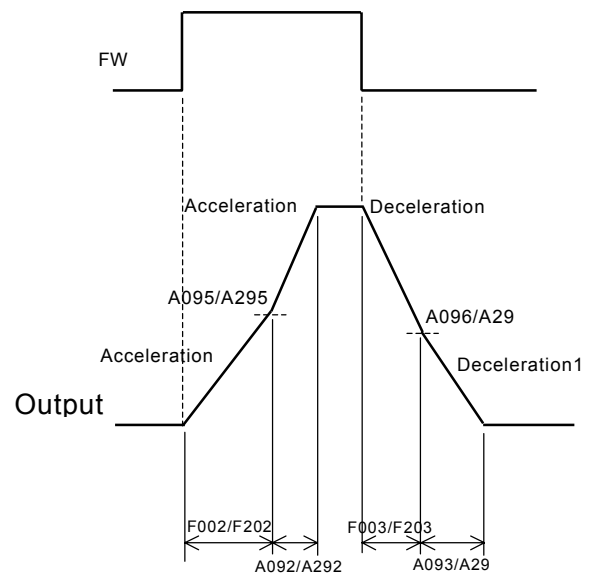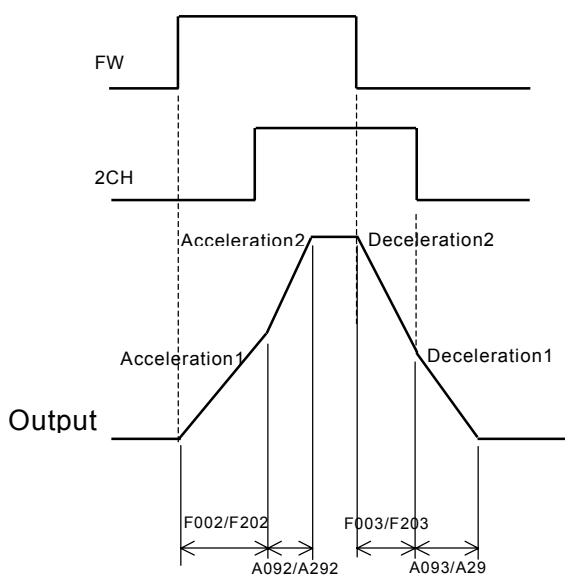

Acceleration and deceleration pattern

(1) Selection of pattern

Pattern of acceleration and deceleration speed is possible to set up corresponding to each system.

Select the pattern of acceleration and deceleration with A097 and A098.

Relation code

A097: Acceleration pattern selection

A098: Deceleration pattern selection


A131: Acceleration curve constant

Set value	00	01	02	03
Curve	Line	Sigmoid	U-shape	Reverse U-shape
A097 (Acceleration)				
A098 (Deceleration)				
Contents	Accelerate and decelerate in line until output frequency set value.	Collapsing the cargo such as the going up and down machine, conveyor it uses it for prevention.	Cutting the tension control, rolled book such as the volume collector machine it uses it for prevention.	

It is possible to set the pattern of both acceleration, deceleration.

(2) The curve constant (the swelling degree)

It makes the rough sketch reference and please decide the swelling degree.

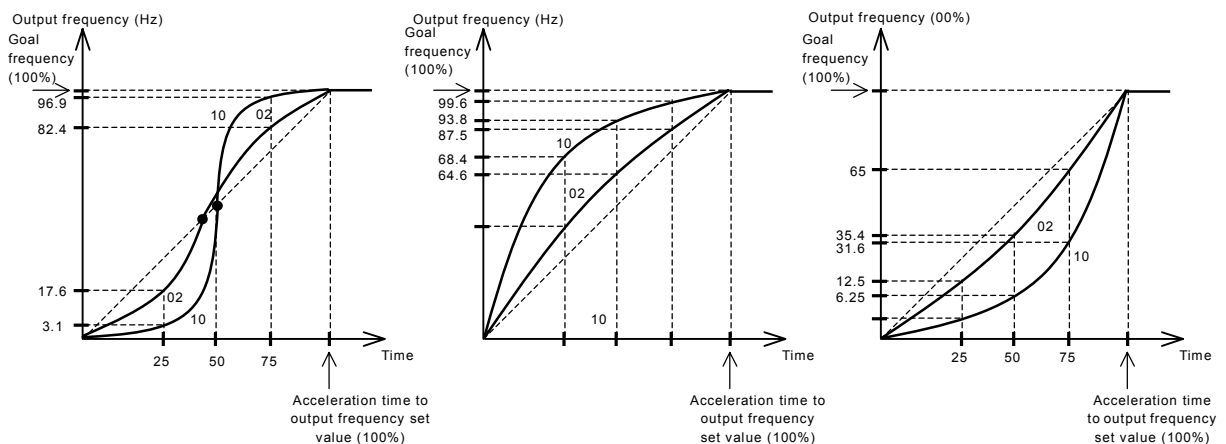

There is the range which the midway adjustable-speed time becomes fast in the S character pattern.

Instantaneous power failure / under-voltage

Instantaneous stop and start

(1) You can select whether the inverter trips or retries (restart)

when an instantaneous power failure/under-voltage occurs.

When retry function is selected with b001, and an instantaneous Stop/under-voltage trip occurs restart is tried 16 times and a trip will occur after 17 times.

And when retry function is selected, and an over-current or an over-voltage occurs, restart is tried 3 times and a trip will occur on the fourth time.

When an instantaneous power failure/under-voltage occurs, you can select execution of trip with b004.

To select a retry function with b001, set the following retry mode correspondent to each system.


Set item	Function code	Data	Description
Retry selection	b001	00	Trip.
		01	Restart from 0Hz on retry.
		02	Start equaling frequency on retry. (example1)
		03	Start f-equaling and stop decelerating on retry. After stop, start trip. (example1)
Allowable under-voltage power failure time	b002	0.3-1.0	Units : second If the instantaneous power failure time is shorter than the set time, a restart will occur. (example1) If the instantaneous stop time is longer than set time, trip. (example2)
Retry wait time	b003	0.3-100.	Units: second Delay before motor restart time.
Instantaneous power failure/under-voltage trip during stop	b004	00	Invalid Trip isn't caused and alarm isn't output.
		01	Valid Trip is cause and alarm is output.
Instantaneous power failure/under-voltage retry time selection	b005	00	Restart to 16 times on instantaneous stop under-voltage.
		01	Restart freely on instantaneous stop under-voltage.
Frequency setting for f-equaling	b007	0.00-400.0	Units: Hz When the frequency of the motor during free-run is less than this set frequency, restart with 0Hz is caused. (example3,4)

F-equaling start: The inverter reads the motor RPM and direction and restarts the inverter to match these readings.

Retry function (b001: 02): The timing chart in case of selection is following.


- 0 :Instantaneous stop power failure
- 1 :Allowable under-voltage power failure time(b002)
- 2 :Retry wait time(b003)

(example1)

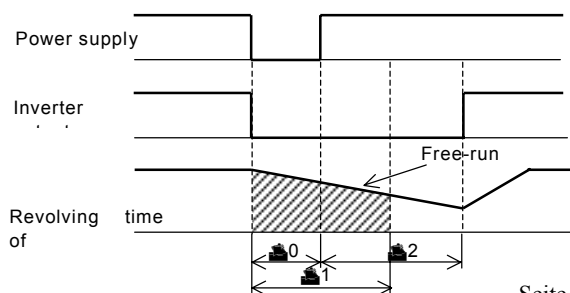

Seite 68 / 128

(example2)

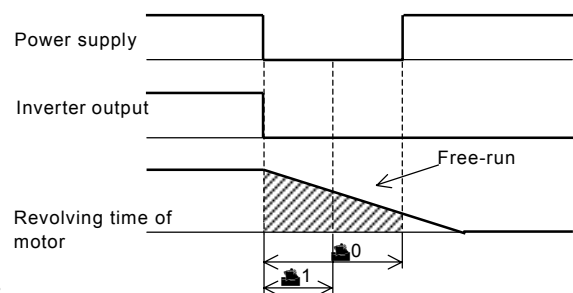



After wait for t2 seconds according to $t_0 < t_1$, restart.

Trip according to $t_0 > t_1$.

(example3) Motor frequency(revolution time) >b007

Explanation of Function

(example4) Motor frequency (revolution time)

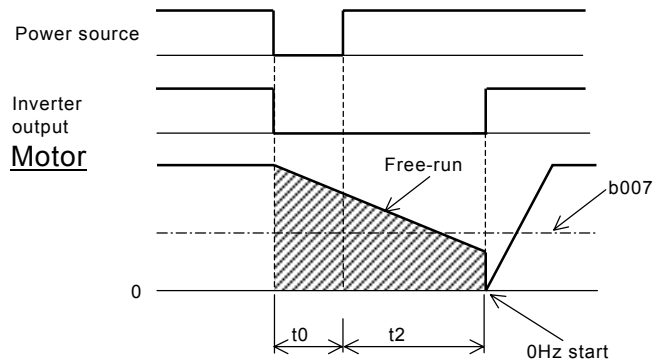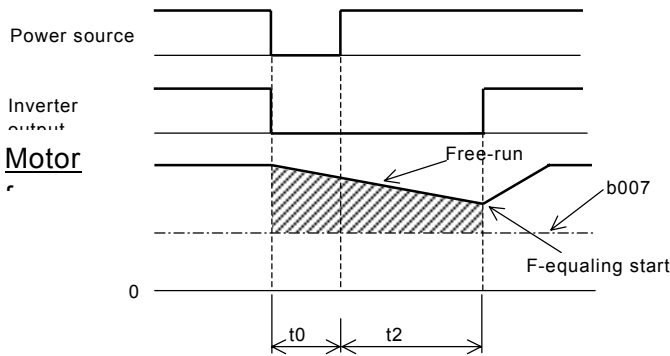



(2) Instantaneous power failure during stop alarm output during under-voltage

Select yes/no of alarm output when instantaneous power failure or under-voltage occurs with b004.

Alarm outputs while control power of inverter remains.

(example5) b004 : 00

(example6) b004 : 01

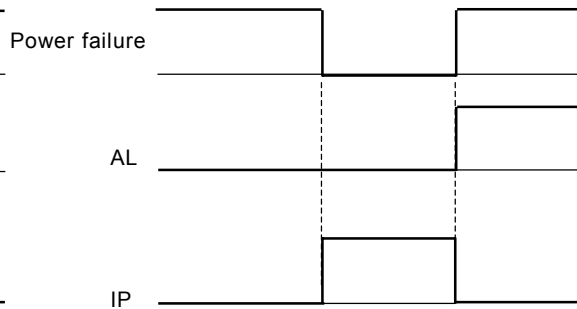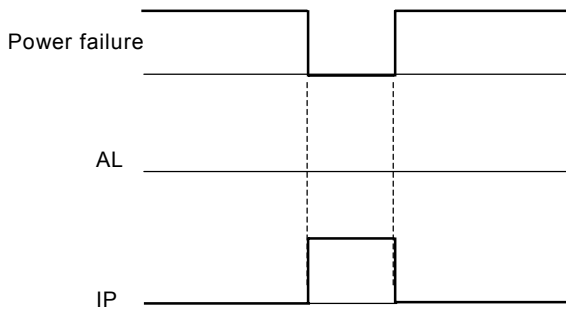

(3) It is possible to use an output by assigning the signal (IP: 09) during instantaneous stop, by setting (RNT: 11) during under-voltage to an intelligent output terminal 11, 12(C021, C022) or alarm relay output terminal (C026).

Open phase protection function selection

Relation code
b006:Open phase

This is the function to warn when the inverter input supply opens.

Function code	Data	Description
b006	00	Invalid Don't trip when the input supply opens..
	01	Valid Trip when the input supply opens..

When an open phase occurs, there is a danger that the inverter could produce one of the following states;

- (1) Ripple current of main capacitor increases, life of main capacitor shortens remarkably.
- (2) In case of load, there is danger that the capacitors or thyristors inside the inverter could be damaged.
- (3) There is a risk that the in-rush resistor to limit the current inside the inverter may burn out.

Electronic thermal function

Set the Inverter according to motor rated current to protect the motor from overloading, overheating and damage.

A warning signal is outputted before tripping on electronic thermal Protection.

- Relation code
- b012/b212:1st/2nd electric thermal level
 - b013/b213:1st/2nd electric thermal characteristic selection
 - b015/b017/b019:free electric thermal frequency 1/2/3
 - b016/b018/b020:Free thermal current 1/2/3
 - C021-C022:Intelligent output terminal
 - C026:Alarm relay output terminal

(1) Electronic thermal level


Function code	Setting range	Description
b012/b212	Rated Current x 0.2 to Rated Current x 1.2	Units:A

(example) On L3000-110NFE

Motor current:44A

Setting range:8.8 to 52.8A

When electronic thermal level b012=44A, time limit characteristic is right diagram.

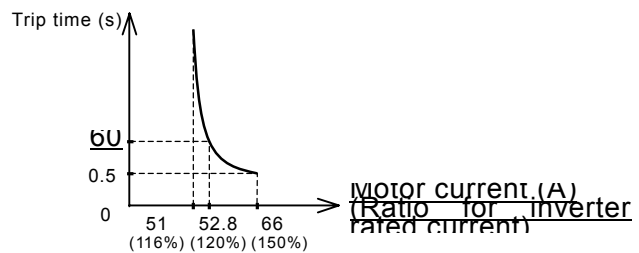

(2) Electronic thermal characteristic

Frequency characteristic is added up to set value of b012.


Function code	Data	Electronic thermal characteristic
b013/b213	00	Reduced torque characteristic
	01	Constant torque characteristic
	02	Free setting

When output frequency of general motor decreases, cooling function of self-cooled fan will fall.


Reduced torque characteristic is calculated according to heat of an WATT general motor.

(a) Reduced torque characteristic

To add to the time limit characteristic set with the reduced time rate b012/b212 by each frequency.

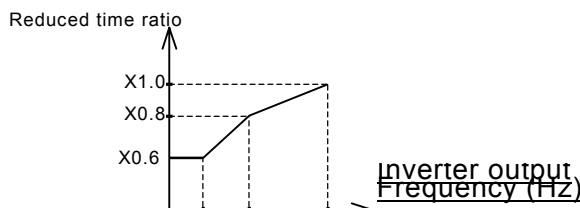



(example)b012 = 44(A), when output frequency = 20Hz

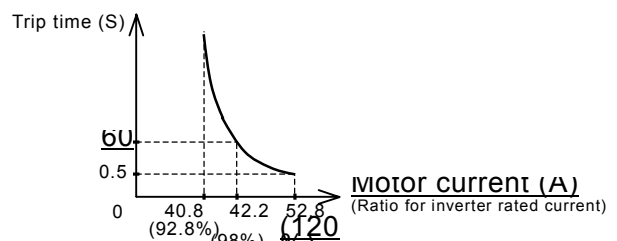

(b) Constant torque characteristic

Set this in to use constant torque motor case.

(Example)b012 = 44(A), when output

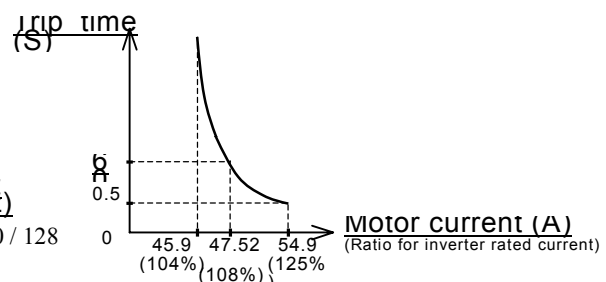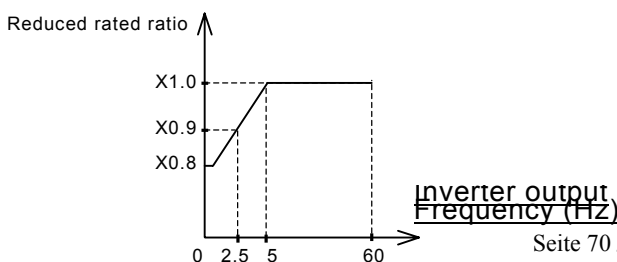

(3) Free/thermal characteristic


It is possible to set the electronic thermal characteristic freely according to the load in order to protect the motor

and the Inverter.


Setting range is shown as follows;

Set item	Function code	Set range	Description
Free electronic thermal frequency 1/2/3	b015/b017/b019	0 to 400	Units : Hz
Free electronic thermal current 1/2/3	b016/b018/b020	0.0 0.1 to 999.9	Don't operate. Units : A


Reduced time ratio

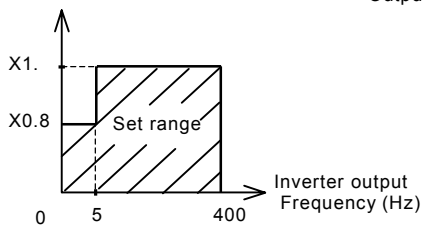

Output current value (A)

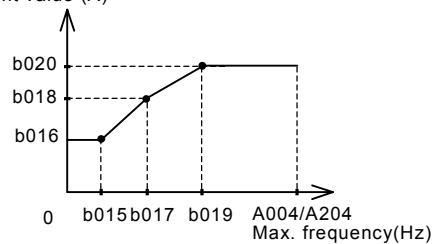

(Example) b012=44(A), output frequency=b017

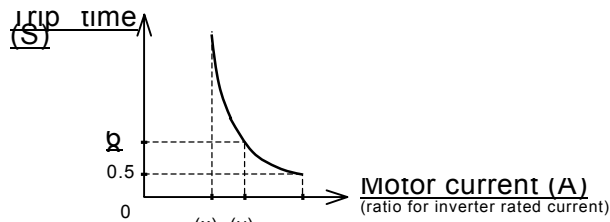

(x):b018x116%

(y):b018x120%

(z):b018x150%

(3) Thermal warning

A warning signal is outputted before overheat protection by the electronic thermal protection occurs.

Warning level is set with C061.

Assign 13(THM) to an intelligent output terminal (C021, C022) or the alarm relay output (C061).

Function code	Data	Description
C061	0. 1.-100.	Don't operate. Units : %

Overload restriction

(1) Overload restriction

The Inverter monitors the motor current on acceleration and constant speed.

When the inverter reaches the overload restriction level, the Inverter will reduce the output frequency automatically to restrict the overload.

This function prevents an over-current trip by inertia during acceleration or radical changes in load at constant speed.

Two kinds of overload restriction function are set with b021, b022, b023 and b024, b025, b026.

To change b021, b022, b023 and b024, b025, b026, assign 39(OLR) to an intelligent input terminal.

The current value this function operates at is set in overload restriction level.

The overload restriction constant is the time to decelerate to 0Hz from maximum frequency.

b021, b022, b023 and b024, b025, b026 is changed with OLR.

As this function operates, the acceleration time is longer than setting time.


If the overload restriction constant is set too short, in spite of accelerating, an over-voltage trip is caused with regenerative energy from the motor on automatic deceleration by this function.

When this function operates in the midst of accelerating, the frequency will not reach the goal frequency, the Inverter will adjust in the following way.

Relation code
b021:Overload restriction selection
b022:Overload restriction level
b023:Overload restriction constant
b024:Overload restriction 2 selection
b025:Overload restriction level2
b026:Overload restriction constant2
C001-C005: Intelligent input
C021-C022: Intelligent output
C026: Alarm relay output setting
C040: Overload advance notice signal output mode
C041: Overload notices level

- Make acceleration time longer.
- Raise torque boost.
- Raise overload restriction level.

Set item	Function code	Data	Description
Overload restriction Selection.	b021/b024	00	Invalid
		01	Acceleration/valid on constant speed.
		02	Valid on constant speed.
Overload restriction Level.	b022/b025	Rated current x 0.5 to Rated current x 1.5	Units :A Current value overload restriction operates.
Overload restriction Constant.	A023/A026	0.1 to 30.0	Units :second Deceleration time when overload restriction Operates.

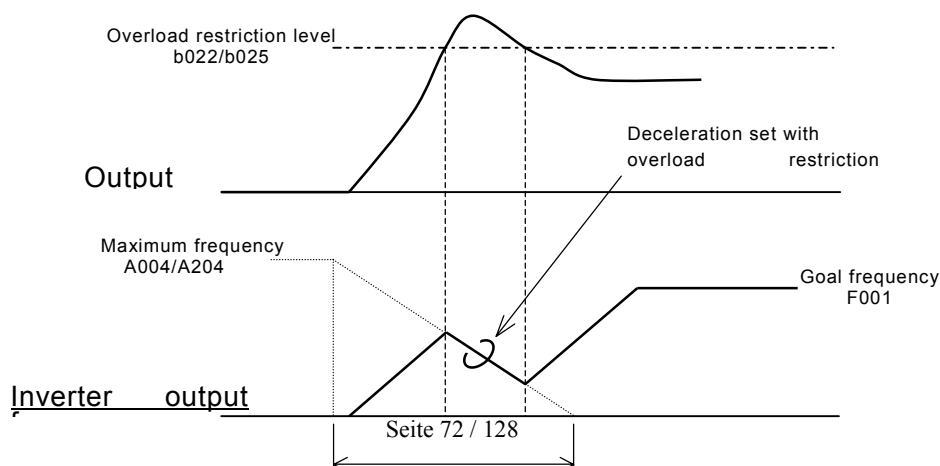

(2) Overload advance notice


b023/b026

When the load is high, it is possible to adjust the load again by outputting an overload advance notice.

It is used to prevent damage to the machine from too much load, i.e. baggage on a conveyor, the Inverter overload protection will operate.

Assign 03(OL) to an intelligent output terminal 11, 12 or the alarm relay output terminal.

Set item	Function code	Data	Description
Overload advance notice signal output mode selection	C040	00	On acceleration, constant speed, this is valid.
		01	On constant speed only, this is valid.
Overload advance notice level	C041	0.0 0.1 to Rated current x 2	Don't operate. Units: A As load reaches overload advance notice level, OL signal is output.

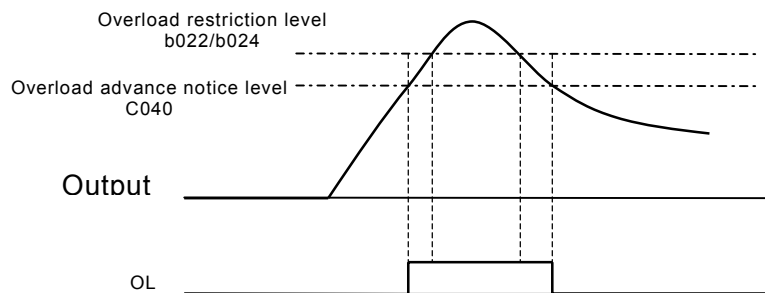


Start frequency

Relation code
b082:Start frequency

This frequency is the value the operator must set before the Inverter will give an output.
Mainly used when an operator adjusts the start torque.

By setting the start frequency higher, direct starting is caused and the starting current increases. Therefore an overload is within the restriction range and the inverter has a tendency to trip on over-current protection.

Function code	Set range	Description
b082	0.10 to 9.99	Units:Hz

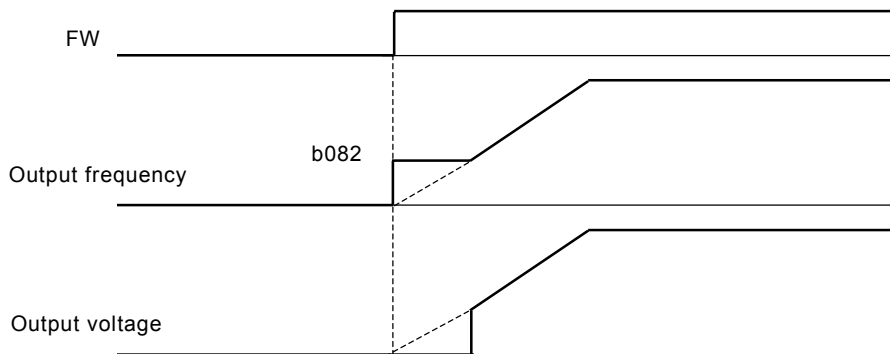

Reduced voltage start selection


This function is to raise the voltage slowly on motor starting.

The lower this value the more torque is available on starting..

However, by making this value lower, the inverter has a tendency of tripping on over-current protection, because of almost direct starting.

Relation code
b036:Reduced voltage start selection
b082:Start frequency

Function code	Data	Time to take for reduced voltage starting
b036	00	No reduced voltage start
	01	Short (about 6ms)
	06	Long (about 36ms)

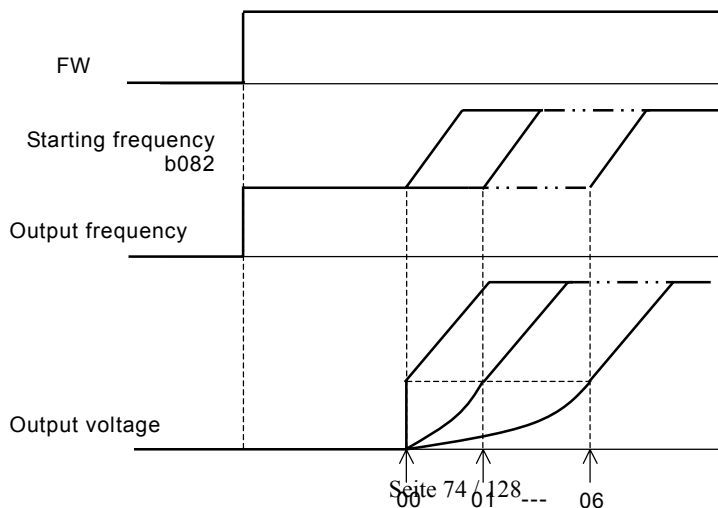


BRD (regenerative braking) function

This function only operates with the L3000 - 15kW and lower, as they have the built-in BRD.

This function is to consume regenerative energy from the motor as heat by the use of an external resistor.

Regeneration occurs when the motor is decelerated to quickly and the motor turns into a generator and voltage flows back into the Inverter.

To use the BRD function, set following condition.

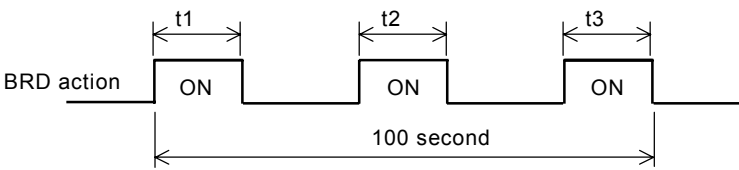Set item	Function code	Data	Description
BRD usage Ratio	b090	0.0	BRD don't operate.
		0.1-100.0	<p>The usage ratio of BRD is set by 0.1% unit. When inverter exceeds the usage ratio, trip.</p>  $\text{Usage ratio (\%)} = \frac{(t1+t2+t3)}{100 \text{ second}} \times 100$
Selection of BRD	b095	00	BRD don't operate.
		01	During run: valid (BRD operates.) During stop: invalid (BRD doesn't operate.)
		02	During run, stop, valid (BRD operates.)
BRD ON Level	b096	(Note) 330-380	Units: V In case of 200V class inverter, setting is valid.
		(Note) 660-760	Units: V In case of 400V class inverter, setting is valid.

(Note) BRD ON level is the voltage setting of the DC (direct current) voltage of the inverter.

Cooling fan operating selection

You can select whether the fan operates continuously or operates only when the inverter is in the running operation.

Relation code
b092: Cooling fan
operation selection

Function code	Data	Description
b092	00	Always run
	01	Only during run However, inverter operates for five minutes after power ON, and for five minutes after inverter operation stops.

Intelligent input terminal setting

It is possible to operate functions by assigning those functions to the intelligent input terminals 1-5 (C001-C005).

The intelligent input terminals 1-5 can be selected individually whether the contact input specification is either a N/O

or a N/C contact.

Two or more intelligent input terminals can't be assigned to be the same function.

If an intelligent input is assigned a function which is already assigned to another terminal it will automatically be

restored back to the setting before.

Function Code	Data	Description	Reference item
C001- C005	01	RV:Reverse command	Operation run
	02	CF1:Multi-speed 1 (binary operation)	Multi-speed operation function
	03	CF2:Multi-speed 2 (binary operation)	
	04	CF3:Multi-speed 3 (binary operation)	
	05	CF4:Multi-speed 4 (binary operation)	
	06	JG:Jogging	Jogging operation
	07	DB:External DC braking	DC braking(external DC braking)
	08	SET:2 nd Set of Motor Data	2 nd Set of Motor Data
	09	2CH:Two-stage adjustable-speed	Two-stage adjustable-speed function
	11	FRS:Free-run stop	Free-run stop
	12	EXT:External trip	External trip
	13	USP:Unattended start protection	Unattended start protection function
	14	CS:Commercial change	Commercial change
	15	SFT:Software lock (control terminal)	Software lock
	16	AT:analog input voltage/current select	Analog external input
	18	RS:Reset inverter	Reset inverter
	20	STA:3 wire run	3 wire input function
	21	STP:3 wire keep	
	22	F/R:3 wire forward/reverse	
	23	PID:PID selection (valid/invalid)	PID function
	24	PIDC:PID integrating reset	
	27	UP:Remote control UP function	UP/DOWN function
	28	DWN:Remote control DOWN function	
	29	UDC:Remote control data clear	
	32	SF1:Multi-speed 1 (bit run)	Multi-speed operation function
	33	SF2:Multi-speed 2 (bit run)	
	34	SF3:Multi-speed 3 (bit run)	
	35	SF4:Multi-speed 4 (bit run)	
	36	SF5:Multi-speed 5 (bit run)	
	37	SF6:Multi-speed 6 (bit run)	
	38	SF7:Multi-speed 7 (bit run)	
	39	OLR:Overload restriction change	Overload restriction
	no	NO:No assign	-

Input terminal a/b (NO/NC) selection

It is possible to set a contact input or b contact input to intelligent input terminals 1-5 and FW terminals individually.

Set item	Function code	Data	Description
Intelligent input 1-5 a/b(NO/NC)selection	C011-C015	00	A contact(NO)
		01	B contact(NC)
Input FW a/b(NO/NC)selection	C019	00	A contact(NO)
		01	B contact(NC)

Relation code

C011-C015: Intelligent input a/b (NO/NC) selection

C019 :Input FW a/b (NO/NC) selection

a contact: "ON" with Close, "OFF" with Open
 b contact: "ON" with Open, "OFF" with Close
 RS terminal can set only a contact.

Multi-speed operation function

It is possible to set multiple operation speeds and switch between the speeds with the terminals.

Multi-speed operation can be selected by binary operation(max. 16 speeds) with 4 terminals or by bit operation (max. 6 speeds) with 5 terminals.

Relation code	
A019:	Multi-speed selection
A020/A220:	1st/2 nd /multi-stage speed zero speed
A021-A035:	Multi-speed 1-15
C001-C005:	Intelligent input terminal

Set item	Function code	Set value	Description
Multi-speed selection	A019	00	Change to binary operation 16 speed.
		01	Change to bit operation 5 speed
Multi-speed 0-15	A020/A220-A035	0.00, start frequency-max. frequency	Units:Hz

(1) Binary operation


It is possible to set multi-speed 0 to 15 by selecting 02 to 05 (CF1 to CF4) on the intelligent input terminals.

Set frequency setting for speed 1 to 15 with A021-A035.

Set 0 speed with A020/A220 or F001 when frequency command is operator.

Or when frequency command is control terminal (Terminal), set with O, OI, O2 terminal.

Multi-speed	CF4	CF3	CF2	CF1
0 speed	OFF	OFF	OFF	OFF
1 speed	OFF	OFF	OFF	ON
2 speed	OFF	OFF	ON	OFF
3 speed	OFF	OFF	ON	ON
4 speed	OFF	ON	OFF	OFF
5 speed	OFF	ON	OFF	ON
6 speed	OFF	ON	ON	OFF
7 speed	OFF	ON	ON	ON
8 speed	ON	OFF	OFF	OFF
9 speed	ON	OFF	OFF	ON
10 speed	ON	OFF	ON	OFF
11 speed	ON	OFF	ON	ON
12 speed	ON	ON	OFF	OFF
13 speed	ON	ON	OFF	ON
14 speed	ON	ON	ON	OFF
15 speed	ON	ON	ON	ON

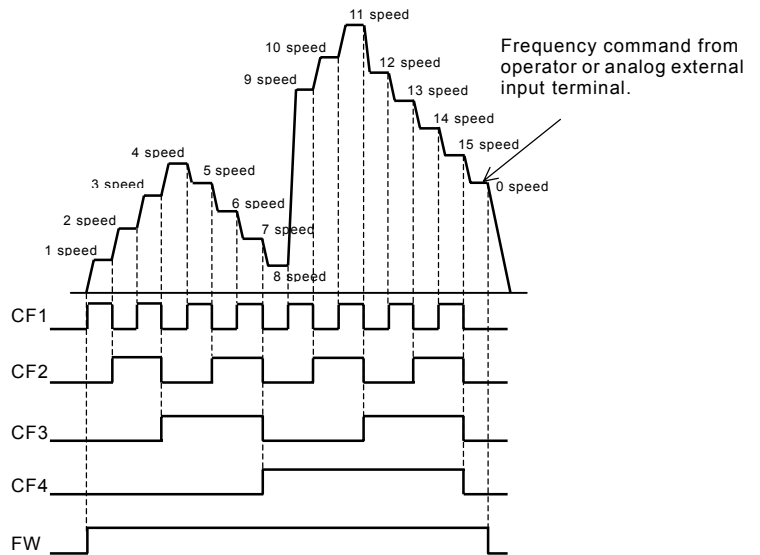


(2) Bit operation

It is possible to set multi-speed 0 to 5 by assigning 32 to 38 (SF1-SF7) to the intelligent input terminals.

Set frequency SF1-SF7 to A021-A027.

Multi-speed	SF5	SF4	SF3	SF2	SF1
0 speed	OFF	OFF	OFF	OFF	OFF
1 speed	-	-	-	-	ON
2 speed	-	-	-	ON	OFF
3 speed	-	-	ON	OFF	OFF
4 speed	-	ON	OFF	OFF	OFF
5 speed	ON	OFF	OFF	OFF	OFF

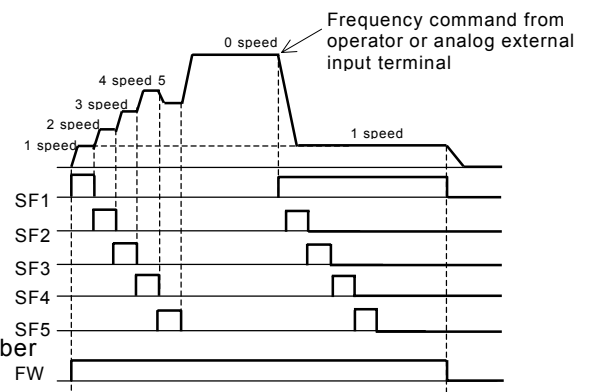

When each terminal turns ON simultaneously, the lower number



Explanation of Function

has priority.

In order for the inverter to operate **both** the frequency and the RUN operation (FW,RV) must be applied.


Jogging operation

This function can be used to rotate the motor in small steps to allow fine-tuning.

Set an intelligent input terminal to 06(JG).

Relation code	
A038	: Jogging frequency
A039	: Jogging selection
C001-C005	: Intelligent input setting

(1) Jogging frequency

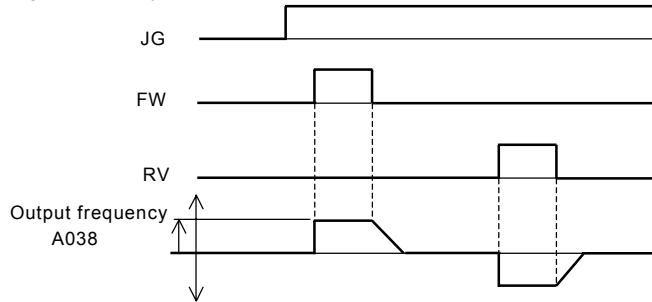

The jogging operation does not use acceleration, therefore it would be advisable to set the jogging frequency to limit the starting current to a minimum or tripping may occur. Adjust A038 to the jogging frequency required.


Function code	Data	Description
A038	0.0, start frequency-99.9	Units:Hz

(2) Jogging operation selection

Function code	Data	Description	Jogging operation during run Valid / Invalid
A039	00	Free-run on jogging stop	Invalid (example1) (notes)
	01	Decelerating stop on jogging stop.	
	02	Direct braking on jogging stop.	
	03	Free-run on jogging stop.(example2)	Valid (example2) (notes)
	04	Decelerating stop on jogging stop.	
05	Direct braking on jogging stop.		


(Note) When using the jogging function, turn FW terminal or RV terminal ON after the JG terminal is turned ON.
(It is the same when the operation command point is from the operator.)

(Example1)

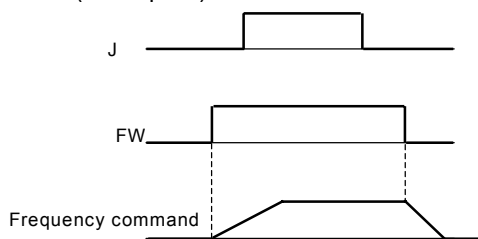

When setting of A039 is 00,01 or 02 and FW terminal is turned ON beforehand, the inverter doesn't operate jogging.

(Example2)

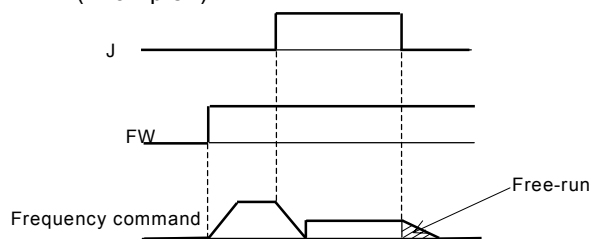

When setting of A039 is 03,04 or 05 and FW terminal is turned ON beforehand, the inverter *****


Second control function

This control function is used when the Inverter is connected to two different types of motors. By assigning 08(SET) to an intelligent input terminal and turning SET terminal ON/OFF you can switch between two different Inverter set-ups.

Select 2nd control function while the Inverter is in the STOP condition.

The functions which can change with SET terminal

- F002/F202 : 1st / 2nd acceleration time
- F003/F203:1st / 2nd deceleration time
- A003/A203:1st / 2nd base frequency
- A004/A204:1st / 2nd max. frequency
- A20/A220:1st / 2nd multi-speed 0 setting
- A041/A241:1st / 2nd torque boost selection
- A042/A242:1st / 2nd manual torque boost
- A043/A243:1st / 2nd manual torque boost point
- A044/A244:1st / 2nd control system
- A061/A261:1st / 2nd frequency upper limiter
- A062/A262:1st / 2nd frequency lower limiter
- A092/A292:1st / 2nd acceleration time 2
- A093/A293:1st / 2nd deceleration time 2
- A094/A294:1st / 2nd two-stage adjustable speed selection
- A095/A295:1st / 2nd two-stage acceleration frequency
- A096/A296:1st / 2nd two-stage deceleration frequency
- b012/b212:1st / 2nd electronic thermal level
- b013/b213:1st / 2nd electronic thermal characteristic selection
- H003/H203:1st / 2nd allowable motor selection
- H006/H206:1st / 2nd stabilized constant

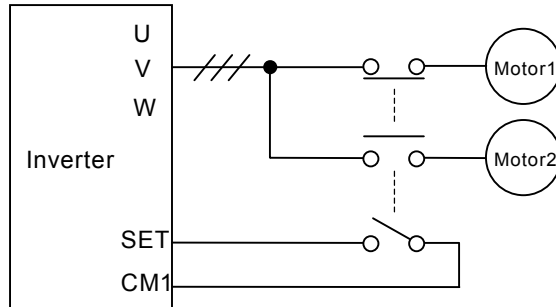

Display during setting isn't differentiated between the 1st control function or the 2nd control function. So confirm it in the state of ON/OFF of terminal.

Even if 1st / 2nd control is changed during run, it will not be active until the inverter is stopped.

Software lock mode selection

Relation code

b031 :Jogging frequency

C001-C005: Intelligent input setting

Function code	Data	SFT terminal	Description
b031	00	ON/OFF	
	01	ON/OFF	
	02		
	03		
	10		

Free-run stop (FRS)

By operating the free-run stop (FRS) function, the inverter output is cut off. The motor will free wheel under its own momentum. This function is used when the motor is to be stopped by the use of a brake, like an electromagnetic brake.

If you stop the motor with a machine brake while the inverter is still

Outputting to the motor an over-current trip may occur.

Assign 11(FRS) to an intelligent input terminal.

This free-run stop function will operate when the FRS terminal is ON.

If you turn FRS terminal OFF the inverter will restart after the retry wait time b003 passes.

However when the operation command selection A002 is set to control terminal (01), the inverter restarts during free-running.

This function will only operate when the FW terminal is ON.

On restart it is possible to select 0Hz start or matching frequency start as output methods with the free-run stop selection b088. (Example 1, 2)


When you set the frequency setting b007 to match and the frequency detected is under this setting when the free-run stop is released, the inverter is restarted from 0Hz.

The setting of this function is valid for selection b091 on stopping and reset (RS) action.


Relation code	
b088	: Free-run stop selection
b003	: Retry wait time
b007	: frequency setting to match

Set item	Function code	Data	Description
Free-run stop Selection (example 3)	b088	00	0Hz start (example 1)
		01	Equaling frequency start (example 2)
Retry wait time	b003	0.3-100.	Units:second Time until restart after FRS terminal is OFF. (This is also used for Instantaneous restart.)
Frequency setting to match	b007	0.00-400.0	Units:Hz (instantaneous stop, reference to item of insufficiency) This sets the level to match frequency. (Refer to item of instantaneous stop and restart.)

(Example1) 0Hz start

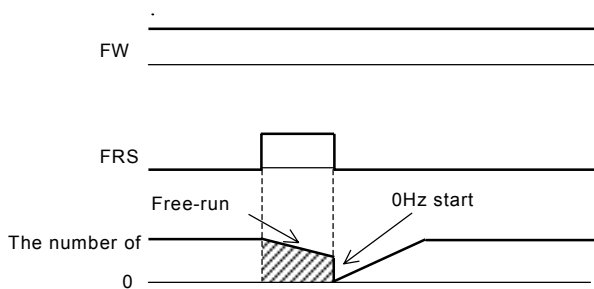

(Example2) Equaling start

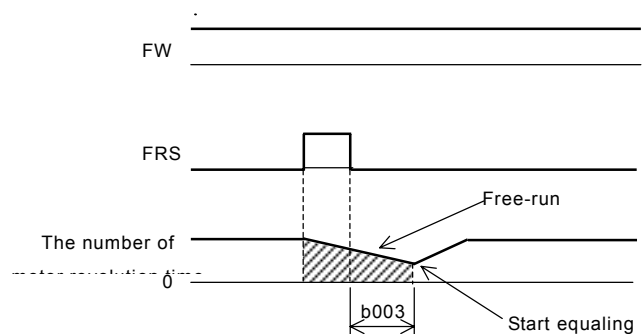

Start 0Hz regardless of the motor speed. On 0Hz start, the retry wait time is disregarded. When 0Hz start is used and the motor speed is still high there is the possibility of over-current trips.

After FRS terminal is switched OFF, the Inverter reads the frequency of the motor and when it reaches the value in b007 the Inverter will begin to RUN again. On frequency matching start if an over-current trip occurs, try extending the retry time.

Commercial power source switching(CS)

This function is used for systems with an excessive amount of starting torque requirements. The motor would be started direct-on-line and then when the motor had started the inverter would take over. This function is commonly used to reduce the costing of the inverter. A system may require 55KW's to start but only 15KW's to run at constant speed, therefore, a 15KW rated inverter would be sufficient when

Relation code	
b003	: retry waiting time
b007	: frequency setting to match frequency
C001-C005	: Intelligent input

using this function. Assign 14(CS) to an intelligent input terminal.

Using the example below. When the motor has been started direct-on-line, Mg2 is switched OFF and Mg3 is switched on. With the Forward command to the inverter already on the CS terminal is switched on and Mg1 is closed. The Inverter will then read the motor RPM and when the CS terminal is switched OFF the retry wait time

(b003) is started.

Once the wait time has elapsed the inverter will then start and match the frequency which is set (b007).


When the Earth Leakage Breaker (ELB) trips on ground fault, the commercial circuit will not operate. When a backup

is required, take the supply from the commercial circuit ELBC.

For FWY, RVY, CSY, use control relays. The sequence above is reference to the circuit and timing diagram below.

If an over-current trip occurs when frequency matching, extend the retry wait time (b003).

Connection figure example and timing on commercial power source switching

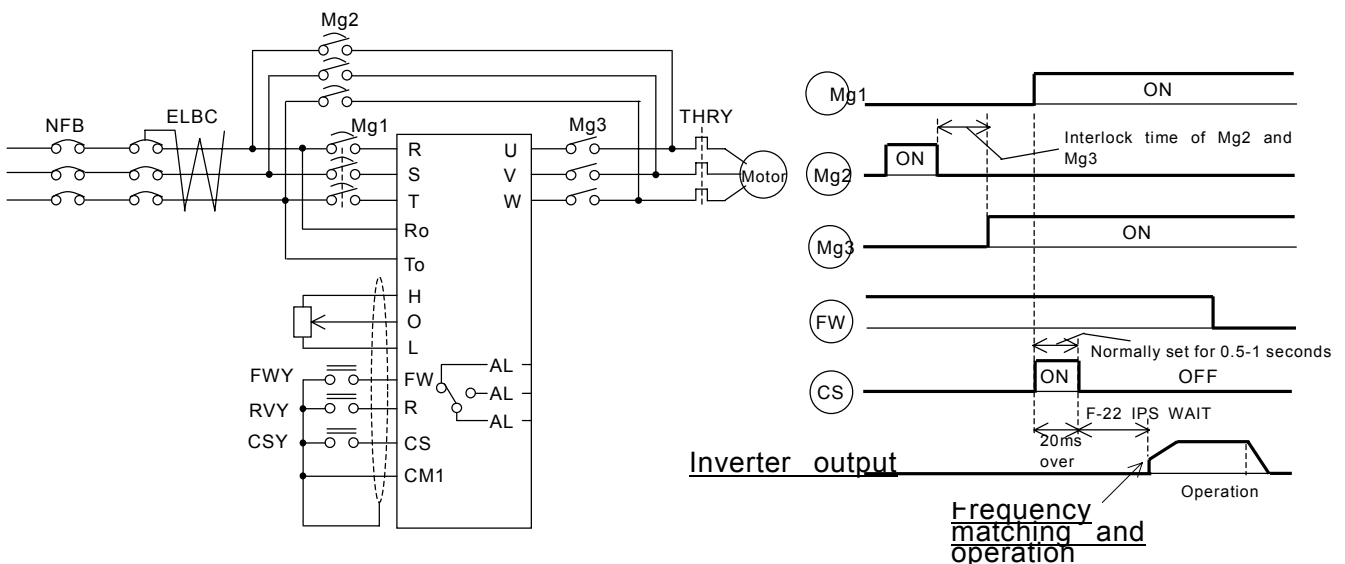

Reset (RS)

This function resets the inverter when a protective trip has occurred.

The method of reset is to either push the STOP/RESET key on the digital operator or to switch the RS terminal ON.

To reset the inverter with the control terminal, assign 18(RS) to an intelligent input terminal.

Reset frequency matching selection C103 selects whether the inverter restarts at 0Hz or the inverter matches the output frequency after the reset operation is complete.

Reset selection C102 selects when the alarm signal is cancelled and whether it is valid or invalid in normal operation.


The RS terminal is valid only when the contact is set to NO.

If the RS terminal is in the ON state for more than 4 seconds, a communication error is caused.


Relation code	
b003	: Retry waiting time
b007	: Frequency setting to match
C102	: Reset selection
C103	: Reset frequency

Set item	Function code	Data	Description
Retry waiting time	b003	0.3-100.	Units:seconds (Reference to items of instantaneous power failure or under-voltage) After reset, time until restart is tried.
Frequency setting to match	b007	0.00-400.0	Units:Hz (Reference to items of instantaneous stop/under-voltage)
Reset selection	C102	00	On ON signal, trip cancel (example1) On normal, this is valid (output cuts off).
		01	On OFF signal, trip cancel (example2) On normal, valid (output cuts off)
		02	On ON signal, trip cancel (example1) On normal, this is invalid. (only trip cancel)
Reset frequency setting Selection (example3)	C103	00	0Hz start
		01	Frequency matching start.


(Example1)

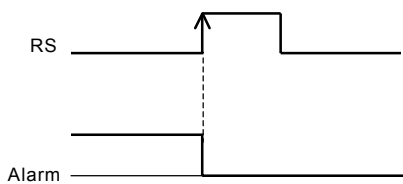

(Example2)

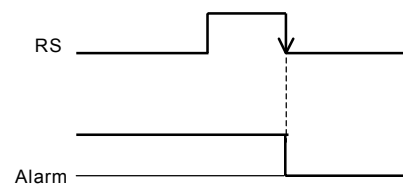

(Example3) When 01 (frequency matching) is selected with reset frequency matching selection C103, it is also possible to operate frequency start on power ON.

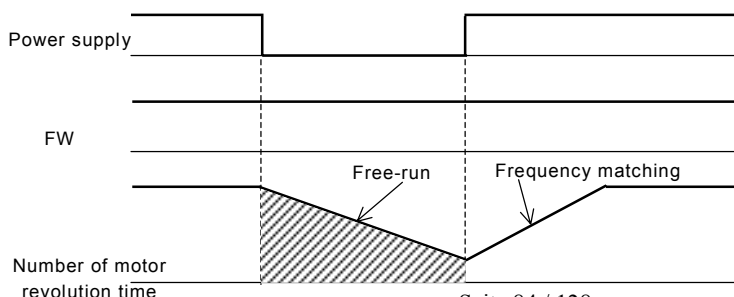

Unattended start protection (USP)

The USP function is designed as a fail safe to prevent accidental starting of the Inverter if the RUN signal is ON when the power is restored to the Inverter.

C001-C005: intelligent input terminal

Relation code




Either resetting the Inverter or turning the RUN signal OFF can clear the trip.

If the trip is cancelled while the RUN signal is still ON then the inverter will restart automatically.

(Example2)

Assign 13(USP) to an intelligent input terminal.

Unattended start protection is shown as follows;

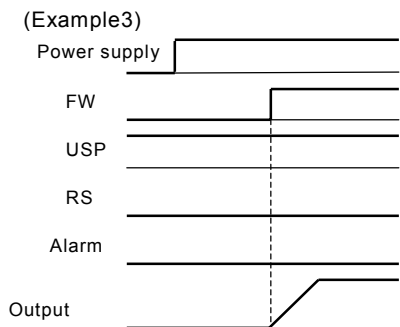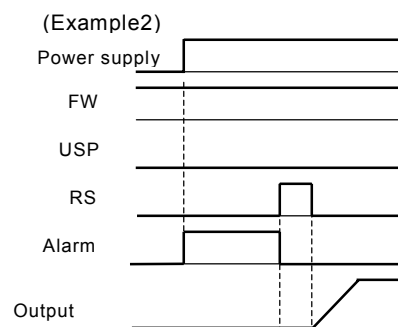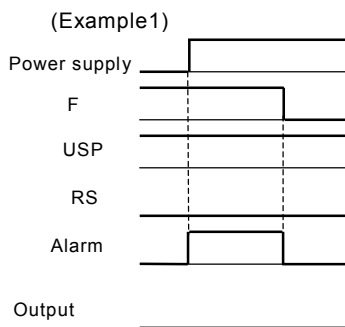

UP/DOWN selection

The Inverter output frequency can be changed with the UP and DWN intelligent input terminals.

Relation code

C101 :UP/DOWN memory selection

Assign 27(UP) and 28(DWN) to two of the intelligent inputs 1-5.

This function is valid only when the frequency command selection A001 is set to 01 or 02. However, when 01 (control terminal) is set, this can only be used for multi-speed operation.

This function will not operate when the external analog frequency command or the jogging operation is used.

Acceleration time operates according to F002, F003/F202, F203 when UP/DWN terminal is ON.


To change 1st/2nd control, assign 08(SET) to an intelligent input terminal, change with SET terminal.

It is possible for the Inverter to retain the frequency setting value from the UP/DWN terminals. Parameter C101 switches the memory On or OFF. It is also possible to clear the memory and return to the original set frequency.

Assign 29(UDC) to an intelligent input terminal and switch it on to clear the memory.

Function code	Data	Description
C101	00	This will not memorize the frequency command adjusted with UP/DWN. When power is turned ON again, set value is returned to the value before it was adjusted with UP/DWN.
	01	This memorizes the frequency command adjusted with UP/DWN. When power is turned ON again, set value is kept the value after it was adjusted with UP/DWN.

Explanation of Function

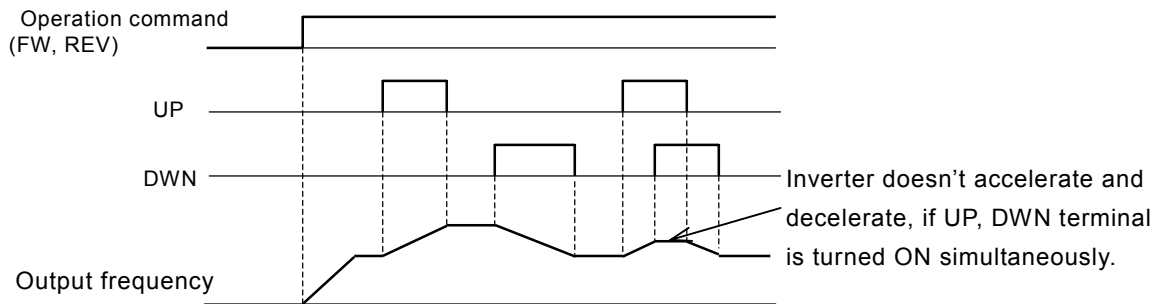

External trip (EXT)

Relation code


This function can be used to force the Inverter into a trip situation which is C001-C005: Intelligent input terminal Switched by an external input, i.e. PLC or relay contact.

When the EXT terminal is switched ON, the inverter trips on an E12 error and the output is switched OFF.

Assign 12(EXT) to an intelligent input terminal.

The trip will not be canceled when the terminal is turned OFF.

To cancel the trip, the reset signal must be applied or the Inverter switched OFF and ON again at the supply.

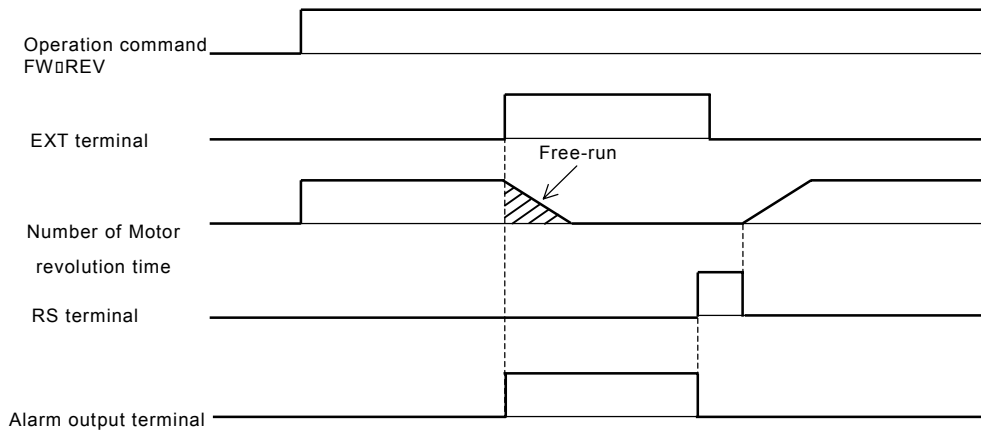

3 Wire input function

Relation code


This function is used when a momentary push start/stop control is required. C001-C005: Intelligent input terminal Set the operation command selection A002 to control terminal (01).

Assign all of 20 (STA), 21 (STP) and 22 (F/R) to three of the intelligent input terminals.

If all three inputs are not assigned this function will not operate.

The FW terminal and RV terminal become redundant when the 3 wire control is assigned to the intelligent input terminals.

Output from the 3 wire control terminal is as follows;

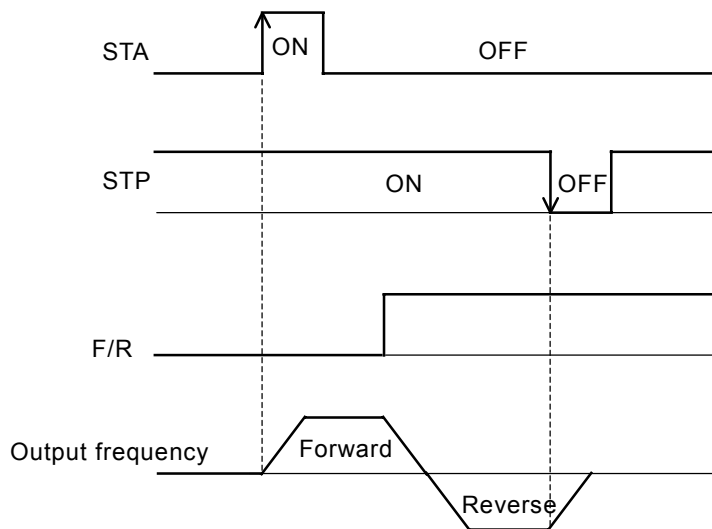

Output terminal setting

Any of the following functions can be assigned to the intelligent output terminals (11 or 12) or the alarm relay.

Both intelligent output terminals 11 and 12 and the alarm relay are all relay outputs.

All three output relays can be selected to be either N/O or N/C (a or b).

Relation	
C021-C022	: Intelligent output terminal
ayC026	: Alarm relay output terminal setting

Data	Description	Reference item
00	RUN:Signal during run	Signal during run
01	FA1:Frequency arrival type1 signal	Frequency arrival signal
02	FA2:Frequency arrival type2 signal	
03	OL:Overload advance notice signal	Overload advance notice signal
04	OD:output deviation for PID control	PID function
05	AL:Alarm signal	Protection function
06	FA3:Arrival signal for only setting frequency	Frequency arrival signal
08	IP:Instantaneous stop signal	Instantaneous stop/under-voltage
09	UV:Under voltage signal	
11	RNT:RUN time over	RUN time over
12	ONT:ON time over	Power ON time over
13	THM:Thermal caution	Electric thermal function

Output terminal a/b (NO/NC)selection

This sets the intelligent output terminal 11-12 and alarm relay output terminal contact condition to either N/O or N/C, (a or b).

Each output is changeable individually.

Both intelligent output terminals 11 and 12 and the alarm relay are all relay outputs.

Relation code	
C031-C032	:intelligent output 11-12a/b (NO/NC) selection
C036	:Alarm relay output a/b (NO/NC) selection


Set item	Function code	Data	Description	
Intelligent output 11-12 A/b(NO/NC) selection	C031-C032	00	A contact(NO)	Contact specification
		01	B contact(NC)	AC 250V 5Amax
Alarm relay output A/b(NO/NC)selection	C036	00	A contact(NO)	Contact specification
		01	B contact(NC)	AL1-AL0:AC 250V 5Amax AL2-AL0:AC 250V 2Amax

a contact: Close with {ON}, open with {OFF}.

b contact: Open with {ON}, close with {OFF}.

(1) Specification of the intelligent output terminals 11 and 12

Specification of the intelligent output terminals 11 and 12 is as follows;

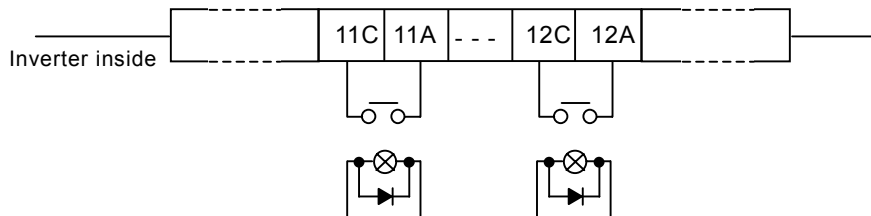


C031, C032 Set value	Power supply	Output description	State of output terminal 11 or 12 terminal
00 (a contact)	On	ON	Close
		OFF	Open
	Off	-	Open
01 (b contact)	On	ON	Open
		OFF	Close
	Off	-	Open

	AC250V, 5A DC30V, 5A	AC250V, 1A DC30V, 1A
	DC1V	1mA

(2) Specification of the alarm relay output terminal

The specifications of the alarm relay output terminal is a changeover contact. Action is as follows.

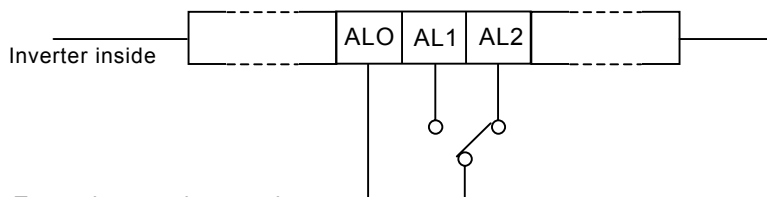

Example on using as alarm

C036 Set value	Power source	State of inverter	State of output terminal		AL1-AL0	AL2-AL0
			AL1-AL0	AL2-AL0		
00 (a contact)	On	On abnormal	Close	Open	AL1-AL0	AL2-AL0
		On normal	Open	Close		
	Off	-	Open	Close		
01 (b contact)	On	On abnormal	Open	Close	AL2-AL0	AL1-AL0
		On normal	Close	Open		
	Off	-	Open	Close		

AL1-AL0	AL2-AL0
AC250V, 2A DC30V, 8A	AC250V, 0.2A DC300V, 0.6A
AC100V, 10mA DC5V, 100mA	
AC250V, 1A DC30V, 1A	AC250V, 0.2A DC30V, 0.2A
AC100V, 10mA DC5V, 100mA	


Signal during run (RUN)

This function is to provide an output signal when the Inverter is in a running condition.

Assign 00(RUN: signal during run) to an intelligent output terminal 11, 12 or the alarm relay output terminal.

The signal is still outputted when the dc braking operates.

Operation is as follows;

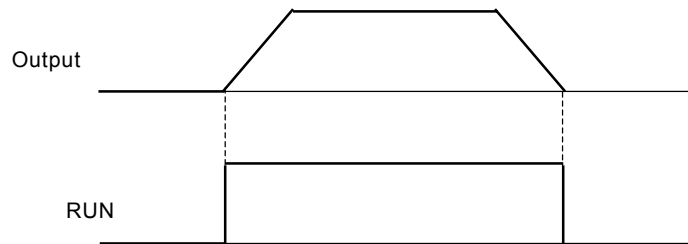

Relation code
C001-C005: Intelligent input or the alarm relay output terminal.

Frequency arrival signal (FA1, FA2, FA3)

When the output frequency arrives at the set frequency, an arrival signal is outputted.

Assign 01(FA1:constant speed arrival signal), 02(FA2:over setting frequency) or 06(FA3: only setting frequency) to an intelligent output terminal 11, 12 or the alarm relay output terminal. Hysteresis frequency arrival signal is the following.

When ON : ON with (1% of setting frequency – maximum frequency)(Hz)

When OFF: OFF with (2% of setting frequency – maximum frequency)(Hz)

However in to set 06(FA3) case when inverter accelerate.

When ON : (1% of setting frequency – maximum frequency)(Hz)

When OFF: (2% of setting frequency + maximum frequency)(Hz)

When inverter decelerates

When ON : (1% of setting frequency + maximum frequency)(Hz)


When OFF: (2% of setting frequency – maximum frequency)(Hz)

Relation
C021/C022: Intelligent output terminal
C042 :Acceleration arrival frequency
C043 :Deceleration arrival frequency

Set item	Function code	Data (Hz)	Description
Acceleration arrival frequency	C042	0.0	Don't output arrival signal on acceleration.
		0.01-400.0	Output arrival signal on acceleration.
Deceleration arrival frequency	C043	0.0	Don't output arrival signal on deceleration.
		0.01-400.0	Output arrival signal on deceleration.


(1) Output on constant speed arrival (01:FA1)

When the inverter arrives at the set frequency with frequency setting (F001, A020) or multi-speed (A021-A035), the output relay is switched.

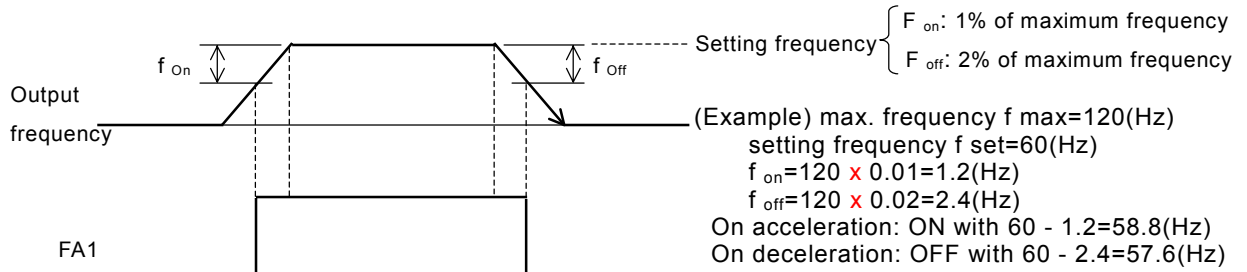


(2) Output over setting frequency (02:FA2)

When the output is over the arrival frequency set in C042, C043 on adjustable speed time, the output relay is switched.

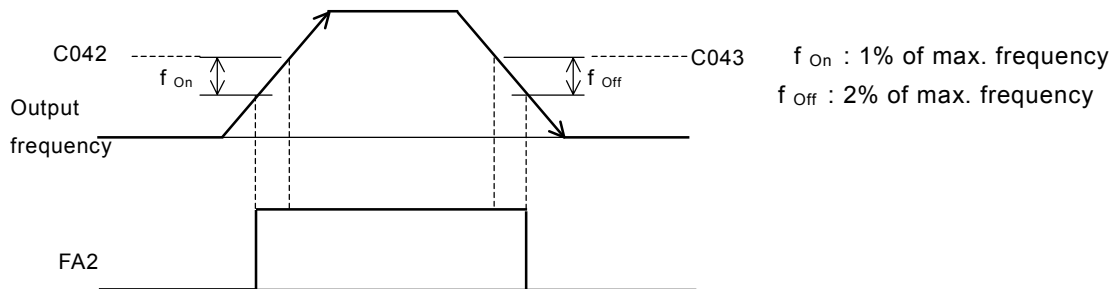

(3) Output setting frequency (06:FA3)

The signal is switched only when the output frequency matches the arrival frequency set in C042, C043 on adjustable speed time.

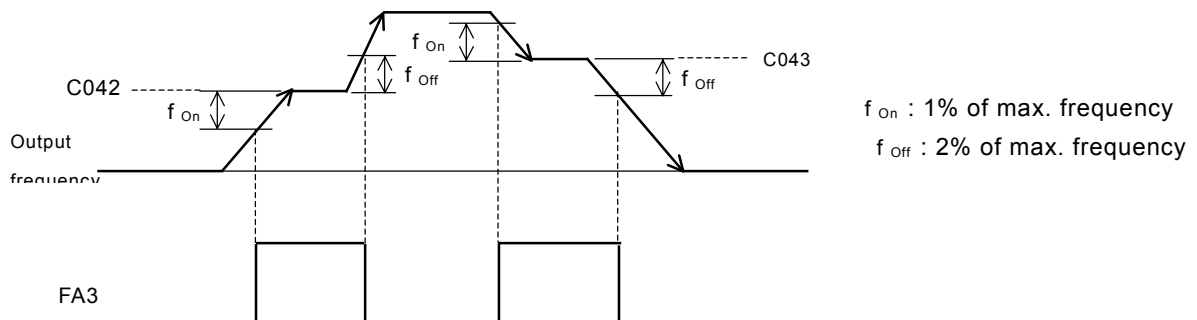

RUN time / power ON time over (RNT/ONT)

When the accumulated operation time reaches or is over the setting time in b034, RUN time/power ON time over (RNT/ONT) output is switched.

Relation	
b034	: Warning time level
C021-C022	: Intelligent output terminal
C026	: Alarm relay output terminal
d016	: Accumulation time monitor during RUN
d017	: Power ON time monitor

Function code	Data	Description
b034	0.	Don't operate.
	1. -9999.	Set by 10-hour unit.
	1000-6553	Set by 100 hours unit. (10000-65530 hours)

(1) Run time over (RNT)

Assign 11(RNT) to an intelligent output terminal 11, 12 (C021, C022) or the alarm relay output terminal (C026).

Set ON time level with b034.

(2) Power ON time over (ONT)

Assign 12(ONT) to an intelligent output terminal 11, 12 (C021, C022) or the alarm output terminal, (C026).

Set ON time level with b034.

FM terminal

Relation code

The FM control terminal can monitor the output frequency and output current.
 FM terminal is a PWM (Pulse Width Modulation) output.

C027: FM selection
 b081: FM adjustment

(1) FM selection

Select a signal to output from the following options.


When 03(digital frequency) is set a digital frequency counter meter is required.

Use an analog meter for all other output signals.


Function code	Data	Description	Full scale value
C027	00	Output frequency (example 1)	0-Max. frequency(Hz)
	01	Output current (example 1)	0-200%
	03	Digital output frequency (example 2)	0-Max. frequency(Hz)
	04	Output voltage (example 1)	0-100%
	05	Output electric power (example 1)	0-200%
	06	Thermal load ratio (example 1)	0-100%
	07	LAD frequency (example 1)	0-Max. frequency(Hz)

(Example 1) Set value:00, 01, 04, 05, 06, 07

(Example 2) Set value: 03

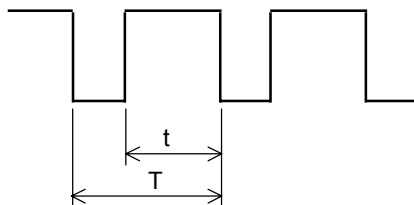

Period T: constant (6.4m)
 Duty t/T : change

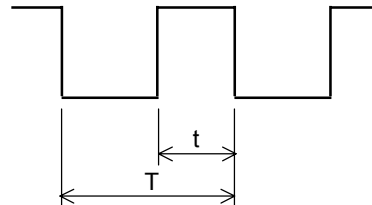

Period T: change
 Duty t/T : change 1/2***

(2) FM adjustment

This function is used to calibrate a meter connected to the FM terminal.

Function code	Set range	Description
b081	0. -255.	Change one by one.

(calibration methods)

(1) Connect meter to FM-CM1.

(2) Adjust b081 so that the meter is reading the same as the output frequency on your scale.

(Example) When output frequency is 60Hz, change value of b081 so that meter is 60Hz.

AM terminal, AMI terminal

The AM terminal and the AMI terminal can monitor the output frequency or the output current.

The AM terminal has an analog output of 0-10V.

The AMI terminal has an analog output of 4-20mA.

Relation code
b080 : AM adjustment
C028 : AM selection
C029 : AMI selection
C086 : AM offset adjustment
C087 : AMI adjustment
C088 : AMI offset adjustment

(1) AM, AMI selection

Select a signal to output from the following options;

Set item	Function code	Data	Contents	Full scale value
AM selection/ AMI selection	C028/C029	00	Output frequency	0-Max. frequency(Hz)
		01	Output current	0-200%
		04	Output voltage	0-100%
		05	Output electric power	0-200%
		06	Thermal load ratio	0-100%
		07	LAD frequency	0-Max. frequency(Hz)

(2) AM adjustment, AMI adjustment

This function is used to calibrate a meter connected to the AM and AMI terminal.

Set item	Function code	Data	Description
AM adjustment	b080	0. -255.	After offset adjustment with C086, adjust according to memory.
AM offset Adjustment	C086	0.0-10.0	Units:V
AMI adjustment	C087	0. -250.	After offset adjustment with C088, adjust according to memory.
AMI offset adjustment	C088	0.0-20.0	Units:mA

External thermistor

Temperature protection of the external machine is possible by the use of a Thermistor fitted to your motor.

Wire the thermistor between control terminals TH and CM1.

Set the following function according to the thermistor specification.

Relation code
b098: Thermistor selection
b099: Thermistor error level
C085: Thermistor adjustment

Set item	Function code	Set value	Contents
Thermistor selection	b098	00	Invalid (No temperature protection by external thermistor)
		01	Valid normal temperature/factor resistance element (For PTC)
		02	Valid (For NTC)
Thermistor error level	b099	0. -9999.	Units:OHM Set the resistance value of temperature for trip according to thermistor methods.
Thermistor adjustment	C085	0.0-1000.	Use this as gain adjustment.

Initialization setting

It is possible at any time to reinitialize the Inverter parameters back to their factory default. The trip history can also be cleared at any time, however, if problems occur, it will be difficult to fault find without the trip history for reference.


Initialization details are as follows;

Relation code
b084: initialization selection
b085: Initial data selection

Set item	Function mode	Data	Description
Initialization selection	b084	00	This clears only trip history.
		01	This only initializes setting value. Setting value becomes the state on factory forwarding.
		02	This clears trip history and initializes setting.
Initial data Selection	b085	00	Initializing setting for Japan.
		01	Initializing setting for Europe
		02	Initializing setting for America.

(Initialization methods)


After setting the above parameters, initialize as follows;

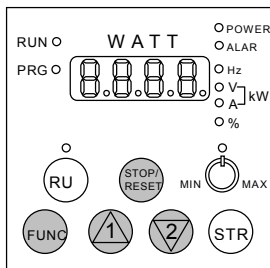

(1) Hold down the **FUNC**, **UP** and **DOWN** key and then press the **STR** key. When the display starts to flash and rotate release all the keys




(2) During initializing
Above display is for **Japan**.
Other displays are below.

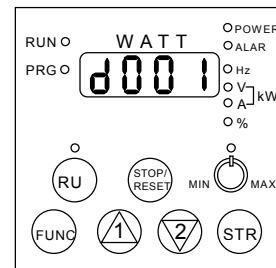

(3) When "d001" is displayed in the monitor, initialization is **complete**.


During initializing for Europe.



During initializing for America.



During initializing of trip history.



The display revolves on the left.

Display selection

This function can be used to limit what the digital operator can display.

Relation code	
b037	:Display selection
U001-U012	: User selection

Set item	Function code	Data	Description
Display selection	b037	01	Function individual display (Display, no display by item set)(example1)
		02	User setting and b037 Only item set by user selection of U001-U012 is displayed. (Set U001-U012 first.)
User selection	U001-U012	no	No assignment.
		d001-P002	Select the code to display. (All code is an object.)

(Example1) When the Display selection (b037) is set to 02, only the programmed parameters are displayed. To set which parameters are displayed insert code groups in parameter U001-U012.

The table below shows which parameter groups can be displayed and what code is used in U001-U012.

No	Function to restrict display	Data	Code to be restricted display.	Note
1	A001	01	A005,A006,A011-A016,A101-A105, A111-A114,C081-C085,C121-C123	O,OI,O2 terminal function
2				
3	A002	01,03,04,05	b087	Stop key function
4	A019	00	A028-A035	Multi-speed function
	C001-C005	02,03,04,05		
5	A044	02	b100-B113	Control methods
6	A051	01	A052-A061	DC control
7	A071	01	A072-A076,C044	PID function
8	A094	01	A095-A096	2 stage adjustable frequency
9	b013	02	b015-b020	Electric thermal characteristic
10	b021	01,02	b022-b023	Overload restriction
11	b024	01,02	b025-b026	Overload restriction2
12	b095	01,02	b090	BRD function
13	C001-C005	08	A203,A204,A220,A241-A244, A261,A262, A292,A293,b212,b213	2 nd control
14		11	b088	Free-run stop
15	C021,C022,C026	02,06	C042-C043	Frequency arrival signal
16	A294	01	A294-A296	2 nd two adjustable frequency
	C001-C005	08		

Stabilised factor

When the motor is hunting or unstable, this function can be adjusted to help stabilise the motor.

Relation code

H006/H206: 1st/2nd stabilized factor

When the motor is unstable, raise the set value of H006/H206 gradually.

However lower stabilized factor, when linear resistance of inverter and motor is one-to-one, the linear resistance of usage motor is less than resistance of regular motor, or you operate motor greater than rated capacity of inverter.

Or lower stabilized factor, when you operate greater motor than rated capacity of inverter.

The following two functions can also assist to reduce hunting or rattling of a motor.

- (1) Lower the carrier frequency (b083).
- (2) Lower the output voltage gain (A045).

Set item	Function code	Data	Description
Output gain	A045	20. -100.	Units :% Lower this when hunting occurs.
Carrier frequency	b083	0.5-15.0	Units :kHz Lower this when hunting occurs.
Stabilized factor	H006/H206	0. -255.	Raise or lower when hunting occurs.

Operation selection on option error

When an add-in option is the cause of a protective trip this function can be used to switch the trip facility off and allow the Inverter to carry on in its Operation.

Relation

P001: Option1 operation selection on error
P002: Option 2 operation selection on error

Set item	Function code	Data	Description
Operation selection on optional error	P001/P002	00	TRP: inverter trip and output alarm when option error occurs.
		01	RUN: inverter ignores this and continues operation when option error occurs.

Motor constant

- ✓ Set each constant according to the motor you use.
- ✓ In case of using several motors in parallel, set the constant values that are closest to the total capacity of the belonging motor.
- ✓ Reduced torque or instability may occur while using auto torque boost function if these settings are incorrect.

Relation

H003/H203: 1st/2nd allowable motor selection
H004/H204: 1st/2nd motor pole selection

Communication function


Serial communication is possible from the Inverter to any external equipment using RS485 protocol. This function is built-in as standard and is controlled by the TM2 control terminals.

(1) Communication specification

Item	Specification	Notes
Transmission speed	2400/4800/9600/19200 bps	Selection with operator
Communication methods	Half duplex communication methods	
Synchronizing methods	Direct current transmission	
Transmission code	ASCII code	
Transmission methods	Transmission from lower bit	Selection with Operator
Communication interface	RS485	
Data bit	7/8 bit	Selection with Operator
Parity	No parity/even/odd	
Stop bit	1/2 bit	
Start methods	One-way start form by command of host side	Setting with operator
Waiting time	10-1000[ms]	
Connect form	1:N (N = Maximum 32)	Station number is selected with operator.
Error check	Overrun / Fleming / BCC / Vertical / Horizontal parity	

<RS485 port specification and connection>


Use TM2 of control terminal PCB for RS485 communication function.

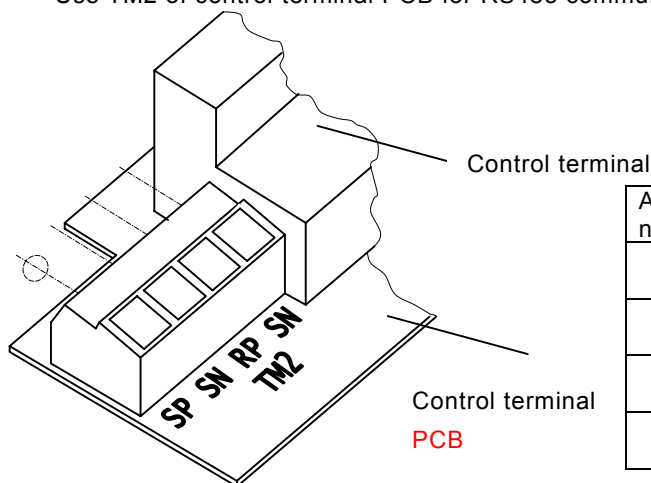

Abbreviation name	Description
S P	Transmission and Reception + side
S N	Transmission and reception - side
R P	Terminal resistance valid terminal
S N	Terminal resistance valid terminal

Connect each inverter in parallel as shown below. It is necessary to short terminals RP and SN on the last inverter in the link (even if communication is to only one inverter the link should still be made).

By shorting between RP and SN, the terminal resistance is increased and controls the reflection of the signal.

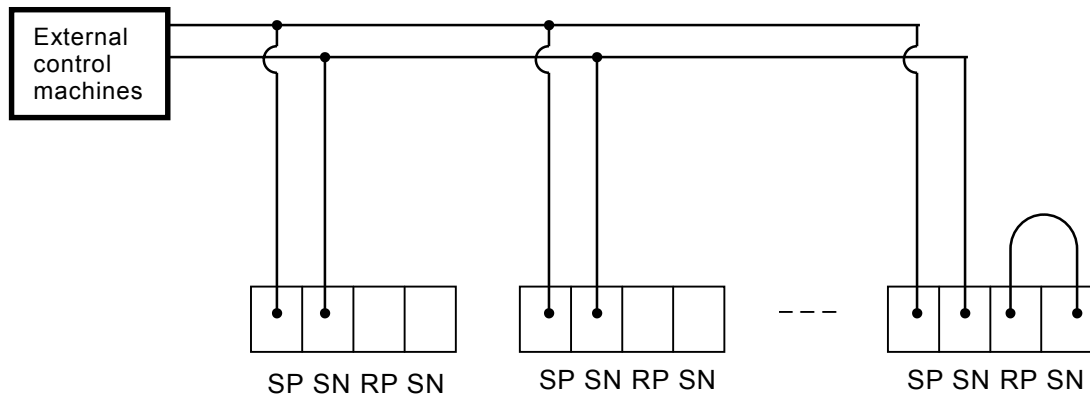


(2) Setting

The following settings are required to operate RS485 communication.

Set item	Function code	Set value	Description
Data command	C070	02	Operator
		03	RS485
		04	Option 1
		05	Option 2
Communicating transmission speed	C071	03	2400 bps
		04	4800 bps
		05	9600 bps
		06	19200 bps
Communication code	C072	1 to 32	This assigns the station number of the inverter. This is used when you control more than one simultaneously.
Communication bit	C073	7	7 bit
		8	8 bit
Communication parity	C074	00	No parity
		01	Even parity
		02	Odd parity
Communication bit	C075	1	1 bit
		2	2 bit
Communication waiting time	C078	0 to 1000	Units :ms

(3) Communication protocol

The method of the communication protocol is shown below in the time diagram.

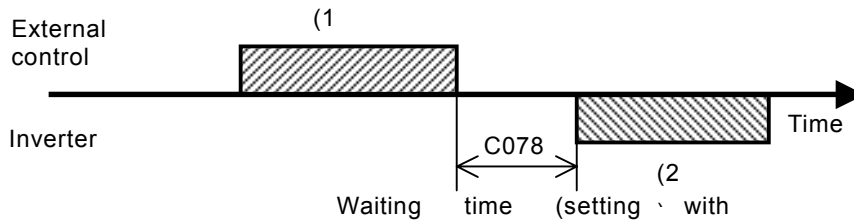

The following is indicated.

(1):Frame transmitted from external control machines to the inverter

(2):Frame replied from inverter to the external control machines

Frame (2) from the inverter is a reply to frame (1) from the external control machine, the active output is not

operated.

The commands are shown below;

Command list

Command	Command description	Advisability of all code	Notes
00	Forward / backward / stop command	○	
01	Setting of frequency command	○	
02	Setting of intelligent terminal state	○	
03	Collective reading of monitor data	×	
04	Reading of inverter state	×	
05	Reading of trip history	×	
06	Reading of 1 setting item	×	
07	Setting of 1 set item	○	
08	Returning of each set value to initial Value	○	This doesn't operate unless b084 is set to (01 or 02).
09	This checks whether set value can be Conserved to EEPROM or not.	×	
0A	This conserves set value to EEPROM	○	
0B	Recalculation of internal constant.	○	

Explanation of each command is the following.

(i) 00 command : This controls the forward, backward and stop command.

Transmission frame

Frame format

STX	Code	Command	Data	BCC	CR
-----	------	---------	------	-----	----

	Explanation	Data size	Value
STX	Control code (Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32, and FF(all code communication)
Command	Transmission command	2 byte	00
Data	Transmission data	1 byte	(Note1) Reference
BCC	Bloc check code	2 byte	Exclusive OR of Code, Command and Data
CR	Control code (Carriage Return)	1 byte	CR (0x0D)

(Note1)

Data	Description	Note
0	Stop command	
1	Forward command	
2	Reverse command	

(Example) when you transmit forward command to code 01

(STX)|01|00|1|30|(CR) $\xrightarrow{\text{ASCII converter}}$ 02|30 31|30 30|31|33 30|0D

Reply frame

On normal reply : (4) - (i) reference

On abnormal reply : (4) - (ii) reference

(ii) 01 command: This is to set frequency command.

Transmission frame

Frame format

STX	Code	Command	Data	BCC	CR
-----	------	---------	------	-----	----

	Explanation	Data size	Value
STX	Control code (Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32, and FF (all code communication)
Command	Transmission command	2 byte	01
Data	Transmission data (tenth ASCII code)	6 byte	(Note2) Reference
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data
CR	Control code (Carriage Return)	1 byte	CR (0x0D)

(Note2) when you set code 01 for 5Hz

(STX)|01|01|000500|05|(CR)

ASCII conversion → 02|30 31|30 31|30 30 30 35 30 30|30 35|0D

Note) the data is 100 times as big as set value.

Example) 5(Hz) → 500 → 000500 → ASCII → 30 30 30 35 30 30

Reply frame

On normal reply : (4) - (i) Reference

On abnormal reply : (4) - (ii) reference

(iii) 02 command: This sets the state of the intelligent terminals.

Transmission frame

Frame format

STX	Code	Command	Data	BCC	CR
-----	------	---------	------	-----	----

	Explanation	Data size	Value
STX	Control code (Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32, and FF (all cord communication)
Command	Transmission command	2 byte	02
Data	Transmission data	16 byte	(Note3) reference
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code (Carriage Return)	1 byte	CR (0x0D)

(Note3) Data (sixteenth) of intelligent terminal and contents
(the details refer to intelligent input terminal function.)

Data (sixteenth)	Description	Data (sixteenth)	Description
0000000000000001	FW: forward command	000000000100000	STA: 3 wire start
0000000000000002	RV: reverse command	000000000200000	STP: 3 wire holding
0000000000000004	CF1: multi-speed1(binary operation)	000000000400000	F/R: 3 wire forward
0000000000000008	CF2: multi-speed2(binary operation)	000000000800000	PID:PID selection (valid/invalid)
0000000000000010	CF3: multi-speed3(binary operation)	000000001000000	PIDC: PID integral reset
0000000000000020	CF4: multi-speed4(binary operation)	000000002000000	-
0000000000000040	JG: jogging(inching operation)	000000004000000	-
0000000000000080	DB: external DC control	000000008000000	UP: remote operation Accelerating speed
0000000000000100	SET: 2 nd control	000000010000000	DWN: remote operation Decelerate speed
0000000000000200	2CH: two stage adjustable speed	000000020000000	UDC: remote operation data clear
0000000000000400	-	000000040000000	-
0000000000000800	FRS: free-run stop	000000080000000	-
0000000000001000	EXP: external trip	000000100000000	SF1: multi-speed(bit run)
0000000000002000	USP: unattended start protection	000000200000000	SF2: multi-speed(bit run)
0000000000004000	CS: commercial change	000000400000000	SF3: multi-speed(bit run)
0000000000008000	SFT: software lock (control terminal)	000000800000000	SF4: multi-speed(bit run)
0000000000010000	AT: analog input voltage/current select	000001000000000	SF5: multi-speed(bit run)

Example) When you make (forward), (multi-speed1) and (multi-speed2) active on inverter setting of code 01, the calculation of data is

$$0x0000000000000001+0x0000000000000004+0x0000000000000008 = 0x000000000000000D$$

so transmission frame is

(STX)|01|02|000000000000000D|77|(CR)

Reply frame

On normal reply : (4) - (i) Reference

On abnormal reply : (4) - (ii) reference

(iv) 03 command: This reads monitor data collectively.

Transmission frame

Frame format

STX	Code	Command	BCC	CR
-----	------	---------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
Command	Transmission command	2 byte	03
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code (Carriage Return)	1 byte	CR (0x0D)

Replay frame

Frame format

STX	Code	Data	BCC	CR
-----	------	------	-----	----

	Explanation	Data size	Value
STX	Control code (Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
Data	Data	104 byte	(Note4) reference
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code (Carriage Return)	1 byte	CR (0x0D)

(Note4) Each monitor value

Monitor item	Units	Compe t-itive rate	Data size	Explanation	
Output frequency	Hz	x100	8 byte	Tenth ASCII code	Upper bite-----lower bite
Output current	A	x10	8 byte	Tenth ASCII code	
Revolution direction	-	-	8 byte	0: stop, 1: forward, 2:backward	
PID feedback monitor	%	x100	8 byte	Tenth ASCII code	
Intelligent input monitor	-	-	8 byte	*5) reference	
Intelligent output monitor	-	-	8 byte	*6) reference	
Frequency converting monitor	-	x100	8 byte	Tenth ASCII code	
-	-	-	8 byte	00000000 is displayed.(area housed reserve data)	
Output voltage monitor	V	x10	8 byte	Tenth ASCII code	
Electric power monitor	KW	x10	8 byte	Tenth ASCII code	
-	-	-	8 byte	00000000 is displayed.(area housed reserve data)	
RUN time monitor	h	x1	8 byte	Tenth ASCII code	
ON time monitor	h	x1	8 byte	Tenth ASCII code	

(Note5) Intelligent input terminal monitor

Item	Data
Forward terminal	00000001
1 st terminal	00000002
2 nd terminal	00000004
3 rd terminal	00000008
4 th terminal	00000010
5 th terminal	00000020

(Note6) Intelligent output terminal

Item	Data
AL	00000001
1 st terminal	00000002
2 nd terminal	00000004

monitor

(v) 04 command: This reads the state of the inverter.

Transmission frame

Frame format

STX	Code	Command	BCC	CR
-----	------	---------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
Command	Transmission command	2 byte	04
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

Replay frame

Frame format

STX	Code	Data	BCC	CR
-----	------	------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
Data	Data on trip	8 byte	(Note7) reference
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

(Note7)

The data to indicate status contents of inverter is constructed from the following three factors [A), B), C)].

Data	Status A	Status B	Status C	00 (reservation)
------	----------	----------	----------	------------------

Inverter status A)

Code	Status
00	Initial status
01	Vdc on waiting settlement
02	On stopping
03	On running
04	On FRS
05	On JG
06	On DB
07	On reading frequency
08	On retrying
09	On UV
10	On TRIP
11	On waiting reset

Inverter status C)

Code	Status
00	---
01	Stop
02	Deceleration speed
03	Constant speed
04	Acceleration speed
05	Forward
06	Reverse
07	Reverse from forward
08	Forward from reverse
09	Forward start
10	Reverse start

Inverter status B)

Code	Status
00	On stopping
01	On running
02	On tripping

(vi) 05 command: This reads trip history data.

Transmission frame

Frame format

STX	Code	Command	BCC	CR
-----	------	---------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Cord	Station number of inverter	2 byte	01-32
Command	Transmission command	2 byte	05
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)


Replay frame

Frame format:

STX	Code	Data	BCC	CR
-----	------	------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
Data	Each monitor data on trip	440 byte	(Note8) reference
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

(Note8) The monitor data (trip history) on trip memorizes the last six errors with an accumulated count number (8byte).



Monitor item	Units	Magnification	Data size	Notes	
Trip factor	-	-	8byte		Upper
Inverter status A)	-	-	8byte		
Inverter status B)	-	-	8byte		
Inverter status C)	-	-	8byte		
Output frequency	Hz	x10	8byte	Tenth ASCII code	Lower
Accumulated RUN time	hour	x 1	8byte	Tenth ASCII code	
Output current	A	x10	8byte	Tenth ASCII code	
Current voltage	V	x10	8byte	Tenth ASCII code	
Power source ON time	hour	x1	8byte	Tenth ASCII code	

(vii) 06 command: This reads 1 set item.

Transmission frame

Frame format

STX	Code	Command	Parameter	BCC	CR
-----	------	---------	-----------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
Command	Transmission command	2 byte	06
Parameter	Parameter number of data	4 byte	(Note9)
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

(Note9) The range of parameter to get,

F001-, A001-, b001-, C001-, H003-, P001-

Replay frame

Frame format

On normal reply : (4) - (i) Reference

STX	Code	ACK	Data	BCC	CR
-----	------	-----	------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
ACK	Control code(ACKnowledge)	1 byte	ACK (0x06)
Data	Data (tenth ASCII code)	8 byte	(Note10)
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

(Note10) when data is the selected item, this transmits and receives corresponding to station number.

On abnormal reply : (4) - (ii) reference

(viii) 07 command: This sets 1 set item.

Transmission frame

Frame format

STX	Code	Command	Parameter	Data	BCC	CR
-----	------	---------	-----------	------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32, FF(all code communication)
Command	Transmission command	2 byte	07
Parameter	Parameter number of data	4 byte	(Note9)
Data	Data of parameter(Tenth ASCII code)	8 byte	(Note10)
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

Reply frame

On normal reply : (4) - (i) Reference

On abnormal reply : (4) - (ii) reference

(ix) 08 command: This returns each set value to initial value.

This works in conjunction with initial selection (b084). If b084 is 00, the trip history is cleared.

Transmission frame

Frame format

STX	Code	Command	BCC	CR
-----	------	---------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Cord	Station number of inverter	2 byte	01-32, FF(all code communication)
Command	Transmission command	2 byte	08
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

Replay frame

On normal reply : (4) - (i) Reference

On abnormal reply : (4) - (ii) reference

(x) 09 command: This checks whether it is possible to store set value to EEPROM or not.

Transmission frame

Frame format

STX	Code	Command	BCC	CR
-----	------	---------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
Command	Transmission command	2 byte	09
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

Transmission frame

Frame format

STX	Code	ACK	Data	BCC	CR
-----	------	-----	------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
ACK	Control code(ACKnowledge)	1 byte	ACK (0x06)
Data	Data	2 byte	Allowance with 01
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

On normal reply : (4) - (i) Reference

(xi) 0A command: This stores the set value to the EEPROM.

Transmission frame

Frame format

STX	Code	Command	BCC	CR
-----	------	---------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
Command	Transmission command	2 byte	0A
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

Replay frame

On normal reply: (4) - (i) Reference

On abnormal reply: (4) - (ii) Reference

(xii) 0B command: This recalculates the internal motor constants.

This function is required when the motor capacity or the number of motor poles is changed by RS485 communication.

Transmission frame

Frame format

STX	Code	Command	BCC	CR
-----	------	---------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
Command	Transmission command	2 byte	0B
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

Reply frame

On normal reply : (4) - (i) Reference

On abnormal reply : (4) - (ii) reference

(i) Affirmative reply

Reply frame

Frame format

STX	Code	ACK	BCC	CR
-----	------	-----	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
ACK	Control code(ACKnowledge)	1 byte	ACK(0x06)
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code(Carriage Return)	1 byte	CR (0x0D)

(ii) 01Inverter reply

Reply frame

Frame format

STX	Code	NAK	Error code	BCC	CR
-----	------	-----	------------	-----	----

	Explanation	Data size	Value
STX	Control code(Start of TeXt)	1 byte	STX (0x02)
Code	Station number of inverter	2 byte	01-32
NAK	Control code (Negative ACKnowledge)	1 byte	ACK(0x06)
Error code	Error contents of Communication	2 byte	(Note11)
BCC	Block check code	2 byte	Exclusive OR of Code, Command and Data (5) Reference
CR	Control code (Carriage Return)	1 byte	CR (0x0D)

Error code	Contents
01H	Parity error
02H	Sum check error
03H	Fleming error
04H	Overrun error
05H	Protocol error
06H	ASCII code error
07H	Reception buffer overrun error
08H	Reception time out error
-	-
-	-
11H	Error for abnormal command
12H	-
13H	Practice disapproval error
14H	-
15H	-
16H	Parameter abnormal error
17H	-



Explanation of Function

(Note11) Error code list

Inverter doesn't reply on all code communication.

4.4 Protection function list

4.4.1 Protection function

Name	Description	Display of digital panel digital operator	Display of remote operator/ Copy unit [ERR1***]
Over-current protection	Motor is restricted and decelerates rapidly, excessive current is drawn through the inverter and there is a risk of damage. Current protection circuit operates and the inverter output is switched off.	At constant Speed	[E01] [OC. Drive]
		On deceleration speed	[E02] [OC. Drive]
		On acceleration speed	[E03] [OC. Acce1]
Overload protection (note1)	When the Inverter detects an overload in the motor, the internal electronic thermal overload operates and the inverter output is switched off.	[E05]	[Over. L]
Braking resistor overload protection	When BRD exceeds the usage ratio of the regenerative braking resistor, the over-voltage circuit operates and the inverter output is switched off.	[E06]	[OL. BRD]
Over-voltage protection	When regenerative energy from the motor exceeds the maximum level, the over-voltage circuit operates and the inverter output is switched off.	[E07]	[Over. L]
EEPROM error (note2)	When EEPROM in the inverter is subject to radiated noise or unusual temperature rises, the inverter output is switched off.	[E08]	[EEPROM]
Under-voltage	When the incoming voltage of inverter is low, the control circuit can't operate correctly. The under-voltage circuit operates and the inverter output is switched off.	[E09]	[Under. V]
CT error	When an abnormality occurs to a CT (current detector) in the inverter, the inverter output is switched off.	[E10]	[CT]
CPU error	When a mistaken action causes an error to the inbuilt CPU, the inverter output is switched off.	[E11]	[CPU1]
External trip	When a signal is given to the EXT intelligent input terminal, the inverter output is switched off. (on external trip function select)	[E12]	[EXTERNAL]
USP error	This is the error displayed when the inverter power is restored while still in the RUN mode. (Valid when the USP function is selected)	[E13]	[USP]
Ground fault protection	When power is turned ON, this detects ground faults between the inverter output and the motor.	[E14]	[GND. F1t]
Incoming over-voltage protection	When the incoming voltage is higher than the specification value, this detects it for 100 seconds then the over-voltage circuit operates and the inverter output is switched off.	[E15]	[OV. SRC]
Temporary power loss protection	When an instantaneous power failure occurs for more than 15ms, the inverter output is switched off. Once the instantaneous power failure wait time has elapsed and the power has not been restored it is regarded as a normal power failure. However, when the operation command is still ON with restart selection the inverter will restart. So please be careful of this.	[E16]	[Inst. P-F]
Abnormal temperature	When main circuit temperature raises by stopping of cooling fan, the inverter output is switched off.	[E21]	[OH. FIN]
Open-phase protection	When an open-phase on the input supply occurs the inverter output is switched off.	[E24]	[PH. Fail]
IGBT error	When an instantaneous over-current is detected on the output the inverter output is switched off to protect the main devices.	[E30]	[IGBT]
Thermistor error	When the Inverter detects a high resistance on the thermistor input from the motor the inverter output is switched off.	[E35]	[TH]
During under-voltage waiting	When the incoming voltage of the inverter has dropped, the inverter output is switched off and the inverter waits.	[--U]	[UV. WAIT]


Note1: After a trip occurs and 10 minutes pass, restart with reset operation.

Note2▶▶ When EEPROM error

occurs, confirm the setting data again.

[E08]

4.4.2 Trip monitor display

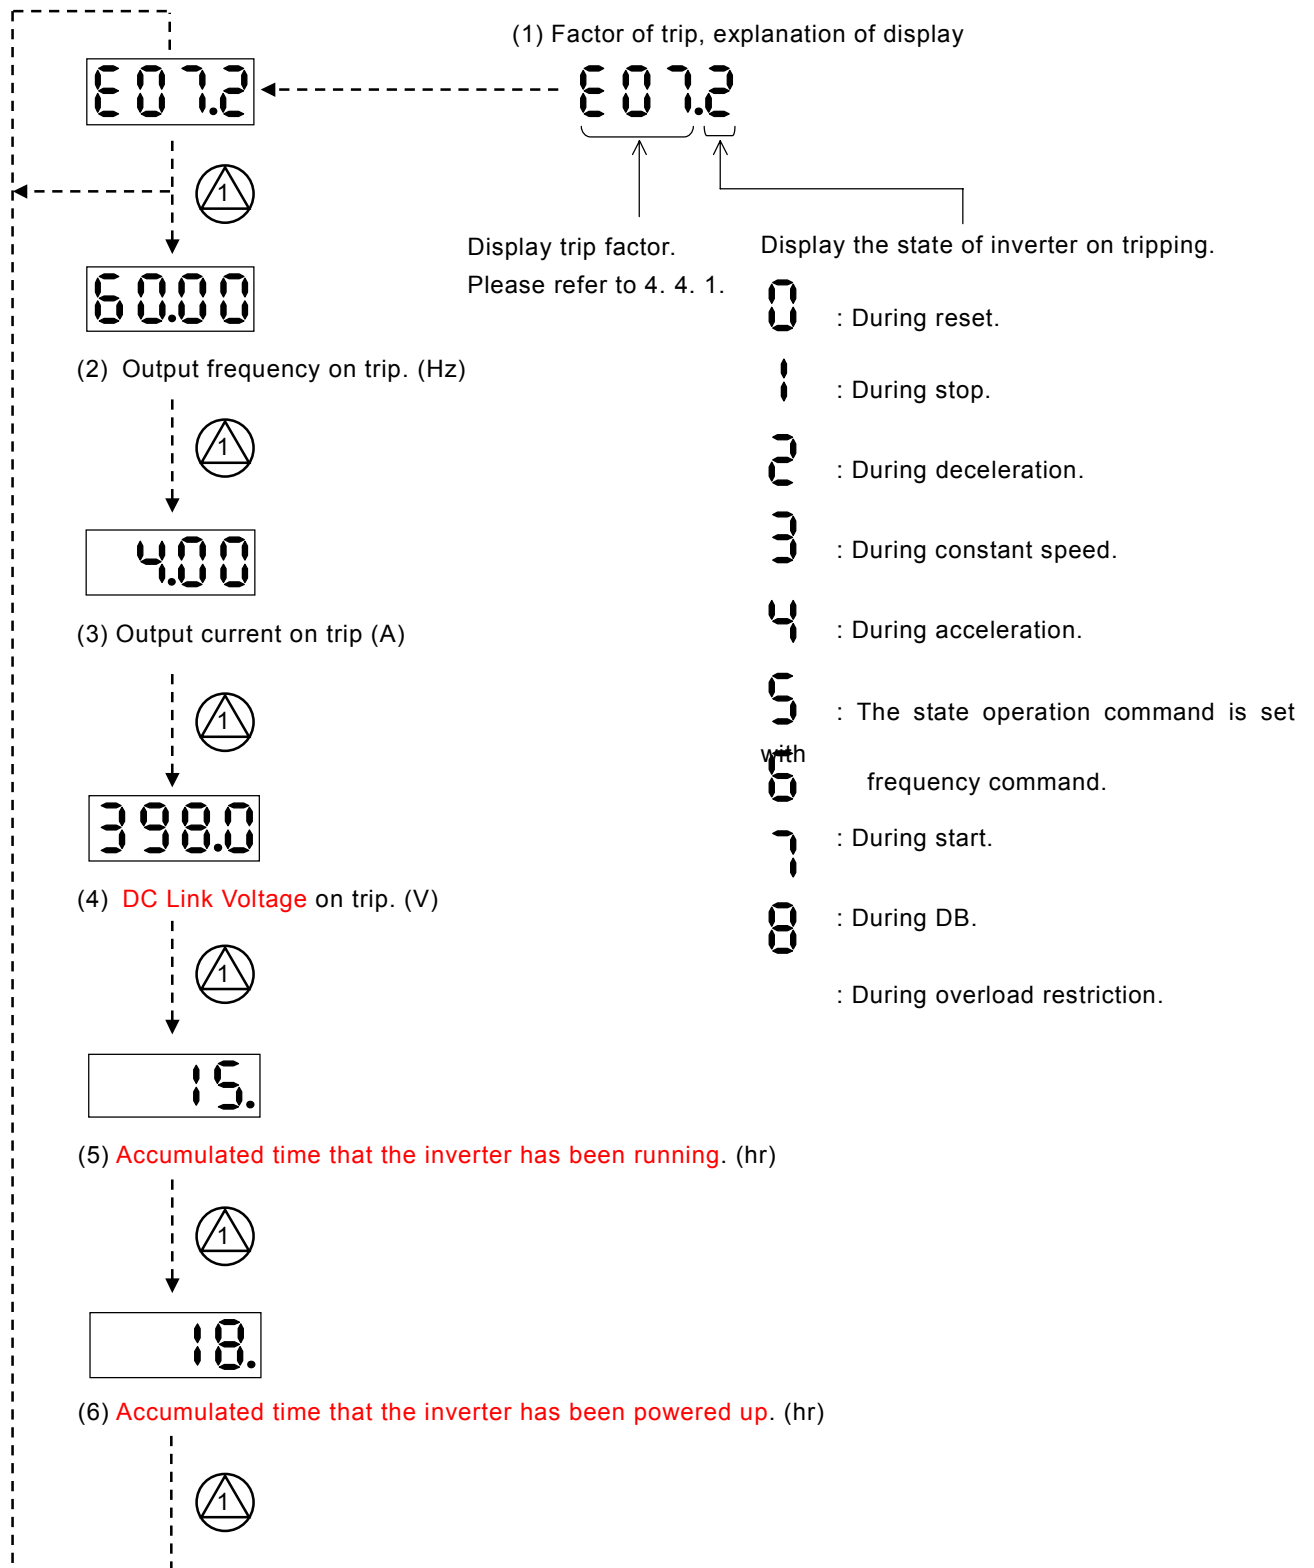

4.4.3 Warning Monitor display

Relation code
d090 : Warning Monitor

Warning messages will appear when the data set is contradicting to others.

Program lamp (PRG) turns ON during the warning (until the data is changed).

Below is the description of the warnings.

Warning	Codes	<, >	Basic code
001/201	frequency upper limiter A061/A261	>	Maximum frequency A004/A204
002/202	frequency lower limiter A062/A262	>	
004/204	Base frequency A003/A203	>	
005/205	Output frequency F001, Multi stage speed 0 A020/A220	>	
006/206	Multi stage speed 1~15 A021~A035	>	
012/212	frequency upper limiter A062/A262	>	
015/215	Output frequency F001, Multi stage speed 0 A020/A220	>	
016/216	Multi stage speed 1~15 A021~A035	>	
021/221	frequency upper limiter A061/A261	<	frequency lower limiter A062/A262
025/225	Output frequency F001, Multi stage speed 0 A020/A220	<	
031/231	frequency upper limiter A061/A261	<	Starting frequency b082
032/232	frequency lower limiter A062/A262	<	
035/235	Output frequency F001, Multi stage speed 0 A020/A220	<	
036	Multi stage speed 1~15 A021~A035	<	
037	Jogging frequency A038	<	
085/285	Output frequency F001, Multi stage speed 0 A020/A220	<>	Jump frequency 1/2/3 +- Jump width A063+-A064 A065+-A066 A067+-A068 (note 1)
086	Multi stage speed 1~15 A021~A035	<>	
091/291	frequency upper limiter A061/A261	>	Free v/f frequency 7 b112
092/292	frequency lower limiter A062/A262	>	
095/295	Output frequency F001, Multi stage speed 0 A020/A220	>	
096	Multi stage speed 1~15 A021~A035	>	
110	Free v/f frequency 1~6 b100, b102, b104, b106, b108, b110	>	Free v/f frequency 1 b100
	Free v/f frequency 2~6 b102, b104, b106, b108, b110	<	
	Free v/f frequency 1 b100	>	Free v/f frequency 2 b102
	Free v/f frequency 3~6 b104, b106, b108, b110	<	
	Free v/f frequency 1, 2 b100, b102	>	Free v/f frequency 3 b104
	Free v/f frequency 4~6 b106, b108, b110	<	
	Free v/f frequency 1~3 b100, b102, b104	>	Free v/f frequency 4 b106
	Free v/f frequency 5, 6 b108~b110	<	
	Free v/f frequency 1~4 b100, b102, b104, b106	>	Free v/f frequency 5 b108
	Free v/f frequency 6 b110	<	
	Free v/f frequency 1~5 b100, b102, b104, b106, b108	>	Free v/f frequency 6 b110
	120	Free electronic thermal frequency 2, 3 b017, b019	<
Free electronic thermal frequency 1 b015		>	Free electronic thermal frequency 2 b017
Free electronic thermal frequency 3 b019		<	
Free electronic thermal frequency 1, 2 b015, b017		>	Free electronic thermal frequency 3 b019

Warning is cleared when the setting fulfils the above condition.

Data will be changed automatically to the basic code.

(Note 1) The jump frequency will be automatically re-written to the lowest jump frequency (= Jump frequency - jump width)

5.1 Precautions for Maintenance/Inspection

5.1.1 Daily inspection

Every day before operation check the following;

- [1] Does the motor operate according to the settings?
- [2] Is there any trouble with the surroundings of the installation?
- [3] Is there any trouble with the cooling or ventilation system?
- [4] Is there any abnormal vibration or sound?
- [5] Are there any signs of over-current or discoloration?
- [6] Is there any unusual odour present?

Check the input voltage to the inverter by using a meter during running

- [1] Is the supply voltage constant?
- [2] Are all the phases of the supply balanced?

5.1.2 Cleaning

Make sure that the inverter is not dirty when operating.
Wipe clean with a soft cloth and synthetic detergent or ethanol.

(Notes) Don't use solvents containing any of the following, acetone, benzene, toluene, alcohol etc. as they can cause melting of the inverter surface, peeling of paint.
Never clean the display part of the digital operator with detergent or alcohol.

5.1.3 Regular inspection

Inspections should be regularly carried out on the parts that can't be inspected while the inverter is running.

- [1] Is there any trouble with the cooling system? - - - Cleaning of air filter etc.
- [2] Check that all screw terminals and fixings are tight as they may loosen due to vibration or temperature change etc.
- [3] Is there any corrosion, damage to insulators?
- [4] Measurement of insulation resistance.
- [5] Check of cooling fan, smoothing capacitor, relay and exchange if necessary.

5.2 Daily inspection and regular inspection

Inspection Parts	Inspection item	Inspection item	Inspection cycle		Inspection methods	Decision standard	Meter	
			Daily	Regular				
				1				2
Whole	Surroundings	Check temperature of surrounding, humidity, dust.	<input type="radio"/>			Refer to 2.1 Installing.	Temperature range is between -10 and 40 degrees. No dew present and humidity is below 90%.	Thermometer, hygrometer, recorder
	Whole equipment	Is there abnormal vibration, abnormal sound?	<input type="radio"/>			By watching, hearing.	No trouble.	
	Power voltage	Is main circuit voltage normal?	<input type="radio"/>			Measurement of inverter terminal R, S, T phase voltage	Within alternating voltage allowable change.	Tester, digital multi-meter
Main circuit	Whole	(1)Megger check Between circuit terminal and earth terminal (2)Are all screws terminals tight? (3)Is there any sign of over-voltage? (4)cleaning	<input type="radio"/>	<input type="radio"/>		(1)After you remove connector J61 from inside the inverter Take out the wiring of input/output of inverter main circuit terminal and control terminal, measure between parts shortened terminal R,S,T,U, V,W,P,PD,N,RB and earth terminal with megger. (2)Incremental clamping. (3)Watch.	(1)To be over 5M ohm. (2)(3) No abnormality .	DC500V class megger
	Connection conductor/ electric line	(1)Is there warp in conductor? (2)Is there any damage of coating of wires?	<input type="radio"/>	<input type="radio"/>		(1)(2) By watching	(1)(2) No abnormality	
	Terminals	Is there any damage?			<input type="radio"/>	By watching.	No abnormality.	
	Inverter parts Converter parts	Resistance check Between each Terminal.	<input type="radio"/>	<input type="radio"/>		Take out connect of inverter, measure terminal between R,S,T and P,N, between U,V,W and P,N with tester x 1 ohm range.	Refer to check method of 5.5 inverter, converter parts.	Analog form tester
	Smoothing capacitor	(1)Is there any liquid? (2)Does relief valve come out? Is there any swell? (3)Measure of allowable static-electricity.	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	(1),(2) By watching. (3)Measure with capacity measure.	(1),(2) No abnormality (3) Over 80% of rated capacity.	Capacity meter
	Relay	(1)Is there abnormal sound in operation? (2)Is there damage to the contacts?	<input type="radio"/>	<input type="radio"/>		(1)By hearing (2)By watching	(1) No abnormality (2) No abnormality	
	Resistor	(1)Is there any crack, discoloration of resistance insulator. (2)Confirm existence of breaking of wire.	<input type="radio"/>	<input type="radio"/>		(1)By watching.cementing resistance. Curl type resistance. Take out connection to other side, measure it with tester.	(1)No abnormality Error to be within 10% of Display resistance.	Tester Digital multi-meter
	Control circuit Protection circuit	Operation check (1)Confirm balance of each output phase voltage with inverter single operation. (2)Operate sequence protection moving test. And no abnormality.	<input type="radio"/>	<input type="radio"/>		(1)Measure inverter output terminal U,V,W phase voltage. (2)Short or open protection circuit output of inverter.	(1)Phase voltage balance 200v/400v class is within 4V/8V. (2)On sequence, to operate abnormality.	Digital multi-meter, rectification type voltmeter
Cooling system	Cooling fan (1)Is there abnormal vibration, abnormal sound? (2)Is there loosening of connecting parts?	<input type="radio"/>	<input type="radio"/>		(1)Revolve by hands in the state of tone-on idle. (2) By watching.	(1)Revolving smooth. (2)No abnormality.		
Display	Display	(1)Is the LED lamp illuminated? (2) Cleaning.	<input type="radio"/>	<input type="radio"/>		(1)Lamp indicates lamp on operator. (2) Cleaning with cloth.	(1)Confirm light.	
	Meter	Is direction value Normal?	<input type="radio"/>	<input type="radio"/>		Confirm indication value of board meter.	Satisfy normal value, control value.	Voltage meter, current meter
Motor	Whole	(1)Is there abnormal signal,abnormal sound? (2)Is there any abnormal odour?	<input type="radio"/>	<input type="radio"/>		(1)By hearing, feeling, watching. (2)Abnormal odour from overheat, damage etc. Confirmation.	(1)(2) No abnormality.	



Maintenance, Inspection

	Insulated resistance	(1)Megger check (terminal collection - earth terminal)			Remove connection to U,V and W and disconnect motor wiring.	(1) To be over 5M ohm.	DC 500V Megger
--	----------------------	--	--	--	---	------------------------	----------------

(Notes) Life time of the capacitors depends on the ambient temperature.

5.3 Megger test


When executing a Megger test on the inverter remove all wires to R, S, T, PD, P, N, RB, U, V and W.

Do not use a megger or buzzer on the control circuit only use a digital multi-meter.

(Megger Voltage 500V DC)

Execute megger test of main circuit after the J61 connector has been removed. Short terminals of R, S, T, PD, P, N, RB, U, V and W.

After the Megger test is complete, reconnect the J61 connector as before.

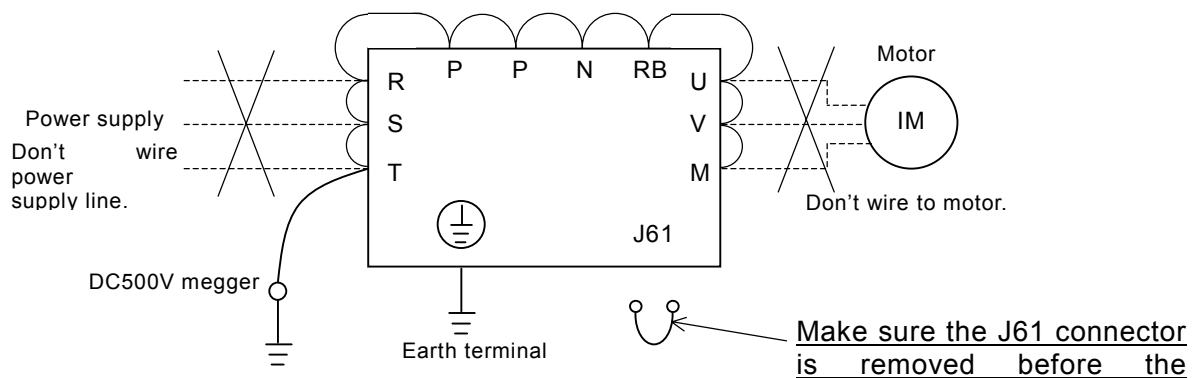

5.4 Withstand Voltage test

Never perform a withstand voltage test on the inverter.

The inverter main circuit uses semiconductors. Semiconductors can deteriorate when a withstand voltage test is performed.

5.5 The method to check Inverter, converter part

A test is possible to check quality.

(Preparation)

[1] Take out the power lines (R, S and T) connected to the inverter, the motor connection lines (U, V and W) and the regenerative control resistance (P and RB).

[2] Prepare tester. (Using range of 1 ohm resistance measure range.)

(How to check)

It is possible to check the quality of the charging state of the terminals R, S, T, U, V, W, RB, P and N of the inverter and the pole of the tester by measuring the charging state.


(Note1) Before you measure the voltage between P and N with DC current range, confirm that the smoothing capacitor is discharged fully, execute checks.

(Note2) Almost infinite value is indicated on no conducting.

With the effect of the smoothing capacitor, the inverter conducts instantly and an infinite value isn't indicated. Ohm-number 10 ohms is indicated on conducting.

The values indicated will not be exactly the same for each terminal, however they will be very close together. If there is a significant difference a problem may exist.


		Pole of tester		Measure value
		⊕ (Red)	⊖ (Black)	
Converter	D1	R	PD	No-conduct
		PD	R	Conduct
	D2	S	PD	No-conduct
		PD	S	Conduct
	D3	T	PD	No-conduct
		PD	T	Conduct
D4	R	N	Conduct	
	N	R	No-conduct	
D5	S	N	Conduct	
	N	S	No-conduct	
D6	T	N	Conduct	
	N	T	No-conduct	
Inverter	TR1	U	P	No-conduct
		P	U	Conduct
	TR2	V	P	No-conduct
		P	V	Conduct
	TR3	W	P	No-conduct
		P	W	Conduct
	TR4	U	N	Conduct
		N	U	No-conduct
	TR5	V	N	Conduct
		N	V	No-conduct
	TR6	W	N	Conduct
		N	W	No-conduct
RR part	TR7	RB	P	No-conduct
		P	RB	Conduct
		RB	N	No-conduct
		N	RB	No-conduct

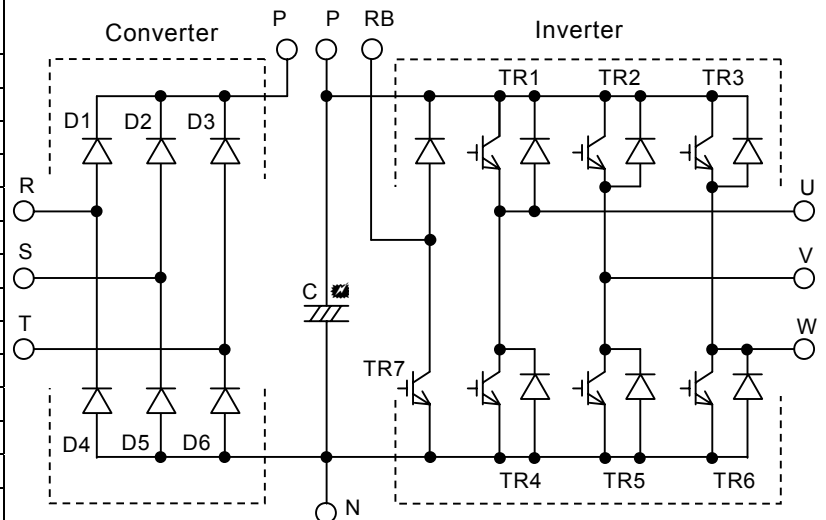



Maintenance, Inspection

5.6 Capacitor Life Curve

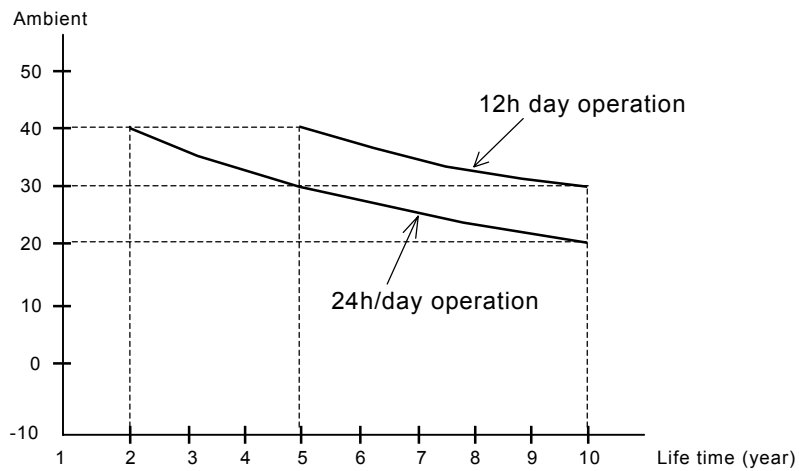

(Note1)

Ambient temperature means the surrounding temperature of the inverter. In case the inverter is installed in a cabinet, ambient temperature is the temperature of the internal air of the cabinet.

(Note2)

DC bus capacitors are recommended to be replaced every 5 years. And if the inverter is used in a worse condition, this recommended replacing period is reduced.

6.1 Standard specification list

		200V class								400V class							
Inverter Model		L3000-110LFR	L3000-150LFR	L3000-185LFR	L3000-220LFR	L3000-300LFR	L3000-370LFR	L3000-450LFR	L3000-550LFR	L3000-110HFR	L3000-150HFR	L3000-185HFR	L3000-220HFR	L3000-300HFR	L3000-370HFR	L3000-450HFR	L3000-550HFR
Protection structure (note1)		IP20(NEMA1)															
Max. Applicable Motor 4P (kW) (note2)		11	15	18.5	22	30	37	45	55	11	15	18.5	22	30	37	45	55
Rated input Alternating voltage(kV A)	200 V/40 0V	15.2	20.0	25.2	29.4	39.1	48.4	58.5	72.7	15.2	20.0	25.6	29.7	39.4	48.4	58.8	72.7
	240 V/48 0V	18.2	24.1	30.3	35.3	46.9	58.1	70.2	87.2	18.2	24.1	30.7	35.7	47.3	58.1	70.1	87.2
Rated alternating input voltage		Three-phase 200-240V (+-10%) 50Hz/60Hz								Three-phase 380-480V (+-10%) 50Hz/60Hz							
Rated output voltage (note3)		Three-phase 200-240V (This corresponds to receiving voltage.)								Three-phase 380-480V (This corresponds to receiving voltage.)							
Rated output current (A)		44	58	73	85	113	140	169	210	22	29	37	43	57	70	85	105
Control system		Sine-wave modulation PWM system.															
Output frequency range (note4)		0.1-400Hz															
Frequency accuracy		Digital command +/-0.01% for Max. frequency, analog frequency +/-0.2%(25+-10C)															
Frequency resolving power		Digital setting: 0.01Hz, analog setting:Max. frequency /4000															
Voltage/frequency characteristic		V/f option variable, V/f control, (constant torque, reduced torque)															
Overload current rate		120% for 60 seconds, 150% for 0.5second															
Acceleration/ deceleration time		0.01-3.600seconds (straight or S-Curve on acceleration, deceleration is optional setting individually), 2 nd adjustable setting is possible.															
Control	Regenerative Control (short duration) (note5)	BRD circuit built-in (Discharge resistance is Regenerative unit is required.)								BRD circuit built-in (Discharge resistance is Regenerative unit is required.)							
	DC Braking	On starting and decelerating by stop command, inverter operates under operation setting frequency. Or inverter operates with external input (Breaking power, time, frequency can be set.)															
Input signal	Frequency	Operat or	Setting by   keys														
		Volume	Setting with potentiometer on the digital operator (Built-in as standard) (Analog setting)														
		External Signal	DC 0 to 5V, -5 to +5V, 0 to 10V, -10 to +10V (input impedance 10k ohm), 4-20mA (input impedance 100 ohm)														
	Run/ Stop	External port	Setting with RS485 communication														
		Operat or	Run/Stop (forward changes with code)														
		External signal	Forward Run/Stop (1a connect), reverse command is impossible on assigning of terminal (selection of 1a, 1b is possible), input of 3 wires is possible.														
	Intelligent input terminal	External port	Setting with RS485.														
Output	Intelligent output terminal	Use by selecting terminals from; Reverse command (RV), multi-speed1-4 (CF1-CF4), jogging (JG), external dc braking (DB), 2 nd control (SET), 2 nd acceleration (2CH), free-run stop (FRS), external trip (EXT), USP function (USP), commercial change (CS), software lock (SFT), analog input voltage / current / select (AT), reset inverter (RS), 3 wire run (STA) 3 wire keep (STP), 3 wire direction selection (F/R), PID selection valid/invalid (PID), PID integrating reset (PIDC), remote control, up function (UP), remote control down function (DWN), remote control data clear (UDC), multi-speed bit 1-7(SF1-SF7), overload restriction change (OLR), no assign (NO)															
	Thermistor input terminal	1 terminal															
	Intelligent output terminal	2 relay outputs (1a contact), relay(1c contact), output relay selection as follows; (selection from during running, on arrival with constant speed, over setting frequency, PID over-deviation)															
	Intelligent monitor output terminal	Analog voltage output, analog current output, pulse line output															
Display monitor		Output frequency, output current, frequency conversion value, trip history, input output terminal state, input electric power, output voltage.															
Other function		V/f free setting (5 points), Upper / lower frequency limiter, Frequency jump, Curve adjustable speed, Manual torque boost level / Braking point, Analog meter adjustment, Starting frequency, Carrier frequency adjustment, Electronic thermal free setting, External start/end (frequency/rate), Analog input selection, Trip retry, Reduced voltage start, Overload restriction															
Carrier frequency range		0.5-15 kHz															
Protection function		Over-current, over-voltage, under-voltage, electronic thermal level, abnormal trouble, ground fault current on starting, instantaneous stop, USP error, open-phase error, control resistor overload, CT error, external trip, communication error															
Usage surroundings	Frequency temperature /Preservation temperature (note6) /humidity	-10 to 40 degrees (note7) / -20 to 65 degrees / 25 to 90% RH (installed with no dew condensation)															
	Vibration (note7)	5.9m ² / S (0.6G), 10-55Hz															
	Using place	Under 1,000m above sea level, indoors (installed away from corrosive gasses, dust)(note8)															
Paint color		Blue (D.I.C14 version No.436)															

Options	Remote operator, copy unit, cable for each operator, braking resistor, regenerative control unit, alternating reactor, D.C. reactor, EMC Mains filter, higher harmonic control unit, LCR filter, applied control installation															
Remote operator	OPE-SR, cable for remote operation ICS-1(1m), ICS3(3m)															
Schematic mass (kg)	5	5	12	12	12	20	30	30	5	5	12	12	12	20	30	30

(note1) Protective system bases on JME1030.

(note2) Applicable motor indicates WATT three-phase motor. When you use other motor, set so that the motor current doesn't exceed the rated current of the inverter.

(note3) Output voltage will reduce when the power voltage is reduced. (Except when AVR function is selected.)

(note4) When you operate motor over 50/60Hz, inquire about the allowable max.revolution time of motor etc. from motor manufacturer.

(note5) Braking resistance isn't installed in the inverter. When the inverter requires a high regenerative torque, use optional braking resistance and regenerative braking unit.


(note6) Protective temperature is temperature during transportation.

(note7) This bases on the test methods of JIS C0911(1984).


(note8) When the inverter is used in a place with dust, **we commend vanish coating specification. Before require it.**

6.2 Dimension


L3000-110,150LFR/HFR

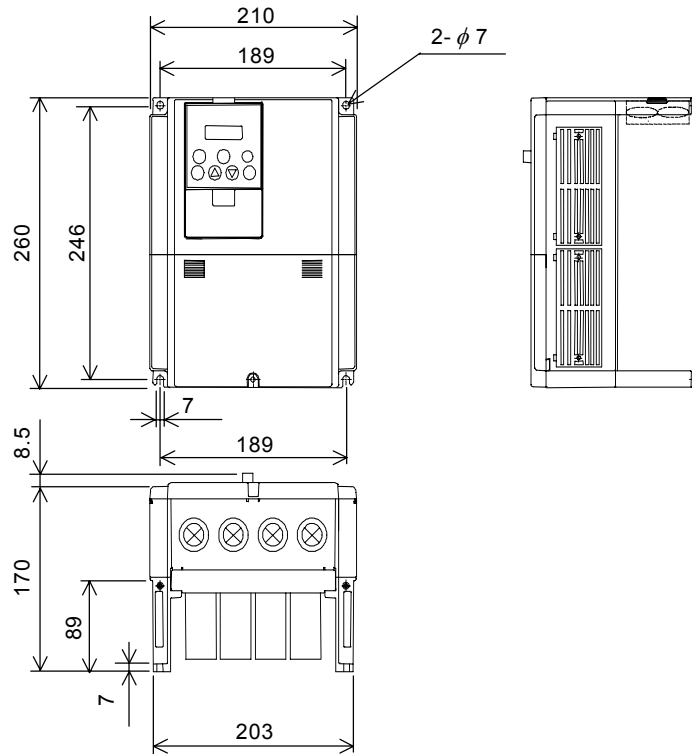

L3000-185-300LFR/HFR

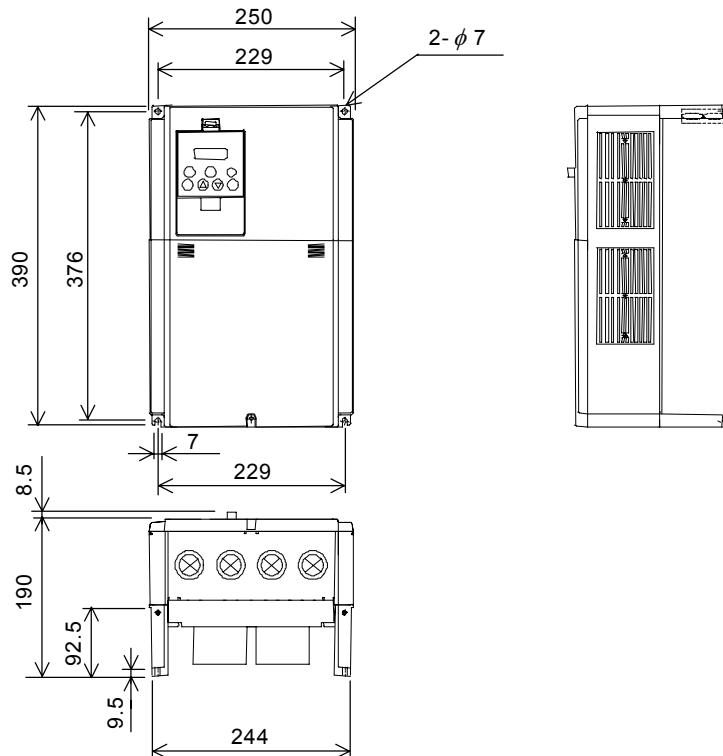

L3000-370LFR/HFR

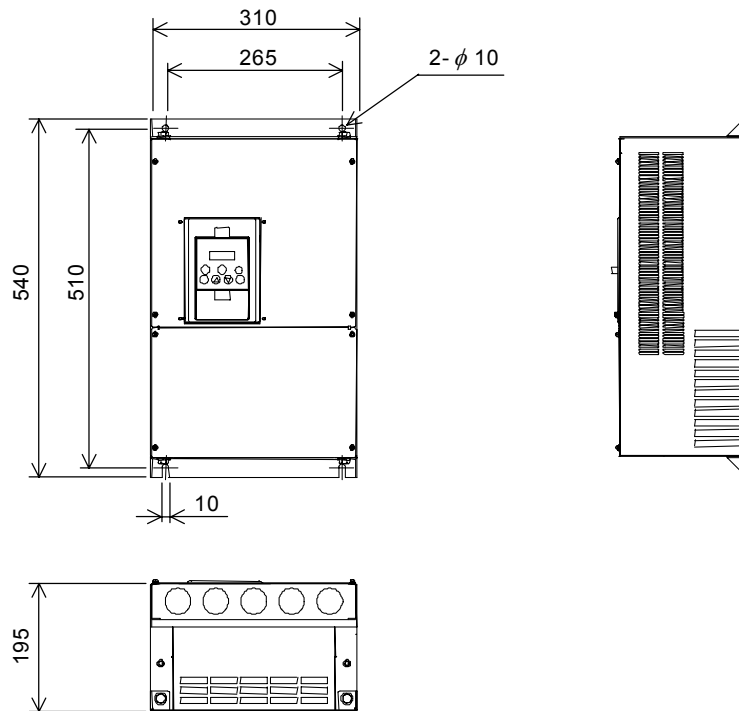

L3000-450,550LFR/HFR

